


COLOR 'N CONTRAST™


Deluxe Musical Busy Box®

To Attach to Crib (or Wooden Playpen):

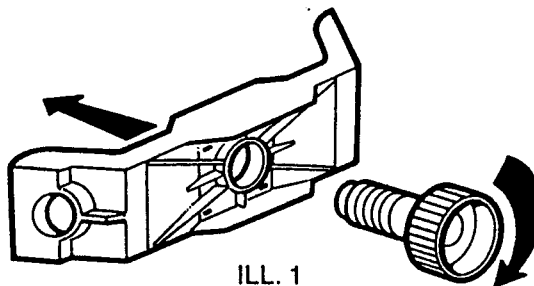


ILL. 1

STEP 1: Remove attachment bracket assembly from package. Insert screw through hole in center of attachment bracket. (ILL. 1)

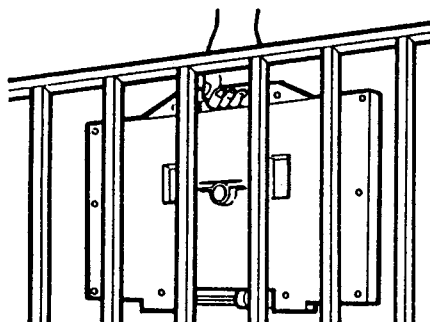


ILL. 2

STEP 2: Hold Musical Busy Box® inside of playpen or crib, with its back against crib bars at desired height. (ILL. 2)

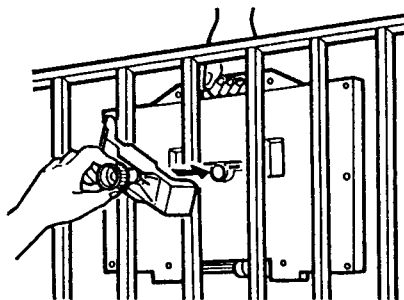


ILL. 3a

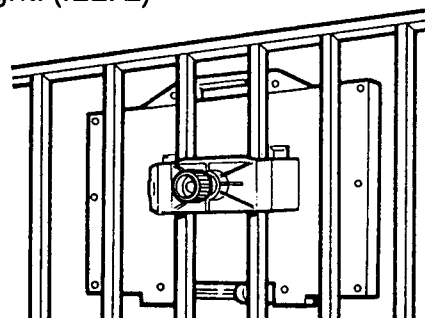

ILL. 3b


STEP 3: Holding screw and bracket together, position bracket from outside of crib to encompass two crib bars. Tighten screw securely into hole in center of Musical Busy Box®. (ILL. 3a, 3b)

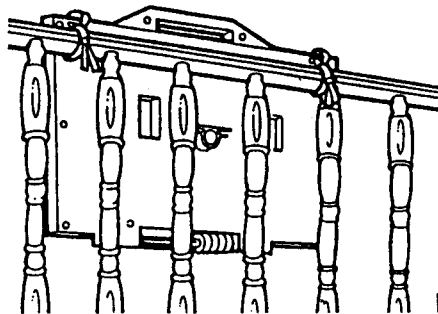

ILL. 4

NOTE: On some cribs, the bars may be too wide or too narrow to work with the attachment bracket. If this is the case for your crib, attach Musical Busy Box® as follows:


Lace strong cords (not included) through holes in top corners of Musical Busy Box®. Tie cords securely to top rail of crib. (ILL. 4)

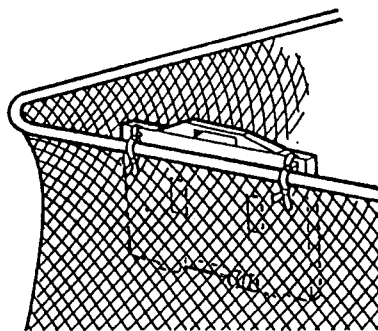

ILL. 5

To Attach to Nylon Mesh Playpens:

Lace strong cords (not included) through holes in top corners. Tie cords to top playpen rail. (ILL. 5)

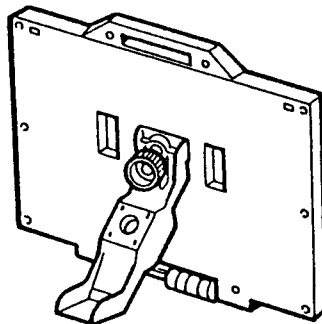

ILL. 6

For a Free-standing Deluxe Musical Busy Box®:

Line up end hole in bracket with hole in center back of Musical Busy Box®. Fasten with screw, turning it until the activity box stands securely in an upright position. (ILL. 6)