

# MUSICAL GLO WORM<sup>®</sup> Instructions




Note: This toy was designed with your child's safety in mind. MUSICAL GLO WORM has a child-proof battery pack that must be removed and installed by an adult. Please be aware of this and follow the directions carefully.

MUSICAL GLO WORM plays a sweet lullabye when chest area (second shirt button) is lightly pressed. To stop music from playing during the night, simply remove MUSICAL GLO WORM'S shirt before tucking him and your child into bed.


## How to remove battery pack for battery installation and washing:

1. Undo the closure on the back of the nightshirt and remove it from Musical Glo Worm.
2. Unzip the back of MUSICAL GLO WORM to remove battery pack.
3. Grasp onto the battery pack and twist 1/4 turn in a counterclockwise direction (ILL. 1). Push the battery pack down towards MUSICAL GLO WORM'S tail until the round tip of the pack clears her head (ILL. 2). You may have to bend the head slightly forward. Lift the battery pack out of MUSICAL GLO WORM completely.

ILL. 1

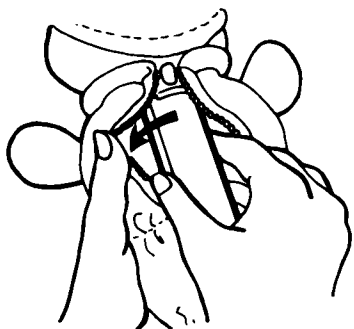


ILL. 2

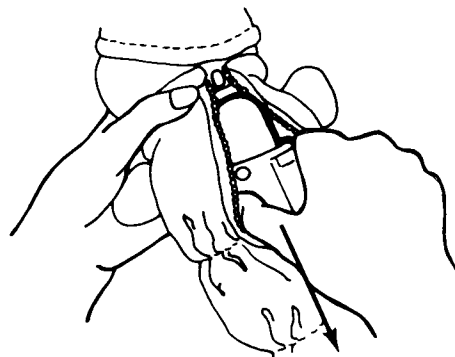

4. Remove the screw located near the tip of the pack with a phillips head screwdriver. Should you lose the screw, a 4 mm screw may be substituted. These may be purchased in most hardware stores.


5. Insert a small coin (such as a dime) into the slot on the tip of the battery pack to separate it into two halves (ILL. 3).

ILL. 3

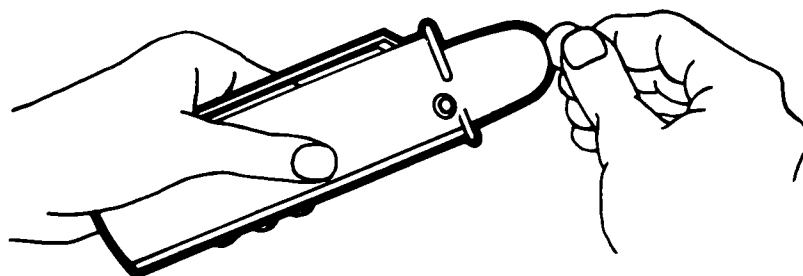

6. Place two "C" size batteries in the bottom half of the pack as shown (ILL. 4). A light bulb is included with MUSICAL GLO WORM; should it need replacing, use a PR-4 or equivalent.


ILL. 4

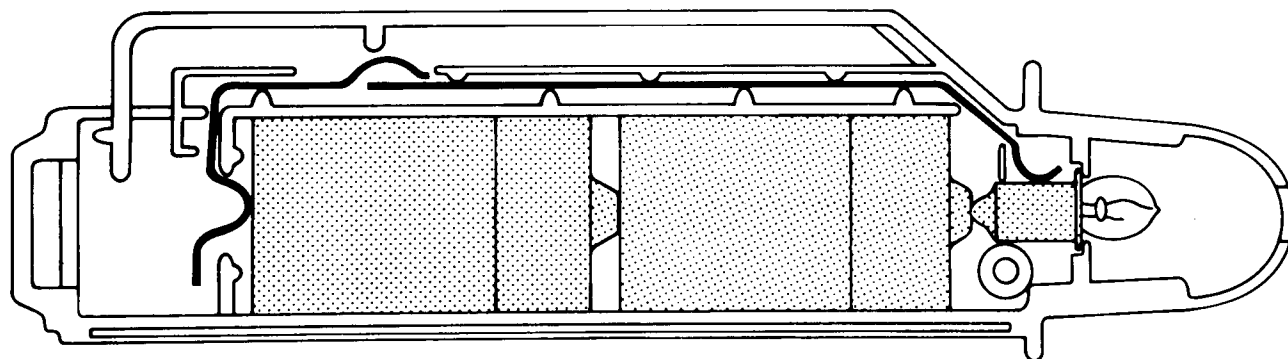


**BOTTOM HALF**

7. To put back together: Insert tab into slot as shown in ILL. 5a. Close the battery pack as shown in ILL. 5b. Replace the screw to secure battery pack.

ILL. 5a

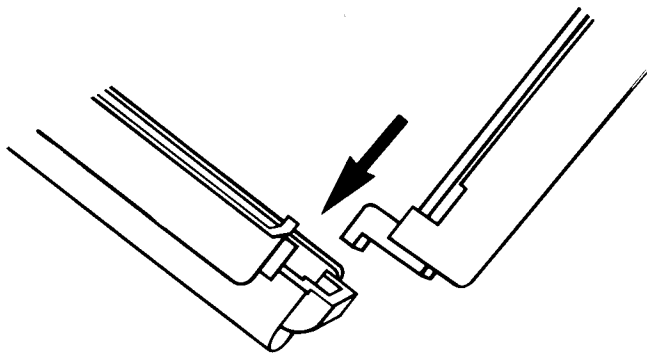


ILL. 5b

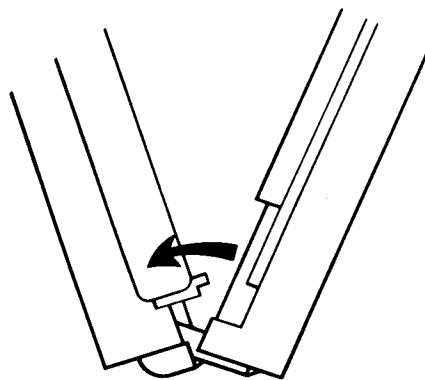

8. Position the battery pack over the back of MUSICAL GLO WORM with the tip of the battery pack pointing toward MUSICAL GLO WORM'S head and with the lever to your right as shown (ILL. 6). Push the battery pack down into the pocket until the tip of the box clears MUSICAL GLO WORM'S head. You may have to bend the head slightly forward.

ILL. 6

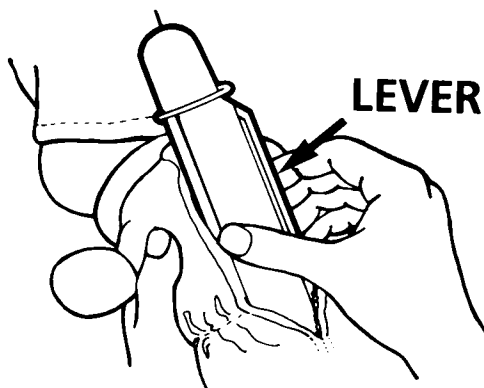

9. Push the tip of the battery pack into the inner head portion of MUSICAL GLO WORM. Twist the pack a 1/4 turn in a clockwise direction to lock the battery pack firmly inside MUSICAL GLO WORM. Make sure the pack is locked firmly in place and the lining inside MUSICAL GLO WORM does not get caught between the battery pack and the inner portion of MUSICAL GLO WORM'S head.

10. Zip the back of MUSICAL GLO WORM closed. Be careful not to catch any material in the zipper. Press tummy to make sure head glows brightly.

11. Replace Musical Glo Worm's nightshirt.

## Washing Instructions:

**CAUTION: DO NOT WASH MUSICAL GLO WORM WITH BATTERY PACK INSIDE.**

1. Unzip MUSICAL GLO WORM and remove the child proof battery pack.
2. Zip up MUSICAL GLO WORM. Wash MUSICAL GLO WORM in cool water with mild detergent. **DO NOT BLEACH.**
3. Tumble dry on low setting.
4. Insert battery pack into MUSICAL GLO WORM.
5. Replace the nightshirt.

Operates on 2 "C" size batteries (not included). Always use fresh batteries.