


Attaching Busy Box to Baby's Crib

1. Loosen each strap back and forth a few times to loosen. Insert one strap into each slot. To insert, hold strap with oval tab facing up. Slide strap into slot as shown. (ILL. 1) Pull strap all the way through until it is securely in place. Repeat this procedure for the other 2 straps.

2. Wrap each strap around crib rails and bar. (ILL. 2) Bring strap back through the slot and pull. Fit oval tab into desired opening, making it as tight or as loose as you'd like.

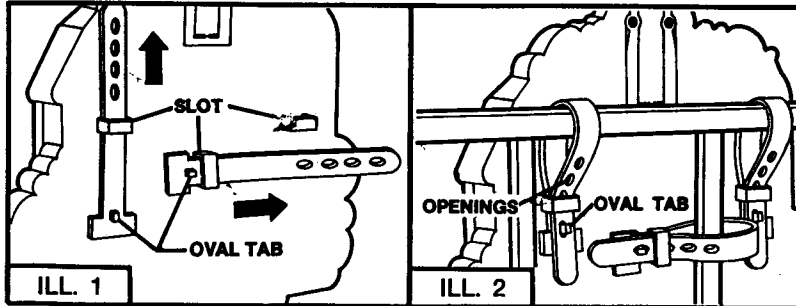

Assembling and Attaching Mobile

1. Insert the mobile attachment into the busy box, with the two tabs on the attachment facing in the direction shown. Turn the attachment 90° until either of the tabs on the attachment rests against the ridge on the busy box. (ILL. 3) The ring on the attachment should lie flat against the busy box when inserted correctly.


2. To attach the large spreader arm to the arch, insert the hook on the arm through the hole on the end of the arch. (ILL. 4)

3. Attach the 4 mobile animals to the 2 small spreader arms. To attach each animal, hold the printed side of the animal away from the arm. Insert the knob on the end of arm through the opening in the animal. (ILL. 5) Repeat for the remaining 3 animals.

4. Attach the small spreader arms to the large spreader arm. To attach each arm, place the center section of the small spreader arm onto the hook on the large spreader arm. (ILL. 6)

NOTE: The mobile animals can be removed for separate play. To remove, gently pull the animal from the knob on the small spreader arm. The animals are made of soft, nontoxic foam that's easy to hold and comfortable for teething.

NOTE: The mobile arch swings aside for easy access to baby's crib.

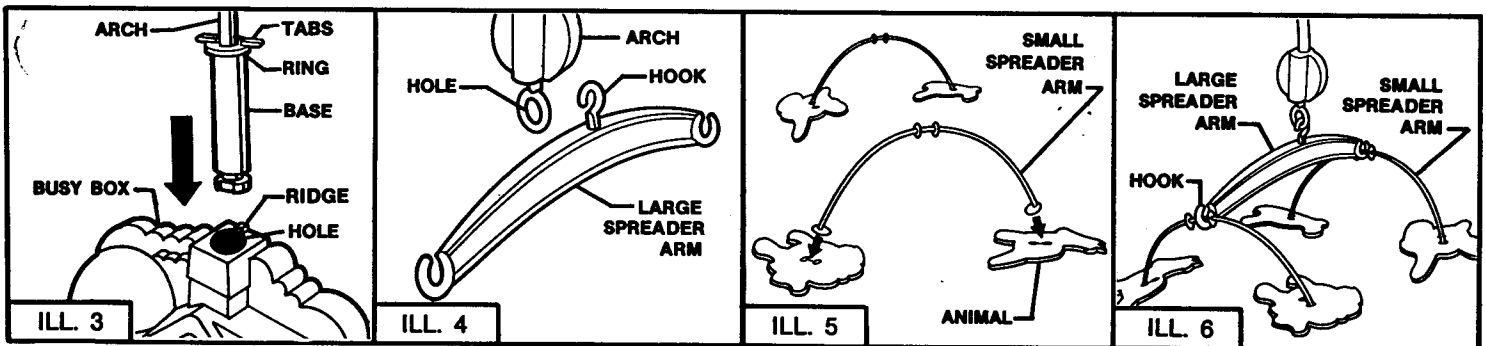

Starting the Music Box

1. To start the music box, wind the knob on the Busy Box, then move the on/off switch (located under the knob) to the right. The mobile animals will revolve slowly as the music plays. The music will play for approximately 10 minutes in the mobile stage and up to 20 minutes in the Busy Box stage.

2. If you want to stop the music box before the cycle is finished, move the on/off switch to the left. To re-start the music, move the switch to the right. (ILL. 7)

Removing the Mobile

CAUTION: YOU MUST REMOVE THE MOBILE (THE ARCH, LARGE SPREADER ARM AND 2 SMALL SPREADER ARMS) FROM THE CRIB WHEN BABY BEGINS TO SIT UP, AROUND 5-6 MONTHS.

1. Remove the 2 small spreader arms and the large spreader arm from the mobile arch. Turn the mobile attachment 90°, so that the tabs on the attachment face in the direction shown. (ILL. 8) Remove attachment from busy box.

