



Ages: Birth & Up
5688


Musical Dream Screen™

CAUTION: When toy is used in crib, the crib sides should be raised and the crib mattress should be in one of the lower positions.


CAUTION: To avoid head entrapment, do not attach lower strap on toy to mesh-sided cribs or playpens.

Thank you for purchasing this product.
If you have any questions or
comments about this product,
please call Playskool's
toll-free number: 1-800-PLAYSKL.

Requires 4 "C" batteries
(not included).
Tool need:
Phillips
screwdriver
(not included).

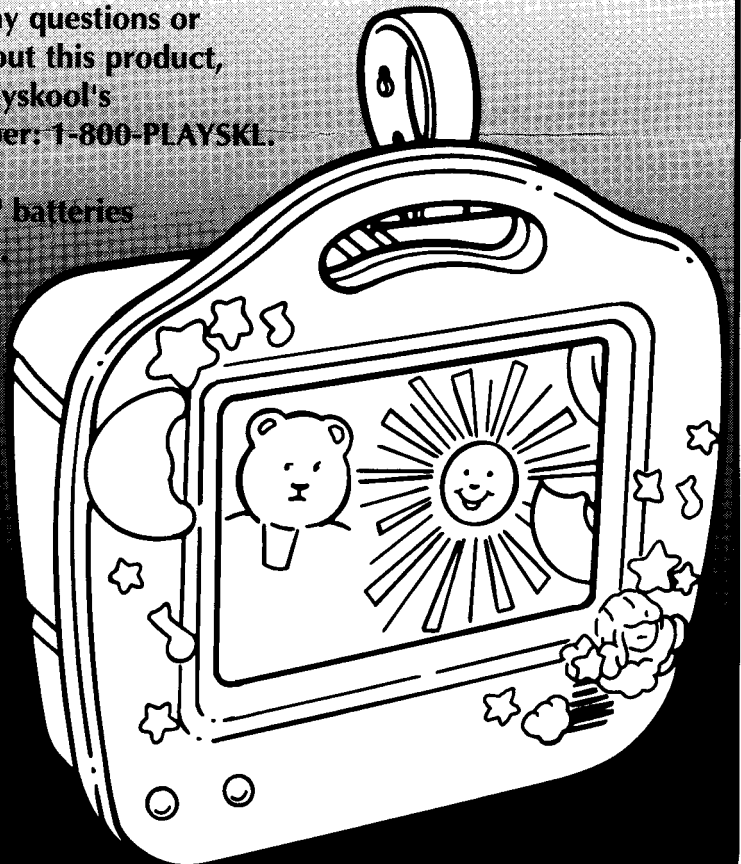

To Insert Batteries

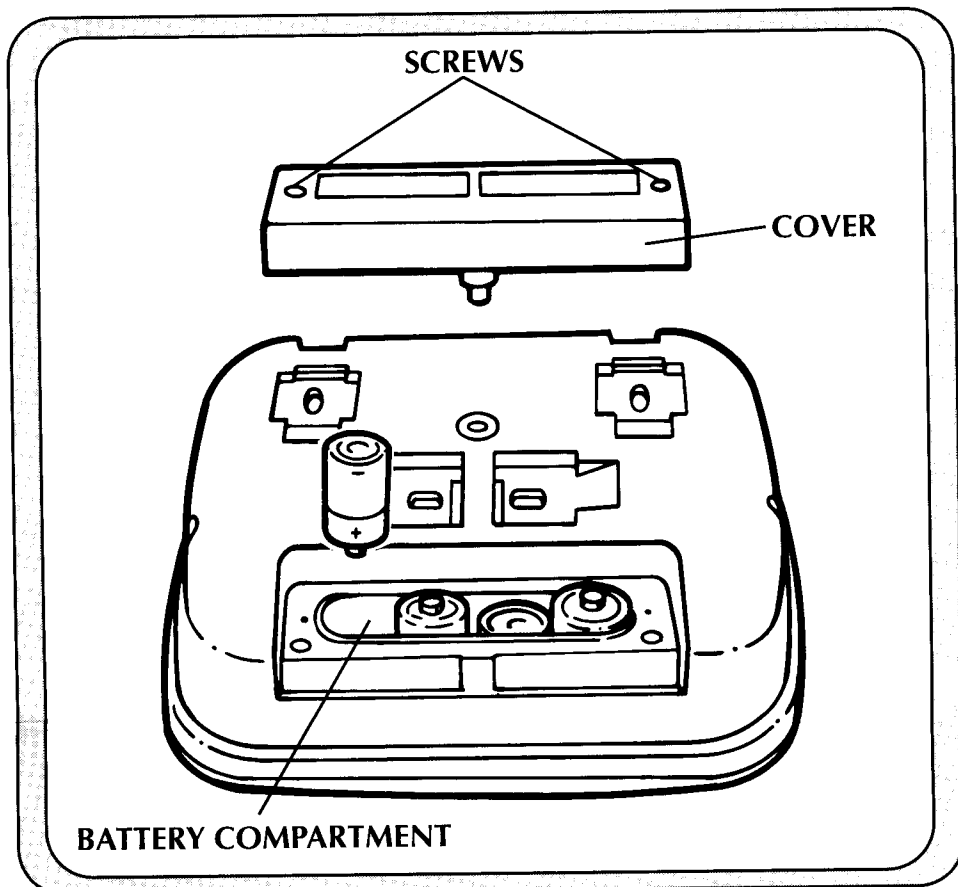


1. On back of toy, loosen the 2 screws in battery compartment cover, and remove cover (screws will remain attached to cover).
2. Insert 4 "C" batteries. (Refer to illustrations on cover for proper placement.)
3. Replace cover and tighten screws.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.


To Start Musical Dream Screen

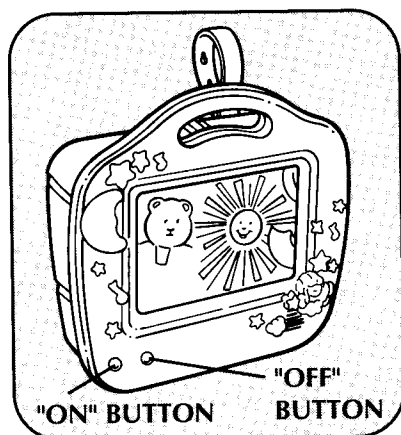

- Press the "ON" button. Music will begin to play and bright, sparkling lights will roll across the screen. The music and lights will continue for approximately 6 minutes, after which the toy will automatically shut off.
- You can also shut off the toy manually by pressing the "OFF" button.
- For an especially dazzling and delightful light display, view Musical Dream Screen in a dark room.

The 8 songs are: •Brahms' Lullaby •Hush Little Baby •Beautiful Dreamer
•Twinkle Twinkle Little Star •Rock-A-Bye Baby •Row Row Row Your Boat
•Three Blind Mice •Baa Baa Black Sheep


To Attach Musical Dream Screen To Crib

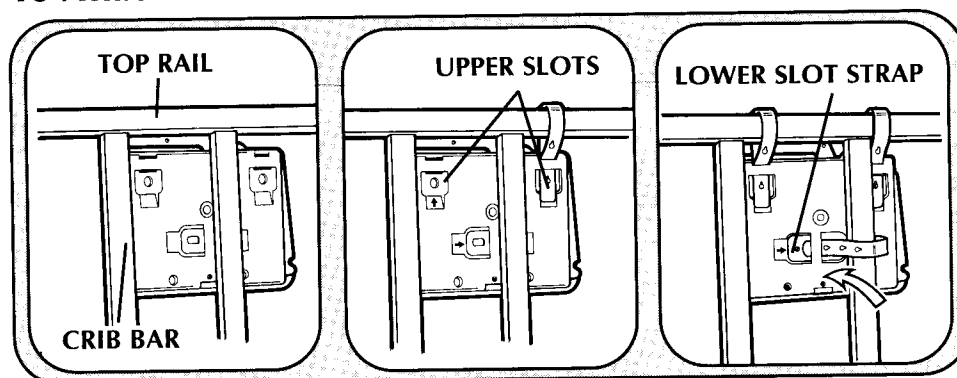

1. Position toy inside crib near top rail.
2. Line up arrow on strap with arrow on one of the upper slots on back of toy.
3. Slide strap through slot, around top crib rail, and back down through slot until strap is holding top of toy firmly onto rail.
4. Press strap tab into one of the three strap holes as shown.
5. Repeat process for other strap and upper slot.
6. Line up arrows and slide the remaining strap through lower slot on back of toy (in either direction).
7. Slide strap around one of the crib bars and back down through slot until strap is holding bottom of toy firmly onto bar.
8. Press strap tab into one of the three strap holes.

To Replace Light Bulb

- Replace burned out light bulb with a new PR-24 or PR-18 light bulb.
1. On back of toy, loosen screw that attaches light bulb cover to toy (screw will remain attached to toy).
 2. Slide light bulb holder out of toy.
 3. Remove screw that attaches light bulb cap to holder. Remove cap.
 4. Discard old bulb and replace it with a new PR-24 or PR-18 light bulb.
 5. Replace cap and screw. Slide holder into toy and tighten screw.

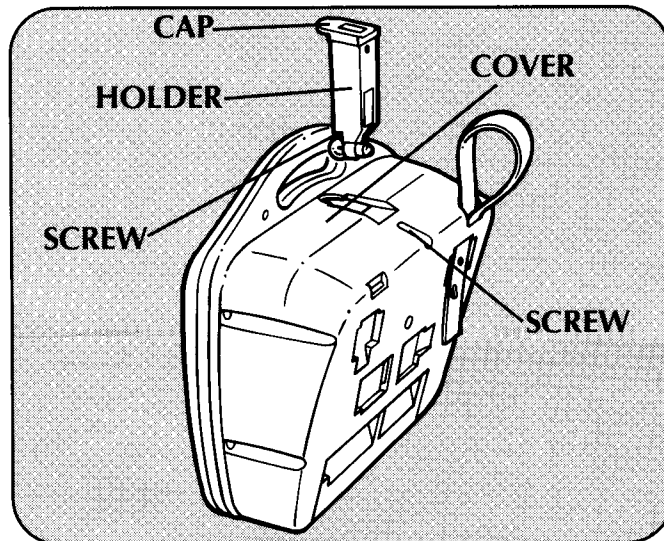

What If...

- A) If the lights are getting dim:
- Replace the batteries.

- B) If the music stops and the pictures do not move:
- Replace the batteries.
- (Please note that the lights may continue to shine even when the music and movement have stopped.)

- C) If there are no lights:
- Replace the light bulb.
 - Replace the batteries.

© 1990, 1996 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

MADE IN CHINA.

P/N 46873400



Questions? Call: **1-800-PLAYSKL™**