

electronic

MUSICAL PHONE™

for girls
and boys
3 to 8 years



 
Play these tunes or create your own!

- London Bridge
- On Top Of Old Smokey
- Beautiful Dreamer
- Three Blind Mice
- Jingle Bells
- Old MacDonald
- Twinkle Twinkle Little Star
- This Old Man




To install battery


For best results, use a 9 volt alkaline battery.
(Battery not included.)

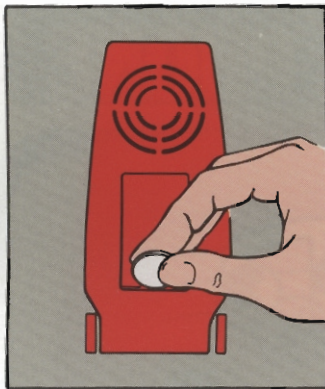

 (1) To remove cover, insert coin in slot and press toward center.

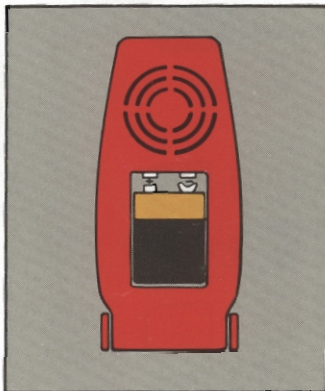

 (2) Insert battery into compartment against correct contacts.

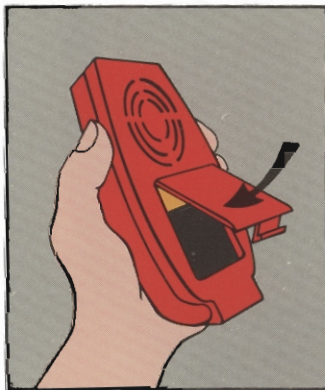

(3) Slide top of cover into place and snap shut.

Musical Phone has no on/off switch. It is on only when you press the keyboard.

electronic MUSICAL PHONE™

Each number/color is a musical note. Press them one by one and listen to the different musical notes.

To Play the songs in this book just press the number/color keys in the order listed for each song. A "dot" between notes indicates a pause or rest.

IMPORTANT: Do not play songs on your parents real phone. It is not a toy!





On Top Of Old Smokey

1	1	3	5	8	6	•	6	4	5	6	5
1	1	3	5	5	2	•	3	4	3	2	1
1	1	3	5	8	6	•	4	4	5	6	5
1	1	3	5	5	2	•	3	4	3	2	1




Twinkle Twinkle Little Star


1	1	5	5	6	6	5	•	4	4	3	3	2	2	1
5	5	4	4	3	3	2	•	5	5	4	4	3	3	2
1	1	5	5	6	6	5	•	4	4	3	3	2	2	1



 
Jingle Bells

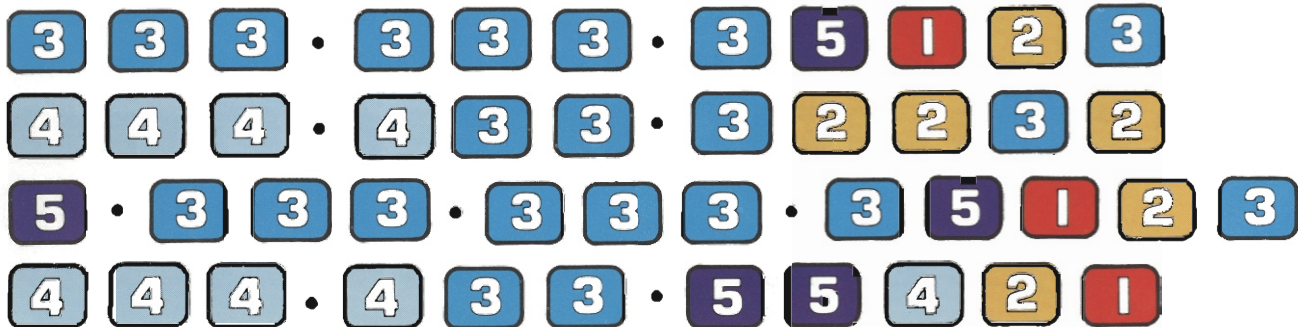


Old MacDonald

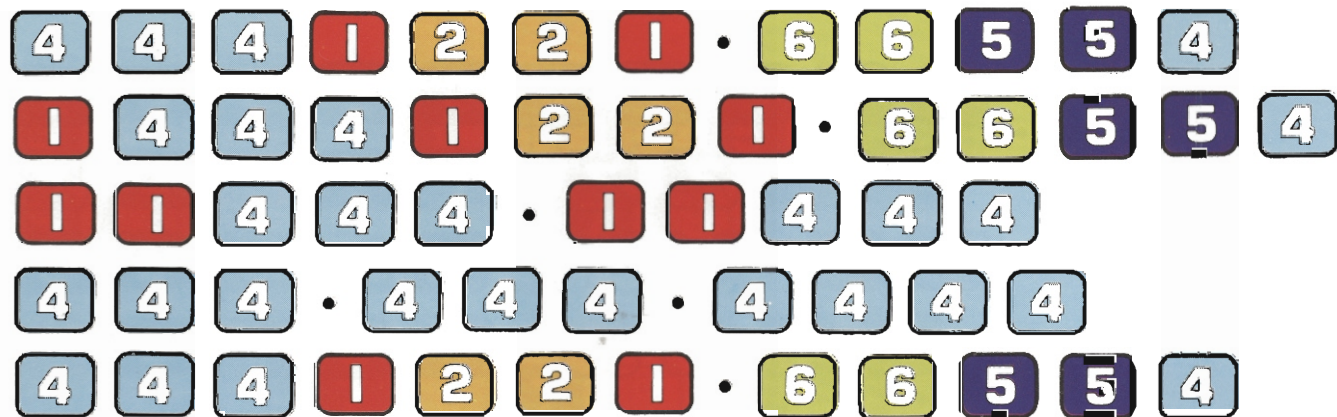 

Beautiful Dreamer

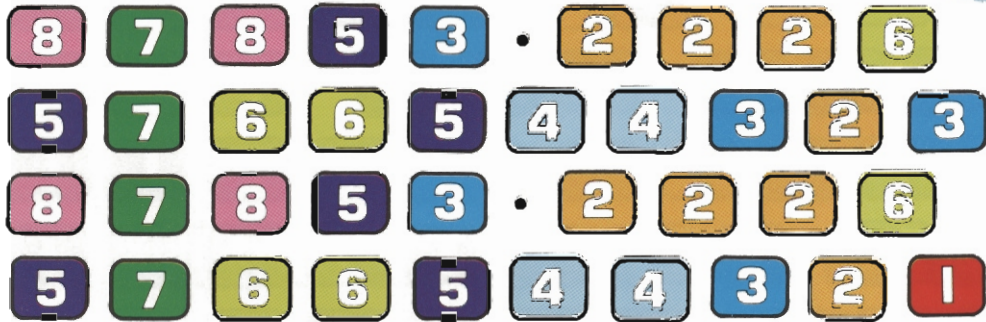 

Three Blind Mice

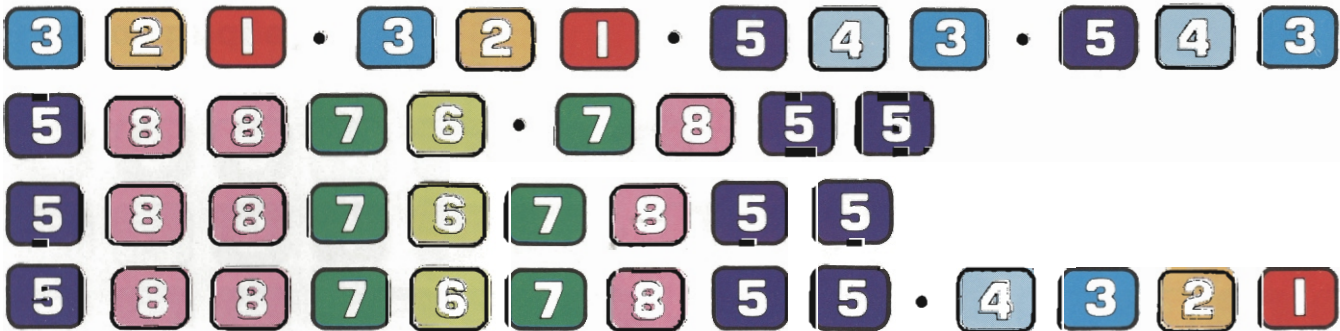 

90 Day Limited Warranty

The Electronic Musical Phone is warranted by Playskool, Inc. to the original purchaser for a period of 90 days from the original purchase date under normal use and service against defective workmanship and materials (batteries excluded).

This warranty is void if the toy has been damaged by accident or unreasonable use, neglect, misuse, abuse, improper service or other causes not arising out of defects in workmanship or materials.

Playskool, Inc. shall not be liable for loss of use of the toy or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

During the warranty period, if found to be defective due to workmanship or materials, the toy will either be repaired or replaced with a reconditioned product of an equivalent quality (at Playskool Inc.'s option) without charge to the purchaser when returned with proof of purchase date, shipping prepaid to the address listed below. In the event that the toy is replaced, the warranty on the replacement will be continued for 90 days.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

POST WARRANTY REPAIR POLICY—After the 90 day warranty period has expired, Playskool, Inc., shall for a period of one year from the date of purchase, either repair your product or replace it with a reconditioned Musical Phone on the condition that you return your product, shipping prepaid, to the address listed below along with proof of purchase date and your check or money order in the amount of \$3.50. Playskool, Inc. shall not be obligated to perform this service if the Musical Phone has been abused, misused, improperly serviced or damaged due to accident.

GENERAL INSTRUCTIONS—(IMPORTANT) Before returning the Musical Phone for repair, we recommend that you test your toy with fresh, strong batteries. Even new batteries may be defective or weak, and low battery power is a frequent cause of unsatisfactory operation.

Mailing Instructions

 
PLEASE READ CAREFULLY AND RETAIN THIS IMPORTANT INFORMATION FOR FUTURE REFERENCE = REMOVE THE BATTERIES. DO NOT RETURN THEM! If the original packaging is available, repack the Musical Phone in its packing and box. If not available, wrap carefully, making sure to surround the product with adequate padding. If the 90 day warranty period has expired and your purchase date is still within our one year time limit, send in \$3.50 and proof of purchase. Please include a brief description of the problem, your return address and mail postage prepaid and insured to the following address. Do not send the batteries with the Musical Phone.

PLAYSKOOL, INC.
Attn: Electronics Repair Department
4501 W. Augusta Blvd., Chicago, Illinois 60651

PLEASE DIRECT ANY INQUIRIES OR CORRESPONDENCE TO THE ATTENTION OF THE CUSTOMER SERVICE DEPARTMENT.

Printed in Hong Kong

This Old Man

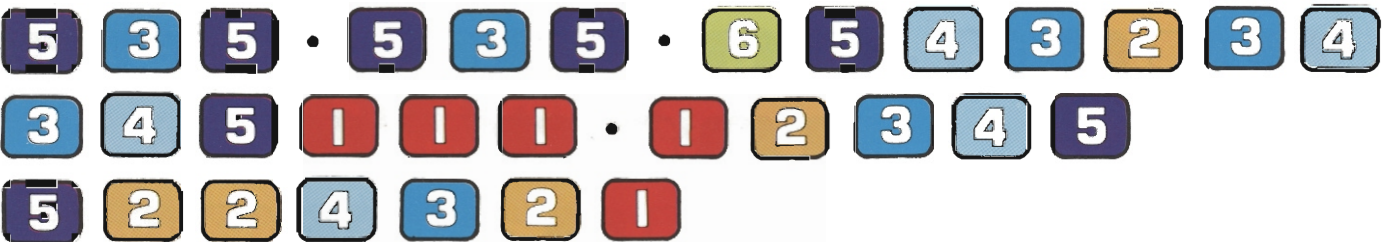

London Bridge

