

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by
National Campaign for Hearing Health
1050 17th Street NW, Suite 701
Washington, DC 20036



Talk to your doctor if you answer NO to any of these questions:

YES	NO	Birth to 3 Months
q	q	Reacts to loud sounds
q	q	Is soothed by your voice
q	q	Turns head to you when you speak
q	q	Seems to know your voice and quiets down if crying
YES	NO	3 to 6 Months
q	q	Looks upward or turns toward a new sound
q	q	Responds to "no" and changes in tone of voice
q	q	Enjoys rattles and other toys that make sounds
q	q	Becomes scared by a loud voice

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at 1.800.535.3323 or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.



PLAYSKOOL.COM
FOR NEW PRODUCTS AND OFFERS

Questions? Call: 1-800-PLAYSKL


OVER 9 months
23244

PLAYSKOOL®

Musical Pipes


Thank you for choosing this unique learning toy!

**Includes 3 x 1.5V "AA"/R6 batteries.
Alkaline batteries recommended.
Phillips/crosshead screwdriver
(not included) required for
battery installation.**

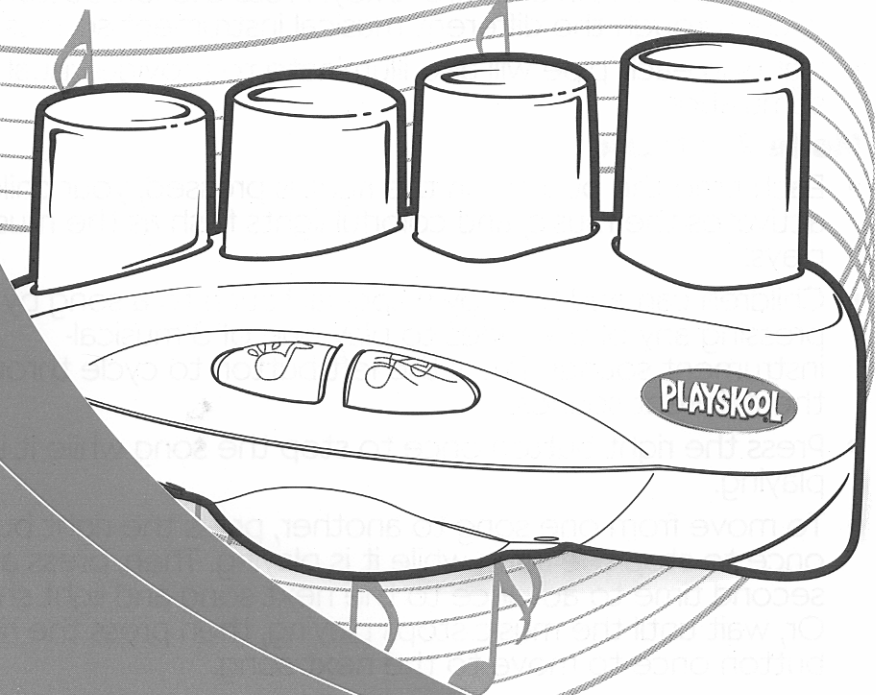

Play Features

The Musical Pipes toy offers play in 2 different modes:

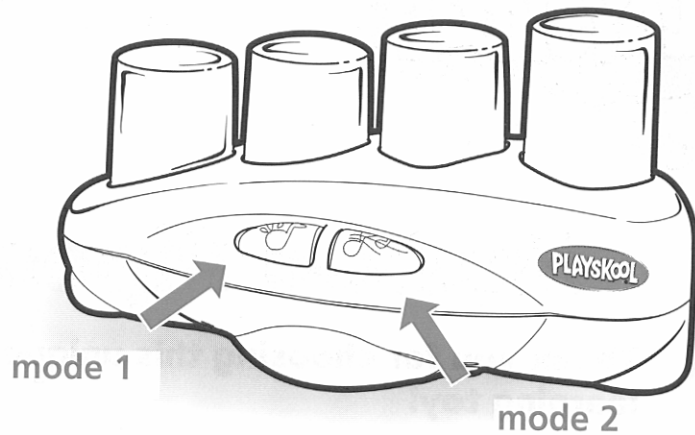

Mode 1 – Create a Song


- With a press of the button on the left, your child can create his or her own musical masterpiece!
- Each time a pipe is gently pressed, the sound of a slide whistle, boinger or piano note will play. Press the pipes to hear the sound in a different key. Press the left button to cycle through the different musical instrument sounds.
- Lights in each pipe will also illuminate to provide visual stimulation.

Mode 2 – Music

- Each time the button on the right is pressed, your child activates the music, and colorful lights flash as the music plays.
- Children can add their own special touch to a song by pressing any of the pipes to play one of 3 musical-instrument sounds. Press the left button to cycle through the different sounds.
- Press the right button once to stop the song while it is playing.
- To move from one song to another, press the right button once to stop the song while it is playing. Then, press a second time to advance to the next song and light show. Or, wait until the music stops playing, then press the right button once to move to the next song.

To Replace Batteries

Use a Phillips/crosshead screwdriver to loosen screw in battery compartment door (screw remains attached to door). Insert 3 fresh "AA"/LR6 (1.5V) alkaline batteries. Replace door and tighten screw.

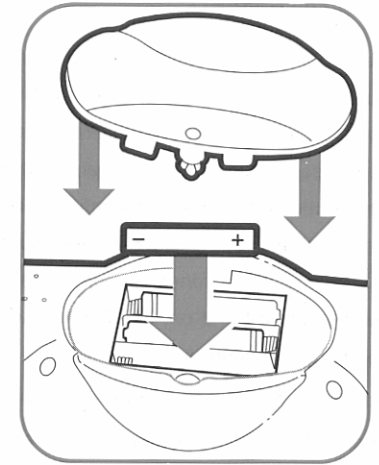

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**