


WARNING:

CHOKING HAZARD-Small parts. Not for children under 3 years.


> Ages 3 & up 62482

iffial ong. Pony Garden Carry Case™


Thank you for purchasing this toy! Adults: Remove pieces from plastic bags and discard bags immediately. Using safety scissors, remove pieces from runner frames.

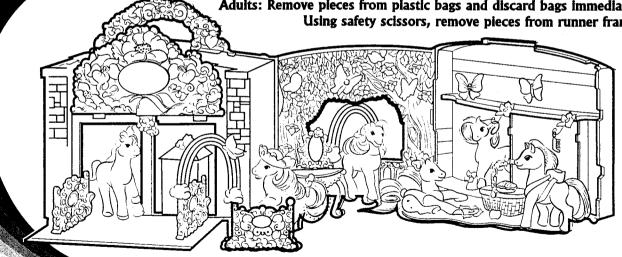

Includes: Carry case, front facade, 2 fences, pie, apples, 2 flower hooks, butterfly, and picnic basket and 2 label sheets. Ponies and their accessories sold separately. PICNIC BLANKET: Have an adult cut out picnic blanket from bottom of package.

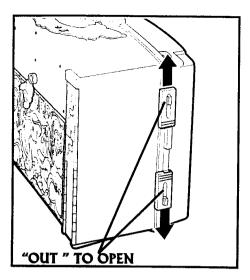


TO OPEN & CLOSE CASE: Slide latches "OUT" to unlock case. Slide latches "IN" to lock case.

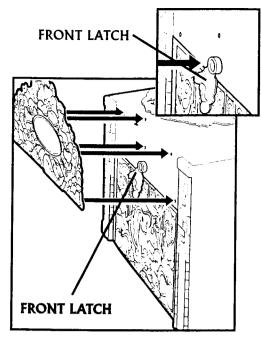


ASSEMBLY:


1. On front of case, snap front latch into hole in wall. Make sure front latch is DOWN. Insert posts on front facade into holes in wall.

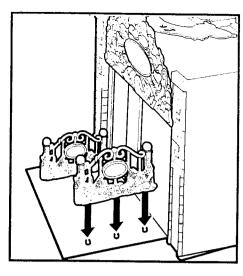


2. Swing latch up to open big door. Press 2 fences onto door.

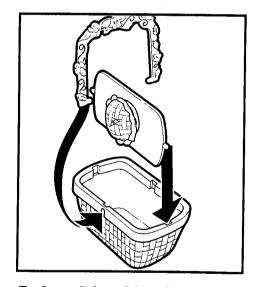


3. Snap lid and handle onto picnic basket. Pie can be attached to underside of lid. Apples fit in basket.

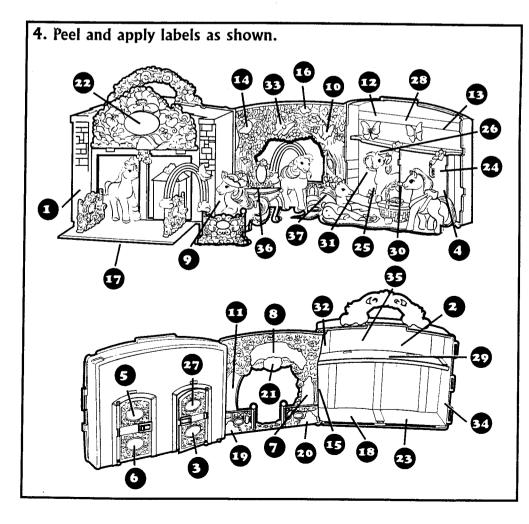

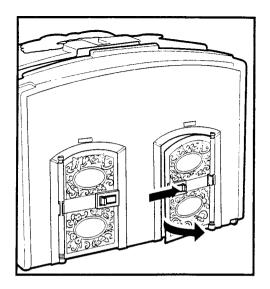

PLEASE NOTE:

 Slide latches to open the 2 small doors.

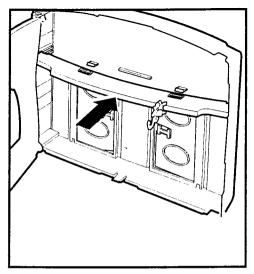

- Flower hooks can hang from the shelves.
- The shelves can slide out of the case. To put them back in, insert ends of shelves into slots in walls.

- If the garden wall detaches from the case, you can re-attach it: insert posts on garden wall into holes in case.
 NOTE: Wall attaches correctly only one way.
- Store My Little Pony friends and accessories in the case. Make sure you latch the big door and the 2 small doors closed, and lock the side latches before carrying or storing the case.