 



### Instructions

Remove all pieces from plastic frames. If you have difficulty, have an adult use safety scissors. Remove all pieces from plastic bags and discard bags IMMEDIATELY.


#### To Assemble Carousel and Accessories:

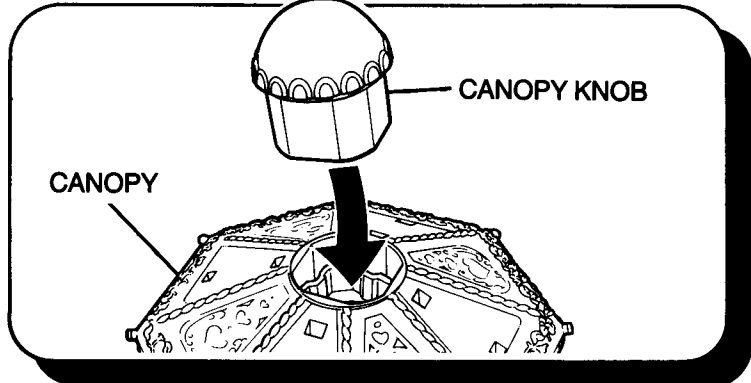

 
1. Insert canopy knob into hole in canopy.

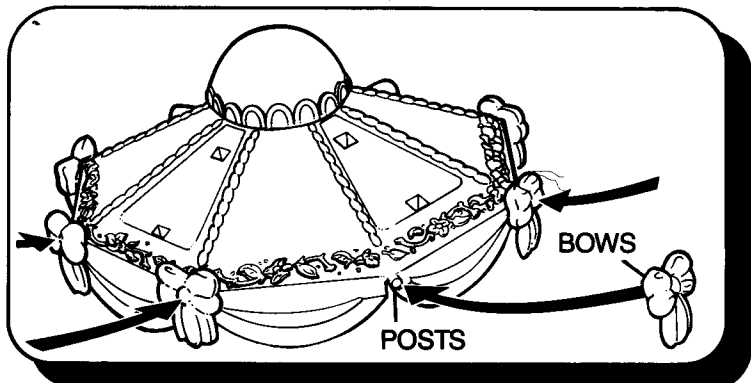

 
2. Press bows onto posts around edge of canopy.

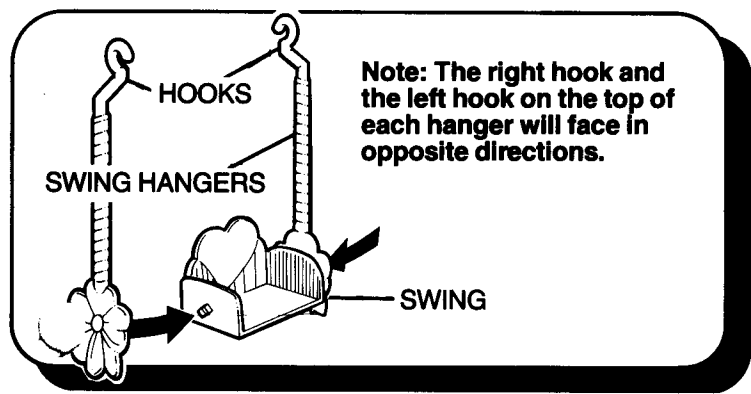

 
3. Snap swing hangers onto sides of swings.

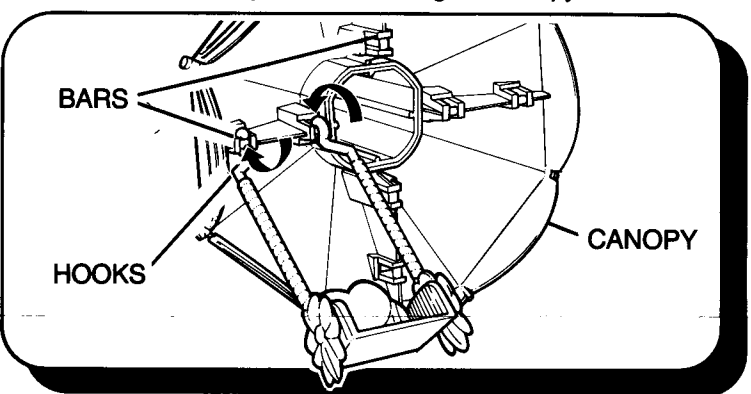


4. Snap hooks on swing hangers around bars inside canopy.

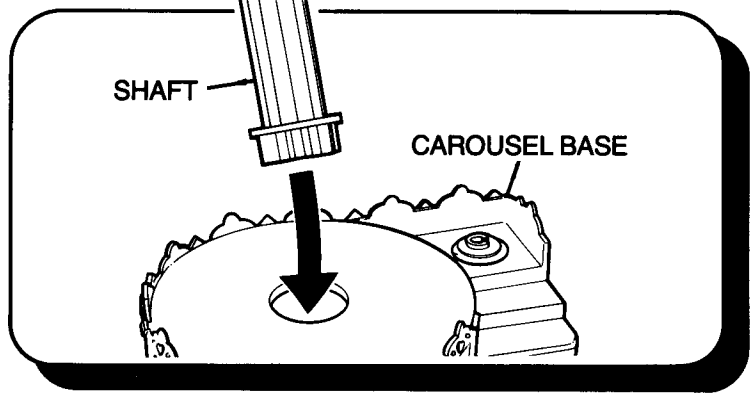


5. Insert shaft into hole in carousel base.

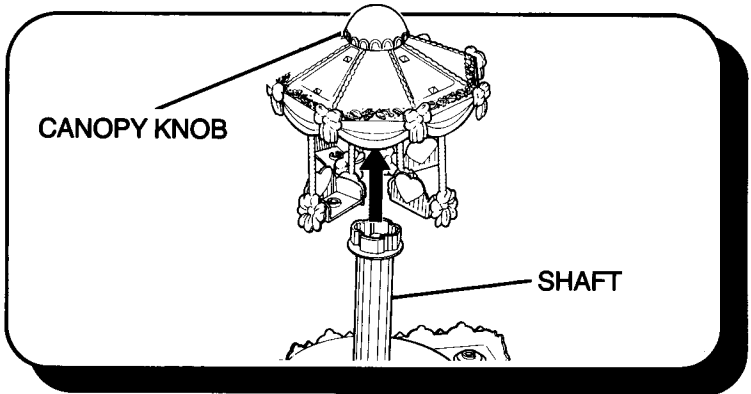


6. Insert shaft into hole in canopy knob.

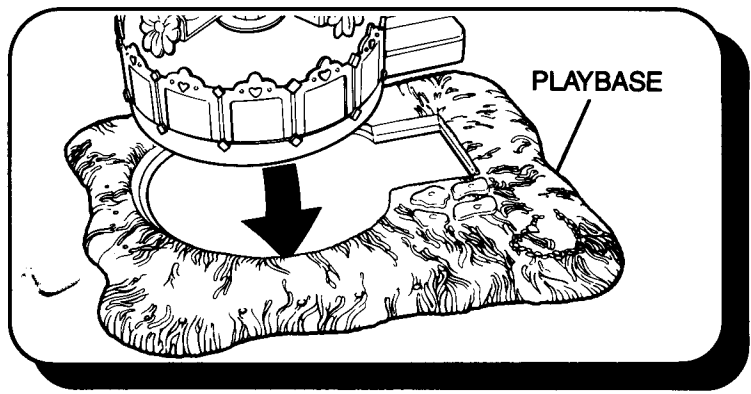


7. Place assembled carousel onto playbase.

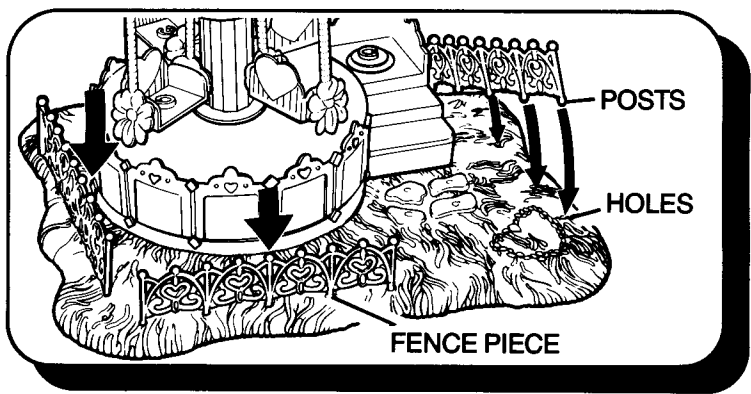


8. Insert posts on bottom of each fence piece into holes in playbase.

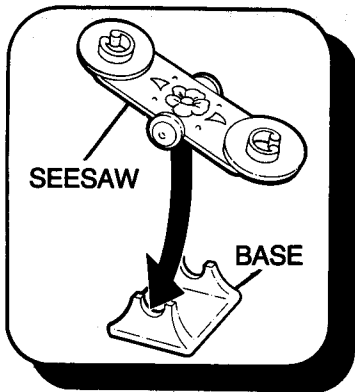


9. Place seesaw onto seesaw base.

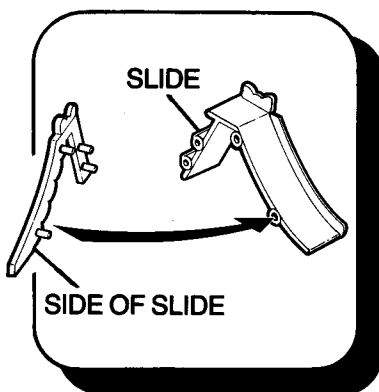


10. Insert posts on side of slide into holes in slide.

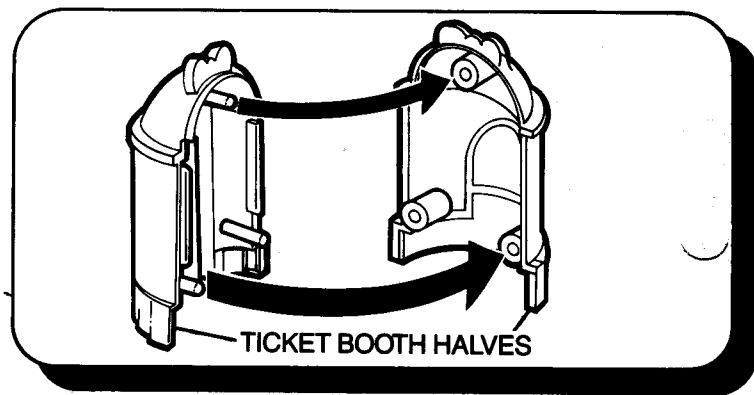


11. Press together both halves of ticket booth.

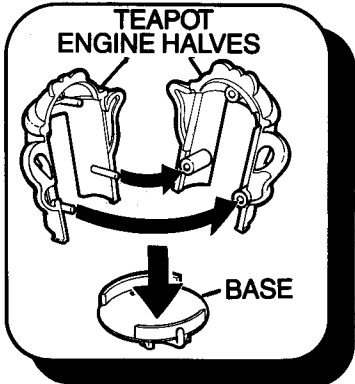


12A. Press together both halves of teapot engine. Snap teapot engine onto base, with post on base under teapot handle.

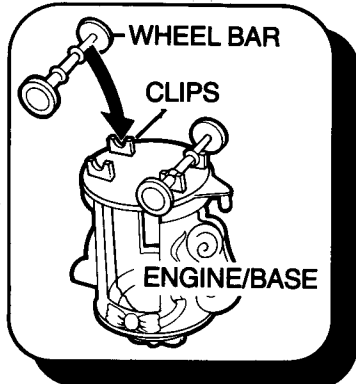


12B. Turn engine/base upside down, and snap wheel bars into clips on base.

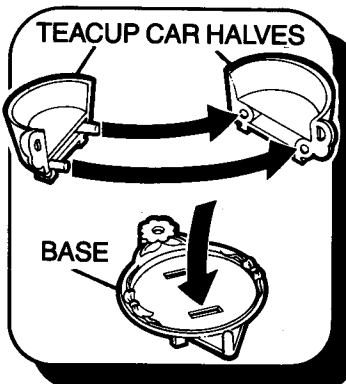


13A. Press together both halves of teacup cars. Snap teacup cars onto bases, with posts under teacup handles.

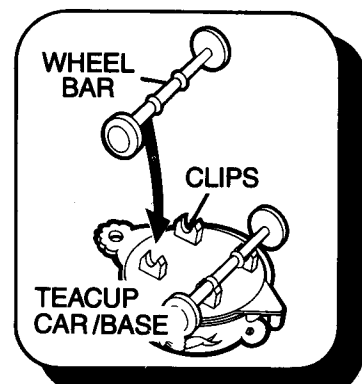

13B. Turn cars/bases upside down, and snap wheel bars into clips on bases.

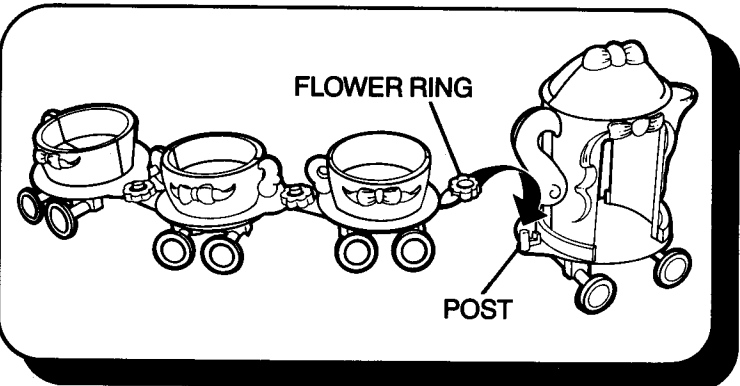


14. To attach teacup cars to teapot engine, place flower rings on fronts of cars over posts on backs of engine and cars.

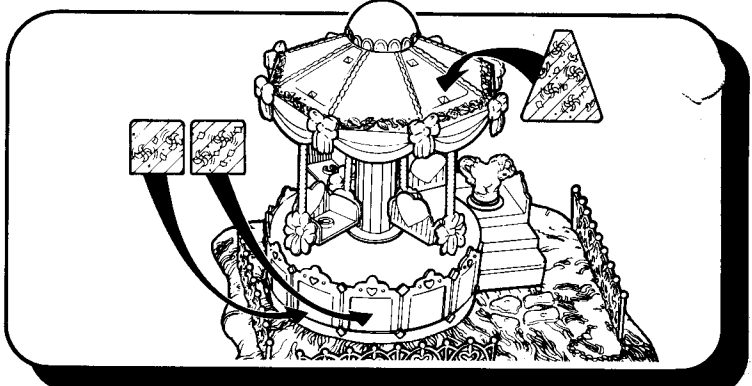


15. Peel and apply labels as shown.

### To Play with Carousel:

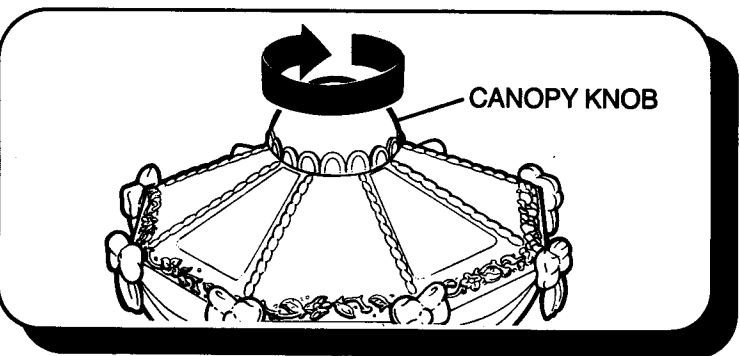

16. Make sure front of carousel is facing you (stairs should be to your right). To wind carousel, turn canopy knob clockwise (to the right) until you cannot turn it any further.

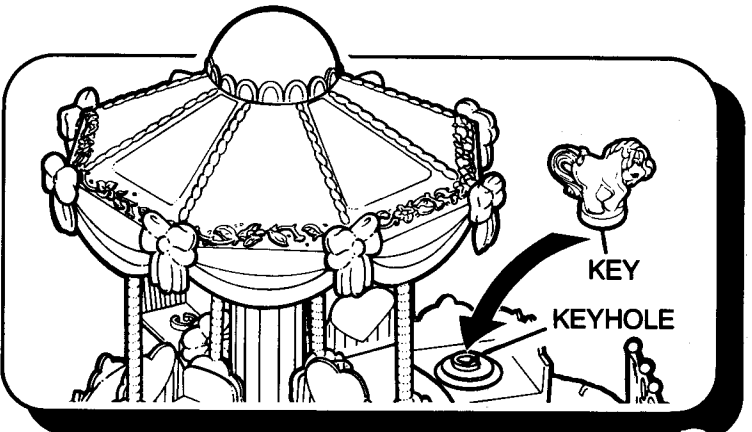

17. To start carousel, place Petite Pony "key" (located under pony's feet) into circular "keyhole" on landing, aligning "U"-shaped groove in key with "U"-shaped ridge in keyhole. Turn pony a quarter of a turn in a clockwise direction (to the right). Carousel will start to spin and play music. To shut off carousel, turn pony a quarter of a turn in a counterclockwise direction (to the left).

