

My Little Pony

"Comb
my hair!"

"I love you!"

"I'm
pretty!"

The Only Talking My Little Pony!

16007 My Little Pony™ Sweet Talkin' Pony

My Little Pony has something to say that girls will love to hear! This pony says three different sentences when children give her a gentle squeeze, including "Comb my hair," "I'm pretty," and "I love you."

She comes with hair accessories so girls can create beautiful hair styles with her long, lovely tresses.

Requires 3 A-76 button cell, replaceable batteries (included).

Ages: 3 & Up PK: 6

TV

© 1991 Hasbro, Inc. All Rights Reserved.





INSTRUCTIONS

TO REPLACE BATTERIES:

PLEASE NOTE: Batteries should be replaced by ADULTS ONLY.

 
Sweet Talkin' Pony comes with 3 A-76 batteries. When they are exhausted, you can replace them with any of the following batteries: 357A, A-76, SR-44 or PX-76. ALWAYS use three of the SAME battery styles - never mix different styles of batteries.

1.




Turn pony's head, and remove it to expose battery compartment cover.

2.

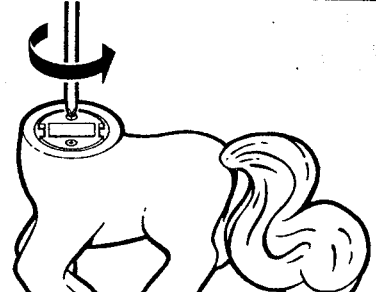


Remove screw in cover with a Phillips® screwdriver. Remove cover.

 3.

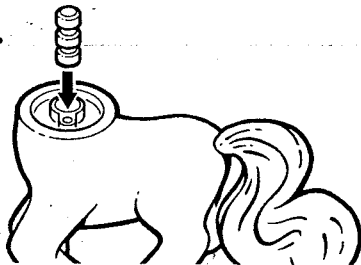

Remove old batteries and insert fresh, new batteries as shown in illustration on cover.

 4.

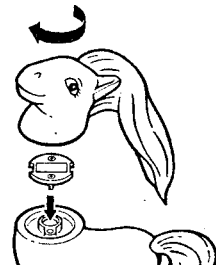

Replace cover and screws. Replace pony's head, making sure it is firmly attached to the body.

BATTERY SAFETY PRECAUTIONS

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect, available 24 hours a day.
2. When installing replacement batteries, make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.
3. Never mix old batteries and new batteries.
4. Batteries may explode or leak if recharged, disassembled or heated above 100 degrees C. (212 degrees F.).

CAUTION: Do not immerse pony in water.

16007 Asst.

