



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.





AGES 3+
60070

Celebration Castle™ Playset












Thank you for purchasing this MY LITTLE PONY toy! For maximum play value, please read and follow instructions carefully.

Requires 3 x 1.5V "AA"/LR6 alkaline batteries (not included). Phillips/cross head screwdriver (not included) needed to insert batteries.

Playset comes with PINK SUNSPARKLE pony, 2 turrets, crown, hot-air balloon, heart-shaped arch, rounded arch, moat, 2 balconies, staircase, spinning disk, bed, toy box, vanity, comb, brush, wardrobe, hanger, tutu, pony crown, storage drawer, stove, 2 plates, 2 tea cups, 2 forks, tea pot, saucepan, 1 holographic label sheet, charm and friendship ribbon.

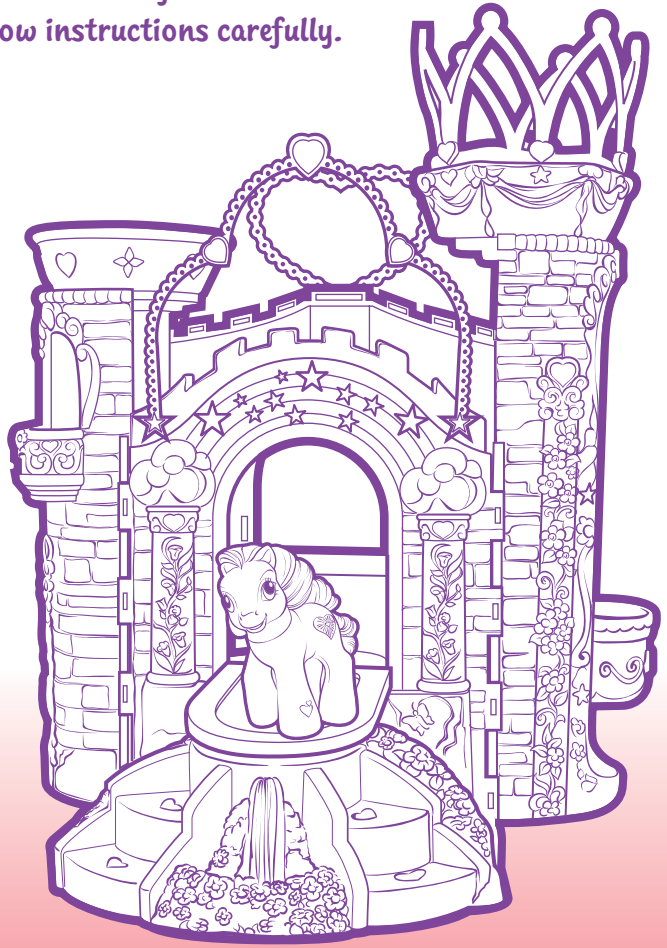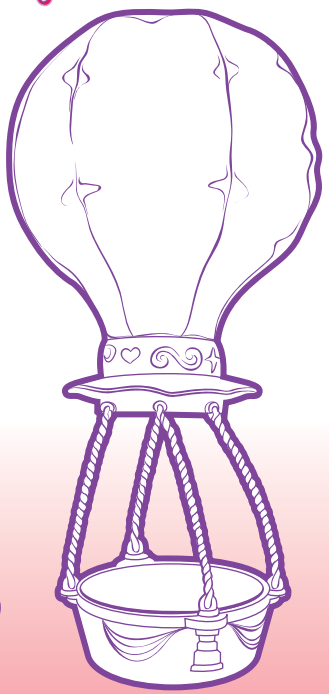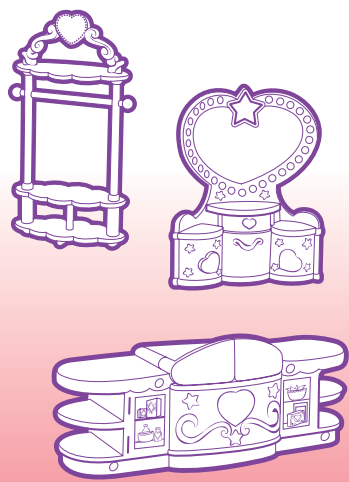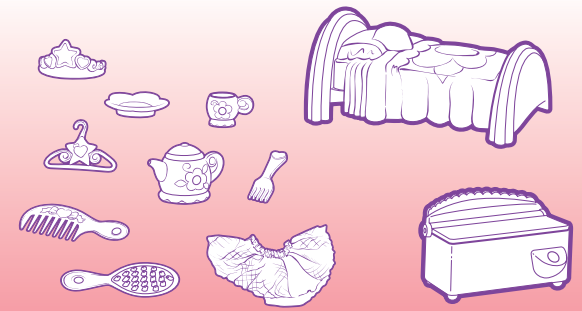

LABELS Apply as shown:

 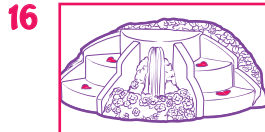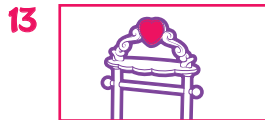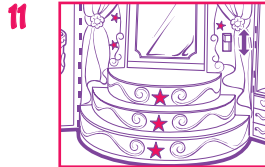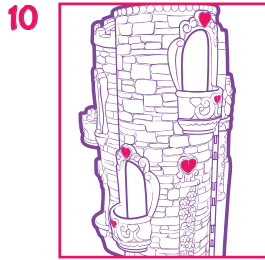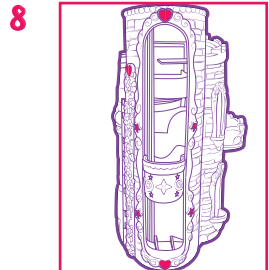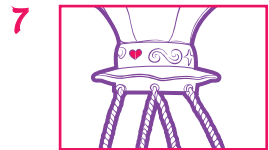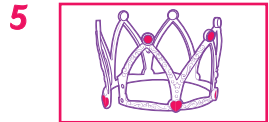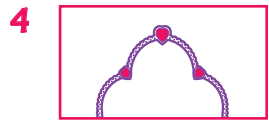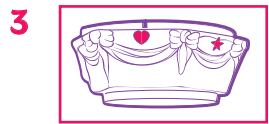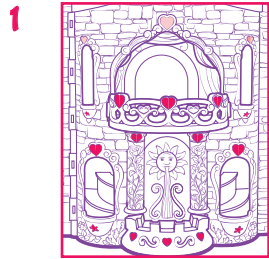

ASSEMBLY Snap pieces into place as shown:

FRONT

Balloon turret
Slide onto tabs.





Front entrance archway

Crown turret
Slide onto tabs.




Walkway

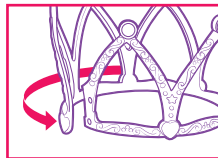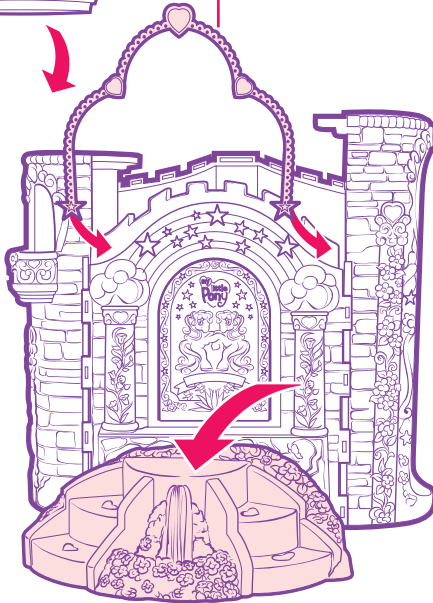

Crown

Snap ends of crown together. Line up pins (on bottom of crown) with notches on turret; lower crown into place.

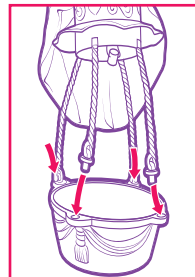


Balloon gondola

Snap balloon strings onto gondola, then inflate balloon and close nozzle. Place gondola onto turret.

BACK


Back entrance archway

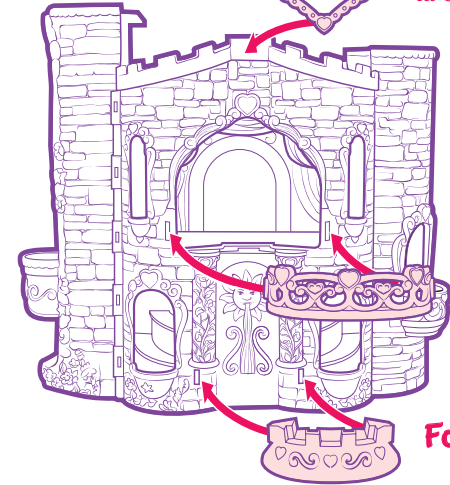


Medium balcony

Fountain

INSIDE

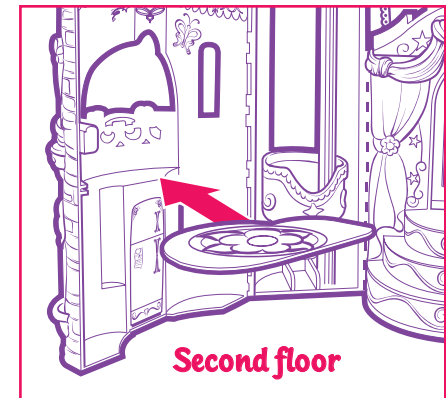

Second floor

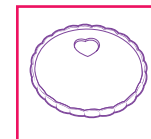

Spinning disk

Press spinning disk onto top of staircase.

PLAYTIME

Hidden magnet inside PINK SUNSPARKLE figure activates special features! (Magnet is located in foot with MY LITTLE PONY logo on bottom.) Note: Features can also be activated by other magnetic MY LITTLE PONY figures (sold separately).

Crown


Removable crown for you to wear!

Gondola elevator

Move the elevator up and down!

Bedroom

Toy box opens when PINK SUNSPARKLE touches the heart design!

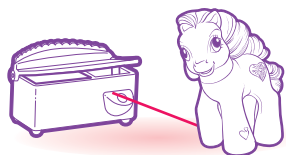


Hot-air balloon

PINK SUNSPARKLE can go for a ride in the balloon!

Magical mirrored door

To open door, press gently from inside.


To close, lift by hand or press lever next to door.

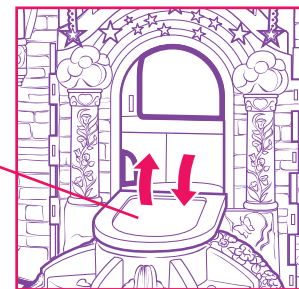

When a pony enters the castle, touch her magnetic foot to the heart shape on top of the staircase to make lights twinkle and music play!

Spinning disk

Place the spinning disk on top of the grand staircase. Place pony's magnetic foot on the heart, then turn the disk and she goes for a ride!

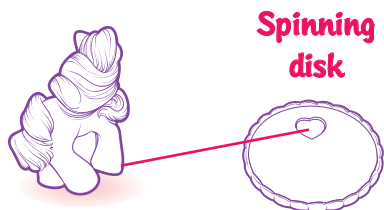


Powder room

Accessories fit inside for easy storage!

Comb and brush hook onto vanity!

Place tutu on hanger and hang in wardrobe!

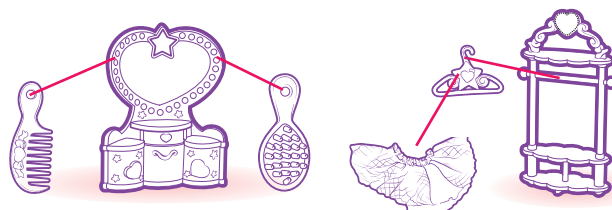

Stove


When PINK SUNSPARKLE touches the heart on the stove, top flips open to reveal sink with movable faucet!

Lots of shelves to store dishes!



TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door and remove old batteries. Insert 3 fresh "AA"/LR6 alkaline batteries. Replace door and tighten screw.

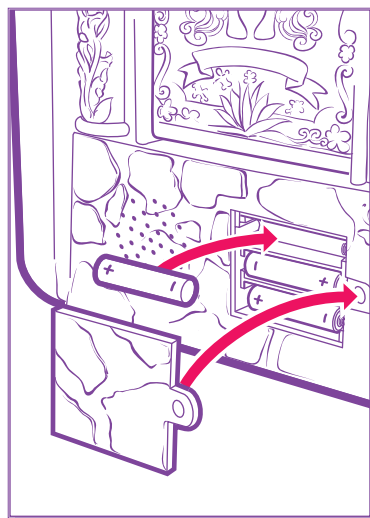

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

CAUTION:

- 1) Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
- 2) Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- 3) Remove exhausted or dead batteries from the product.
- 4) Remove batteries if product is not to be played with for a long time.
- 5) Do not short-circuit the supply terminals.
- 6) Should this product cause, or be affected by, local electrical interference, move it away from the other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7) RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.