 
 


## CLOSING PLAYSET


When you are ready to close the playset, store all accessories in the two towers. (If you store them on the first floor, they may interfere with the columns that come down as the playset closes.)

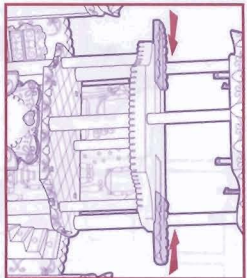

1. First, slide in both ends of the terrace until they click into place.

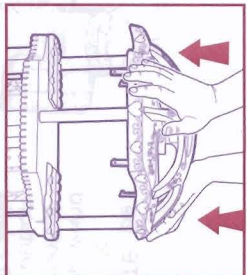

2. Then push down on the roof gently but firmly until it clicks into place.

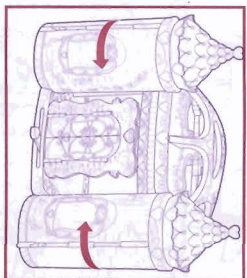

3. Close tower doors and push towers back into place.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**⚠ Not suitable for children under 3 years because of small parts — choking hazard.**

© 2006 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.  
62514 PN 6596480000



MyLittlePony.com

# my little Pony™

## Crystal Rainbow Castle™

Thank you for purchasing this My Little Pony® playset! For maximum play value, please read and follow instructions carefully.

Includes table with umbrella, vanity, punch bowl, ladle, 2 glasses, 3 canisters with removable lids, 3 perfume bottles, 2 dishes of ice cream, 2 spoons, china cabinet, "magic" wand and 3 pony figures. Castle, wand and ponies contain magnets.

**⚠ WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.

AGES 3+  
62514



**X3 BATTERIES INCLUDED**

Replace with 3 x 1.5V "AA" or LR44 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

**X2 BATTERIES REQUIRED**

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

1.5V AA/R6 size NOT INCLUDED

 
 
## TO INSERT BATTERIES (castle)

Battery compartment is located on bottom of castle.

Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment door (screws remain attached to door). Insert 2 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screws.

## TO REPLACE BATTERIES (wand)

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Insert 3 x 1.5V "A76" or LR44 size batteries. Replace door and tighten screw.

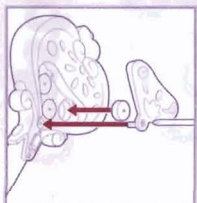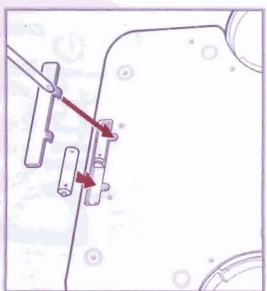

## CAUTION: TO AVOID BATTERY LEAKAGE

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. In other countries, have the doctor call your local poison control center.
2. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturer's instructions.
3. Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

 
## CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

## TO PLAY


Before play begins, insert batteries into playset.

## OPENING PLAYSET

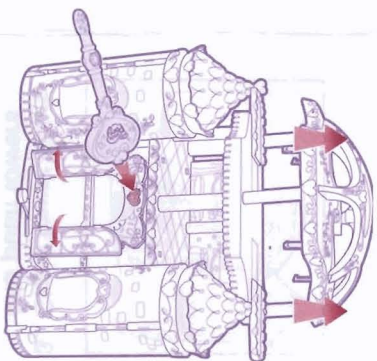


**NOTE:** Be sure to keep wand in front of the button until castle is fully expanded.

 1. Hold "magic" wand in front of the heart button for a few moments and castle grows to three stories high. If wand gets misplaced, you can open the doors by pressing the heart button.

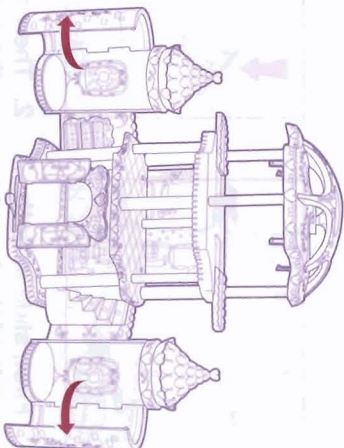

 2. Pull each tower out to the side, and their doors open automatically.

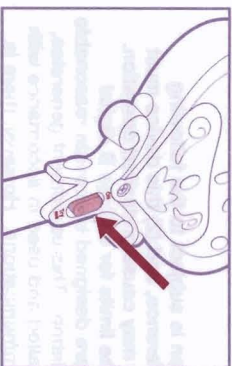

## Wand

The "magic" wand comes packaged in "TRY ME" mode. In this mode, the "magical" sound effect can be achieved only by pressing the button on the front of the wand. Move switch to "ON" mode and sound can also be achieved by flicking the wand forward.



## Vanity

Touch heart with the magnetic foot of any pony figure to make the drawers open.

## Pony dance floor

To make ponies "dance", place figures on dance floor and gently move bar until you feel it connect with the magnet in each pony's foot. Move bar from side to side to make ponies "dance".

