



## WARNING:

CHOKING HAZARD - Small parts.  
Not for children under 3 years.

AGES 3+

60598



# Musical Wishes™ Jewelry Box with Skywishes™

Thank you for purchasing this MY LITTLE PONY toy! For maximum play value, please read and follow instructions carefully.

Batteries included. Replace with 2 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended.


Phillips/cross head screwdriver (not included) needed to replace batteries.

Includes pony figure, 2 rings, charm bracelet, charm necklace, 2 barrettes and brush. Pony's foot contains magnet.



## PLAYTIME

Place pony figure on platform and turn it to make her “dance”! When you turn the platform, a song plays!

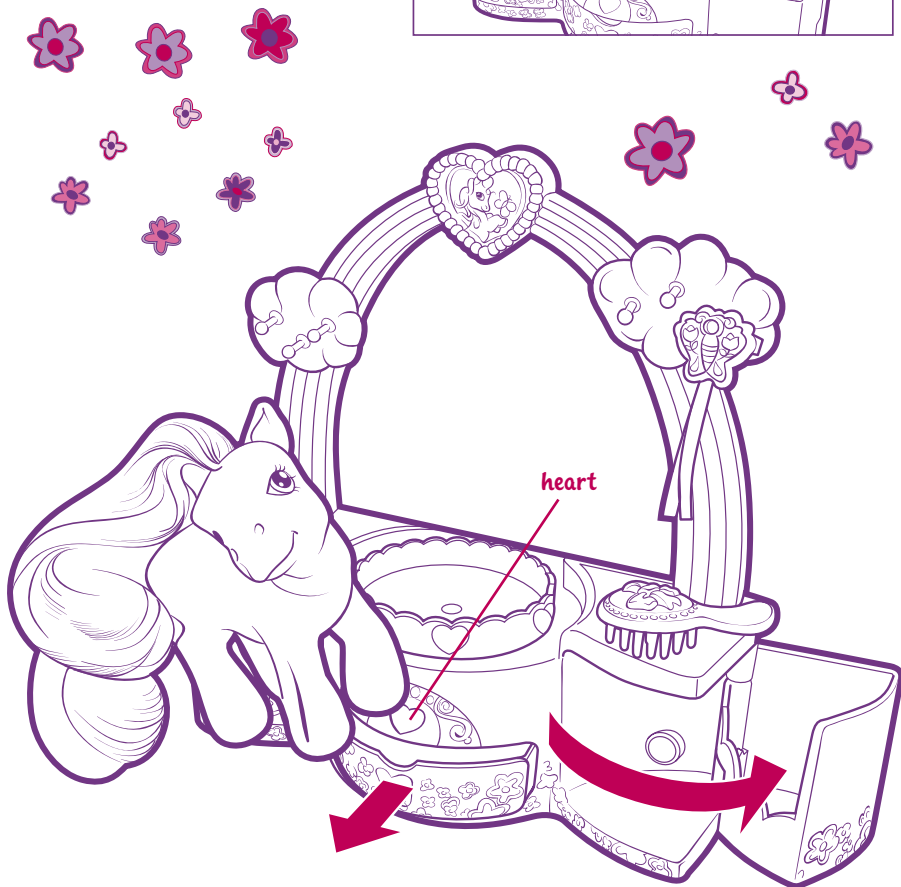


Hidden magnet inside SKYWISHES figure activates special feature! (Magnet is located in foot with MY LITTLE PONY logo on bottom.) Just touch pony’s magnetic foot to the heart shape on the jewelry box and the side drawers pop open!

Note: Feature can also be activated by other magnetic MY LITTLE PONY figures (sold separately).

## TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Remove exhausted batteries and replace with 2 x 1.5V fresh “AA” or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

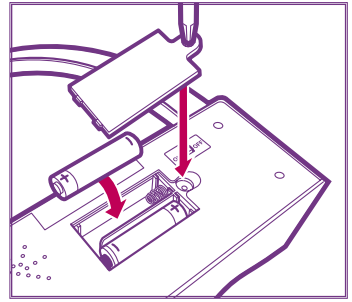

## CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.



## CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

