

AGES 3+

 
61984



Walking Sweet Steps™

Thank you for purchasing this My Little Pony® toy! For maximum play value, please read and follow instructions carefully.

Includes pony figure, walker, rattle, sippy cup, and brush. Pony and walker contain magnets.

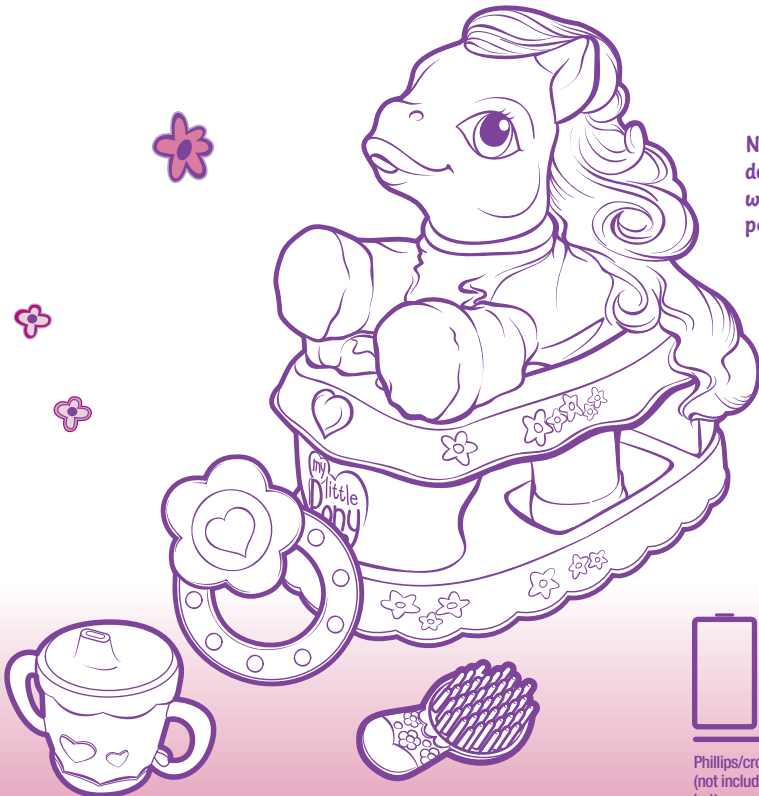

Note: Walker is designed to work with included pony only.



4x

1.5v C or LR14 size alkaline

**BATTERIES
REQUIRED**

 
Phillips/cross head screwdriver (not included) required for battery replacement.

TO PLAY

SWEET STEPS is a plush, cuddly pony you can play with in and out of her walker!


Place pony securely in the walker; make sure the pony's legs are placed all the way down into the walker and positioned as shown with the feet on either side of the center bar. Slide **ON/OFF** switch to the "ON" position, then press the heart-shaped **RESET** button. When LED light comes on, walker is ready for play.

RESET

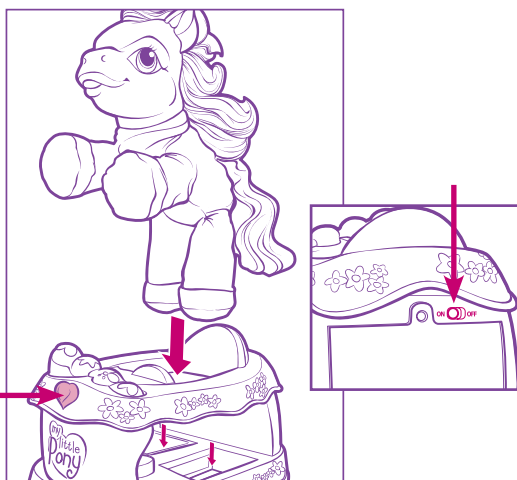

Clap your hands or shake the included rattle *in front of the pony* and pony will move forward and backward in random directions. As she does, her head will also move from side to side. When pony stops moving, clap or shake rattle again to reactivate. While seated in walker, pony will laugh or say any one of 9 phrases, such as "This is fun!" (Pony will not speak when out of walker.)

 After about 30 seconds of non-activation, toy will go into sleep mode and LED light will turn off. To reactivate, press the heart button.

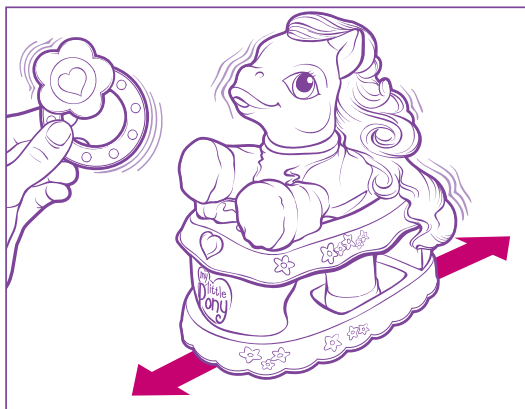

Please note

In order for toy to function:

- LED button must be on
- Included pony must be seated securely in walker
- Walker must be on floor

 
Toy may not function if used with any other pony figure. If toy is lifted off the floor while in play, activation will shut off within 1/2 second. Place on floor and clap or shake rattle to reactivate.

Note: Walker is designed to perform best on hard, smooth floors; may not function on other surfaces.

Note: The toy uses battery power whenever switch is in the "ON" position. To conserve batteries, move switch to "OFF" position when you're not playing with SWEET STEPS.

TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door and remove old batteries. Insert 4 x 1.5V fresh "C"/LR14 size alkaline batteries. Replace door and tighten screw.

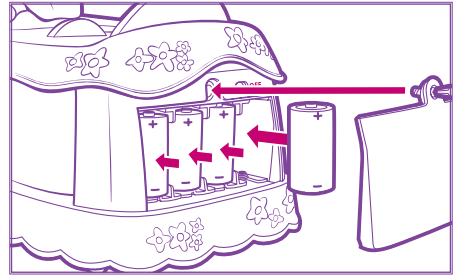

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

