




ADULT ASSEMBLY REQUIRED AGES 6 AND UP


CAUTION: Do not aim at eyes or face.

GOALIE SHOWDOWN™ HOCKEY


1 Snap goal post section into base.

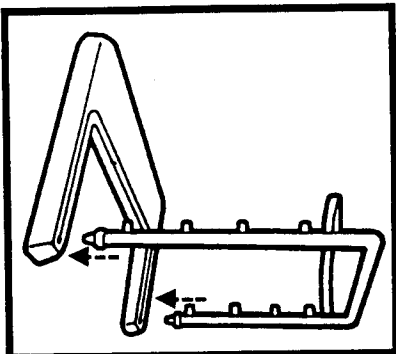


2 Spread one net over the outside of a goal post section as shown. Wrap net around goal post and hook over pegs.

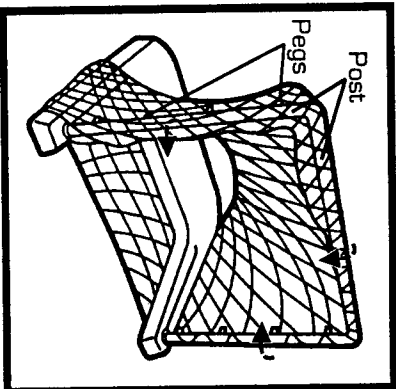


3 Snap trim over net and goal posts; the longer trim goes on top.

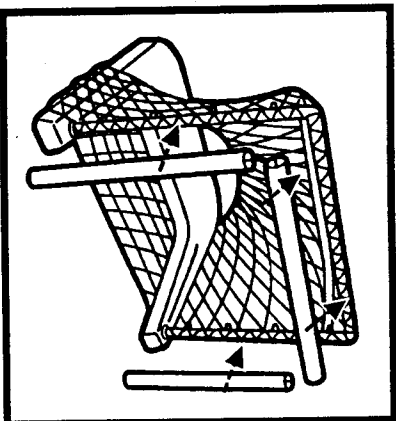


4 An adult should carefully cut through the bottom of the net from front to back.

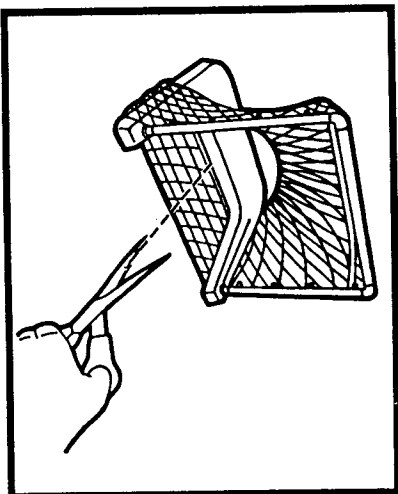


5 Thread net into slot and pull bottom edge through the base as shown.

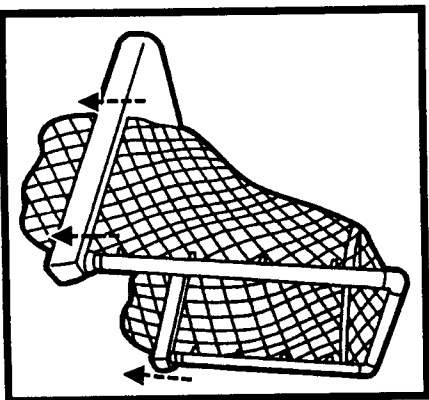


6 Pull net tight and snap back frame into the base. Trim excess net from bottom.

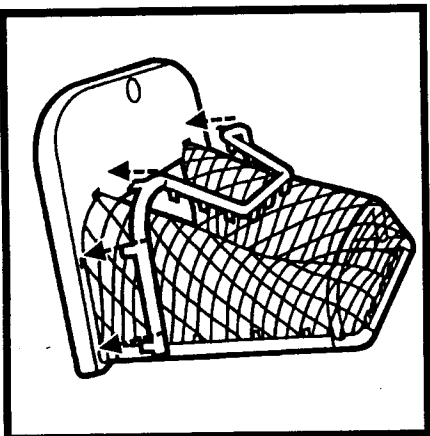

7 Wrap the net under and around the back frame to create an opening, securing the net over the pegs.

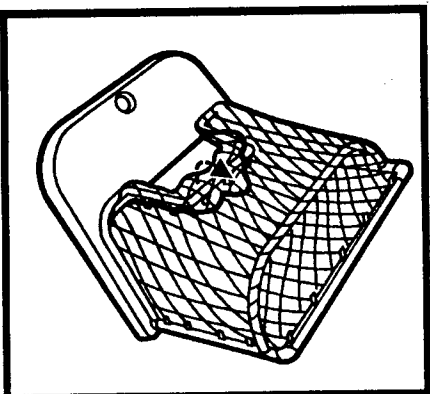


8 Snap shortest trim over net at top of back frame. Secure net to underside of base by stretching over pegs.

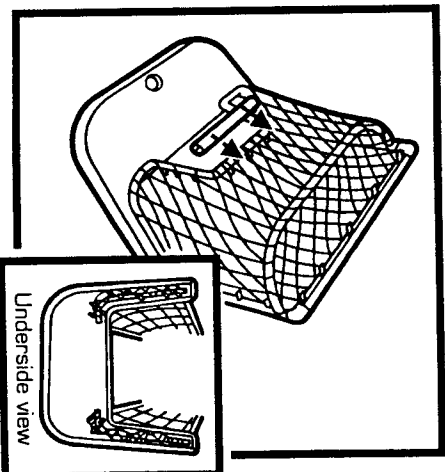

Underside view


Apply labels to each shooter as shown, using the tabs on the label sheet as guides. ● labels go on purple shooter. ■ labels go on yellow shooter.

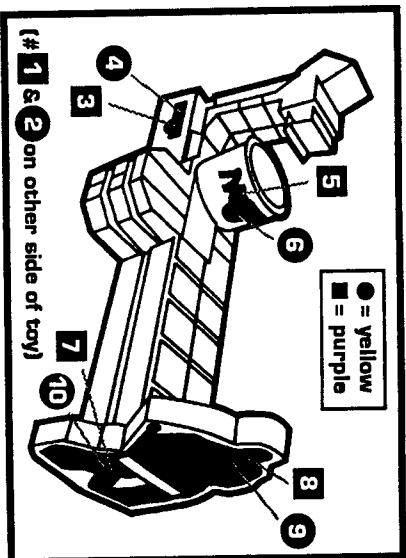

- PREPARATION:**
1. Load eight discs into their color-coded shooter. Tap them in place with your finger.
 2. Place shooters on a level, flat surface facing each other about six feet apart. The distance between them can be increased up to 10 feet apart as the skill of the players improves.
 3. Turn each shooter on. Pull the trigger to fire when you are ready to play.


THE PLAY:

Block and shoot at the same time. Move the goalie to the right or left by moving the handle. Even make him "jump" to block a shot. All while you are watching for an opening to fire and "get one past him" to score a goal.

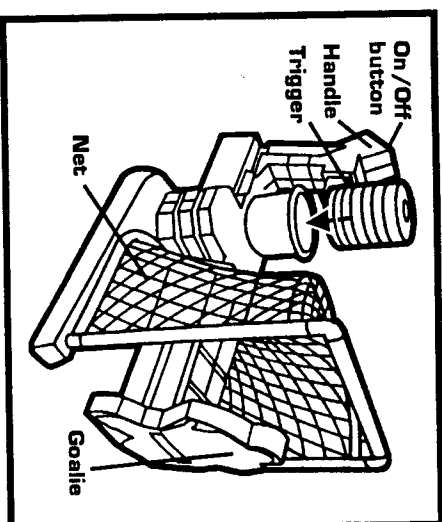


1. Pry open battery compartment door on each shooter with a screwdriver. Insert two AA batteries. Close door. Replace door.


CAUTION: To avoid battery leakage, 1. Be sure to insert the batteries correctly and always follow the toy manufacturer's instructions. 2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries. 3. Always remove exhausted batteries from the product.

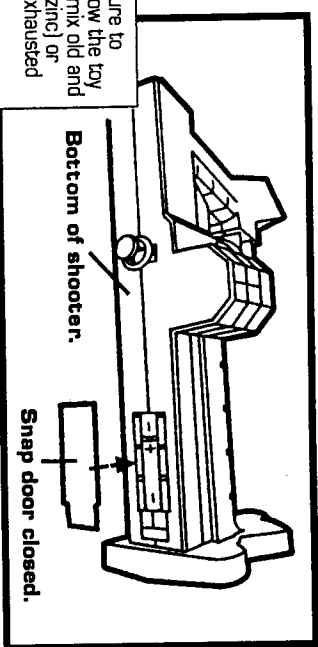

Select a shooter with same color as a goal. Insert it through the hole in the back of the net.

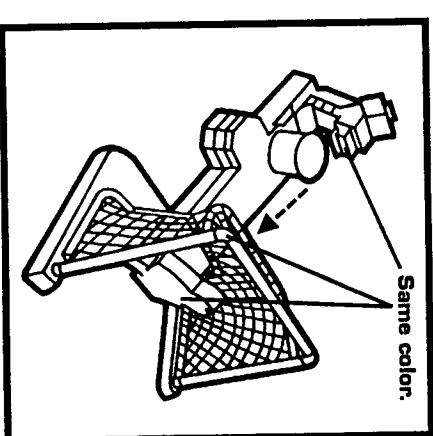


2. Snap shooter to the base by putting the peg on the bottom of the shooter through the hole in the back of the base.

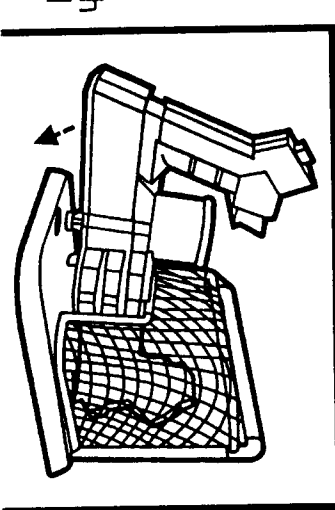

3. Repeat steps 1 through 3 with other net, base, and shooter.

SCORING: You make a goal each time your disc goes into your opponent's net (discs that are part of the way in the net or bounce out count as a goal).

WINNING: After all discs are fired the player with the most goals wins. Reload and play again and again.

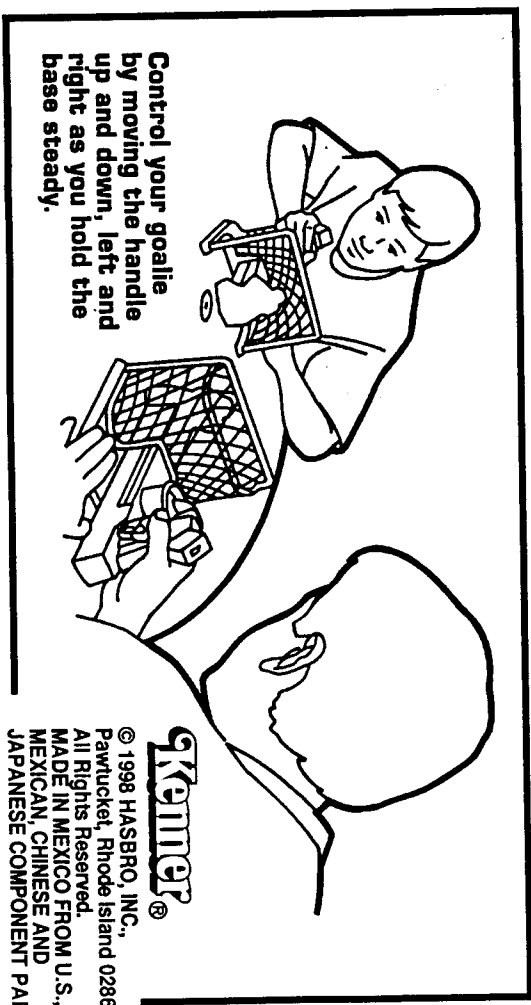

Control your goalie by moving the handle up and down, left and right as you hold the base steady.

Kemper®
 © 1998 HASBRO, INC., Pawtucket, Rhode Island 02862. All Rights Reserved. MADE IN MEXICO FROM U.S., MEXICAN, CHINESE AND JAPANESE COMPONENT PARTS
 53663101