




AGES 7 AND UP CAUTION: DO NOT AIM AT EYES OR FACE.



1. Apply labels using the numbers on the label sheet and the illustration below as a guide.

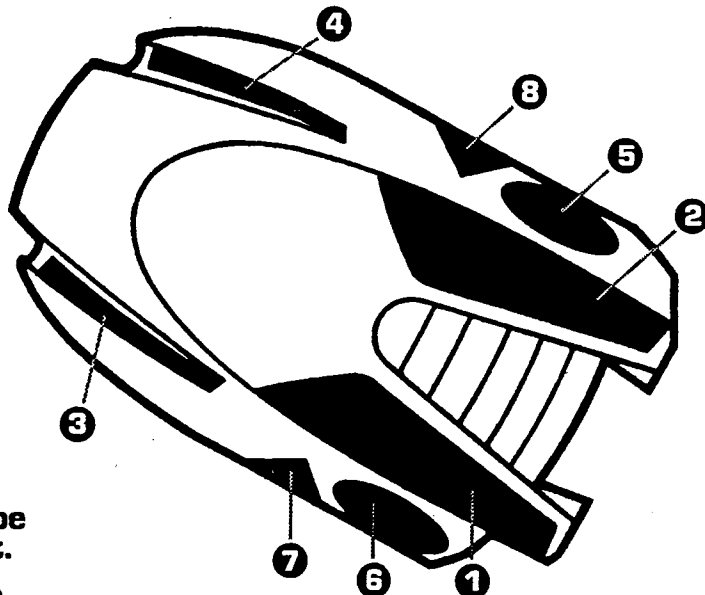

Labels 9 through 15 can be placed anywhere you want.



Kemper


©1998 HASBRO, INC., Pawtucket, Rhode Island 02862. All Rights Reserved.

MADE IN MEXICO.


US Patent No. 5,186,156

532821.01


2. To assemble the ammo belt, insert the T-posts into the holes and then pull to lock the sections together. Form the sections into a loop. Load the darts all the way into the tubes of the ammo belt.

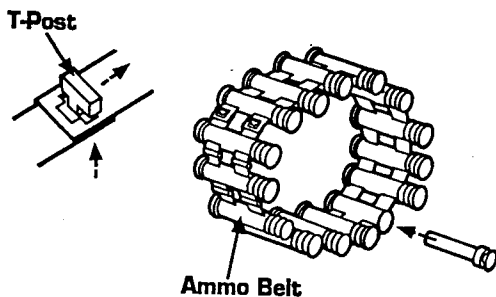


3. Attach hood by inserting the pegs on the hood (one side at a time) into the slots on the launcher, as shown.

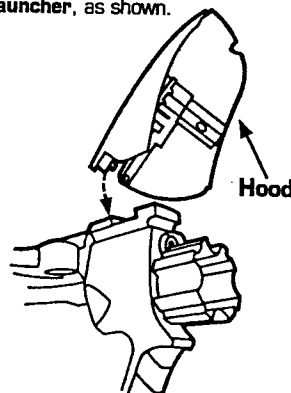


4. To load the ammo belt, position it inside the loading area and push a dart tube into the air disk. Push in and down until the tube sets in place.

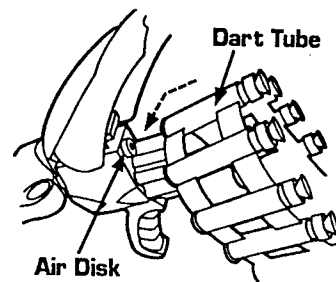

5. Pull the hood forward as you close it over the ammo belt. When it is all the way down, push the hood toward the back of the launcher to lock it. Hood must be locked before launching. Remember to pull the hood forward before you lift the hood to reload.

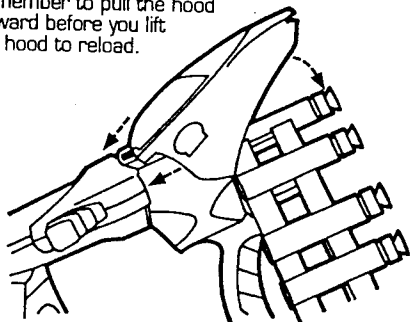

6. Strap the launcher onto your left arm.

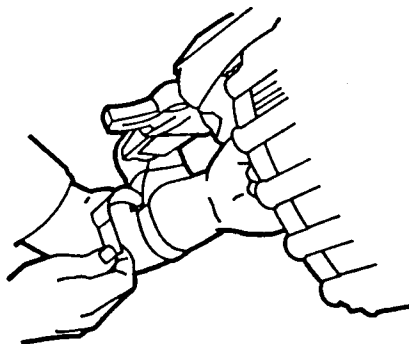

7. Pull the top handle all the way back to fire. Push the handle forward then pull it all the way back to fire again.

