


NEW KIDS ON THE BLOCK™

WIRELESS REMOTE


MICROPHONE

Instructions

BATTERY INSTALLATION

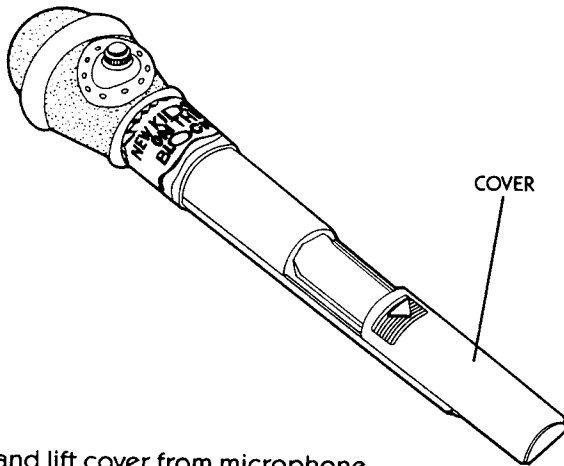

1. Slide and lift cover from microphone.

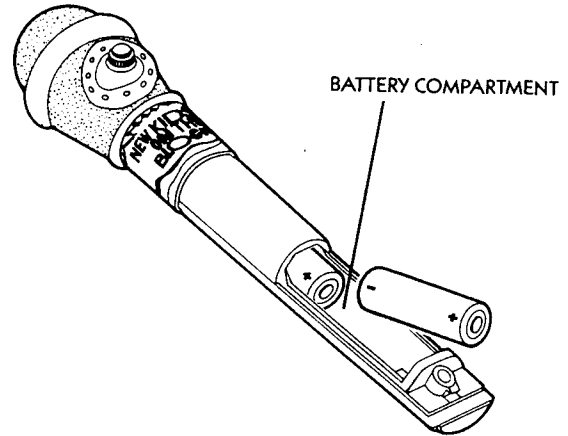

2. Insert 2 "AA" batteries into battery compartment as shown inside battery compartment and in illustration. Replace cover. (Alkaline batteries are recommended.)


CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.

ON/OFF SWITCH

TUNING RADIO AND MICROPHONE

1. Turn on radio (not included) to FM band. Tune radio into the static between stations (if you are using a stereo with muting feature, turn off muting to hear between-station static). Adjust radio volume to a moderate level.
2. Hold microphone near radio, and press ON/OFF button on side of microphone to switch microphone on. Turn frequency knob on microphone until radio static decreases. Depress and release ON/OFF switch on microphone to become familiar with the noise difference between on and off.
3. Hold microphone away from radio, and adjust radio to an appropriate volume. Use the frequency knob on the microphone to make the noise as low as possible. Note: Feedback may occur when radio volume is high or microphone is near speaker.
4. Press ON/OFF switch, and hold it down when using the microphone. Keep microphone approximately one inch away from your mouth when singing or speaking.
5. You can compose your own songs and sing them by yourself, or you can play your favorite New Kids on the Block music on another music system, and sing along with the guys!

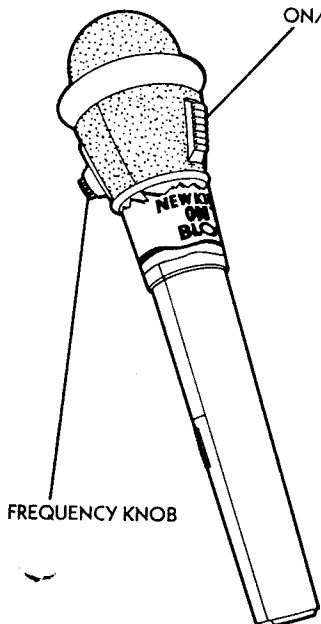

OWNER'S CHECKLIST

CONDITION	PROBABLE CAUSE	CORRECTION REQUIRED
Voice too soft	Radio volume turned down too low	Turn radio volume control up
Voice too loud	Radio volume turned up too high	Turn radio volume control down
Unit does not emit sound	Microphone tuned incorrectly Batteries are reversed Batteries are run down	Tune radio again to new static space and adjust as described in instructions Check batteries for correct position Try 2 new "AA" batteries
Increase in static	Batteries are run down Microphone tuned incorrectly Microphone out of usable range (approximately 30 feet depending on operating conditions)	Try 2 new "AA" batteries Tune radio again to new static space and adjust as described in instructions Remain in usable range and try tuning again

Limited Warranty on New Kids on the Block™ Microphone

Hasbro, Inc. warrants to the original purchaser of this product that the product will be free from defects in material or workmanship for 90 days from the date of original purchase. This warranty does not cover damage resulting from accident, unreasonable use, neglect, improper service, or other causes not arising out of defects in material or workmanship.

To obtain warranty service on your New Kids on the Block Microphone, please call our toll free hotline number (1-800-255-5516) and ask for Consumer Service so that we can provide you with instructions. If the unit is returned to us for service, you must pay the postage for mailing it to us. We will pay the cost of returning the product to you.

Please do not return your unit to the retailer. Do not return the unit to any address without authorization from Hasbro, Inc. Consumer Service Department.

During the 90-day warranty period, any defective product will either be replaced (not necessarily with a new product) or repaired at our option without charges to the purchaser.

Post Warranty Repair Policy

After the 90-day warranty period has expired, Hasbro, Inc. will, for a period of one (1) year from the date of purchase, either repair or replace (not necessarily a new product) your New Kids on the Block Microphone on the condition that you obtain authorization from the Hasbro Consumer Service Department. Ship the unit prepaid to the address provided along with proof of purchase date and your check or money order in the amount of \$7.50. Hasbro, Inc. shall not be obligated to perform this service if the New Kids on the Block Microphone has been abused, misused, improperly serviced, or damaged due to accident.

Hasbro, Inc. will not be held liable for loss of the product or other incidental or consequential costs, expenses, or damages incurred by the original purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

This warranty gives you specific legal rights. You may have other rights which vary from state to state.

Before returning your New Kids on the Block Microphone for repair, we recommend that you read the instructions carefully and test your product with fresh, strong alkaline batteries.

