 




# REMOTE CONTROL Pitching Machine INSTRUCTIONS




## BATTERY INSTALLATION

- 1 Remove screw from end of battery door.
- 2 Open cover by swinging up.
- 3 Insert 4 D-cell batteries as shown in Diagram A.  
(Alkaline batteries recommended. Not included.)  
Follow engraved + and - directions of the batteries.
- 4 Close cover and replace screw.

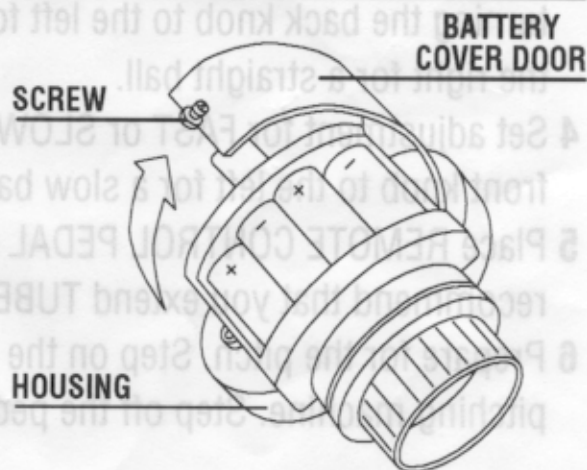


## ASSEMBLY INSTRUCTIONS

- 1 Plug loose end of **REMOTE CONTROL TUBE** into the **REMOTE CONTROL PEDAL**. (SEE **DIAGRAM B**)
- 2 Snap **HOUSING SUPPORT** into **BASE**. (SEE **DIAGRAM A**)
- 3 Place **BALL SHOOTER** into **HOUSING SUPPORT**. (SEE **DIAGRAM A**)
- 4 Slide **BALL HOLDER** into back of **HOUSING** and **BALL GUIDE**. Snap **BALL GUIDE** onto back of **BALL HOLDER**. (SEE **DIAGRAM C**)

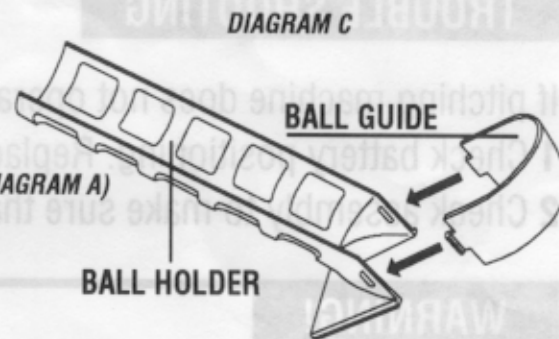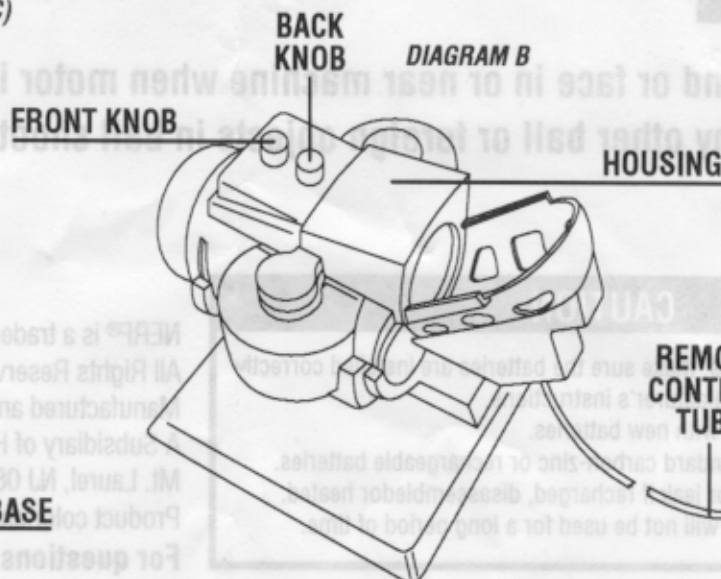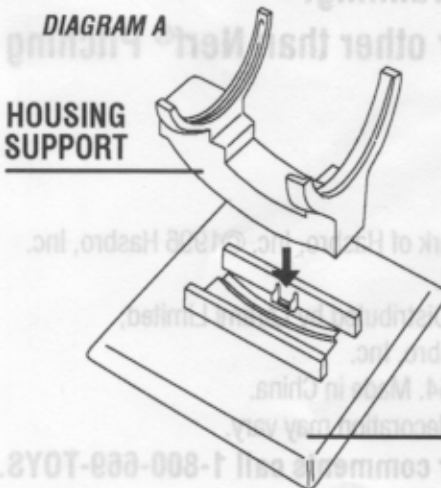

## PLAYING INSTRUCTIONS

- 1 TURN on your Nerf® Remote Control Pitching Machine by rotating the back knob right or left.
- 2 Adjust the ANGLE OF THE PITCH by rotating the housing support up or down, left or right.
- 3 Set adjustment to either STRAIGHT or CURVE pitch by turning the back knob to the left for a curve ball and to the right for a straight ball.
- 4 Set adjustment for FAST or SLOW pitch by turning the front knob to the left for a slow ball or to the right for a fast ball.
- 5 Place REMOTE CONTROL PEDAL at desired distance from the PITCHING MACHINE. (We recommend that you extend TUBE and PEDAL out all the way.)
- 6 Prepare for the pitch. Step on the remote control pedal to advance the ball into the pitching machine. Step off the pedal to pitch the ball.

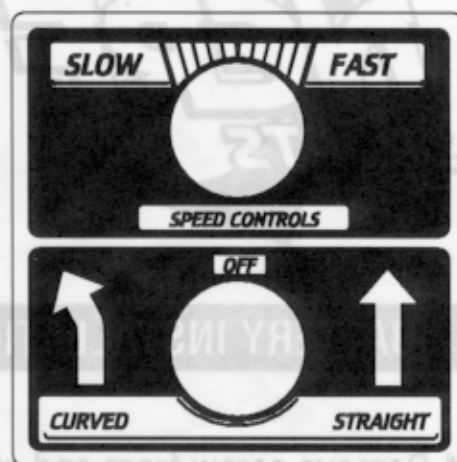

**NOTE:** Allow 10 seconds between pitches for the machine to attain proper speed and distance.

## TROUBLE SHOOTING

If pitching machine does not operate:

- 1 Check battery positioning. Replace worn-out batteries.
- 2 Check assembly to make sure that the pitching machine has been assembled correctly.

## WARNING!

- Never place hand or face in or near machine when motor is running.
- Do not place any other ball or foreign objects in ball shooter other than Nerf® Pitching Machine Balls.

## CAUTION:

- 1 When installing batteries, make sure the batteries are installed correctly and follow the toy manufacturer's instructions.
- 2 Never mix old batteries with new batteries.
- 3 Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- 4 Batteries may explode or leak if recharged, disassembled or heated.
- 5 Remove batteries if toy will not be used for a long period of time.

NERF® is a trademark of Hasbro, Inc. ©1996 Hasbro, Inc. All Rights Reserved.

Manufactured and Distributed by Larami Limited, A Subsidiary of Hasbro, Inc. Mt. Laurel, NJ 08054. Made in China. Product color and decoration may vary.

For questions or comments call 1-800-669-TOYS.