




Parts List:

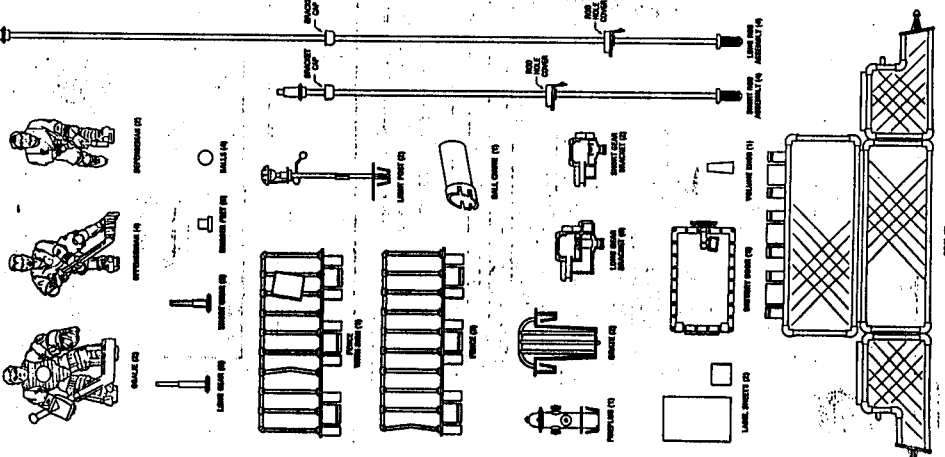

Please Read and Keep ASSEMBLY INSTRUCTIONS: Check all parts against parts list before assembling game. If you are missing a part or need help please call 1-800-327-8264. Assemble game in the order given in these instructions.

WARNING: CHOKING HAZARD—Toy contains small balls and small parts. Not for children under 3 years.

1. Turn game over so underneath side is up.


 
2 Assemble short gears and brackets.

Insert 2 short bracket assemblies in slots as shown. Refer to diagram for positioning.



3 Assemble long gears and brackets.


Insert 6 long bracket assemblies in slots as shown. Refer to diagram for positioning.

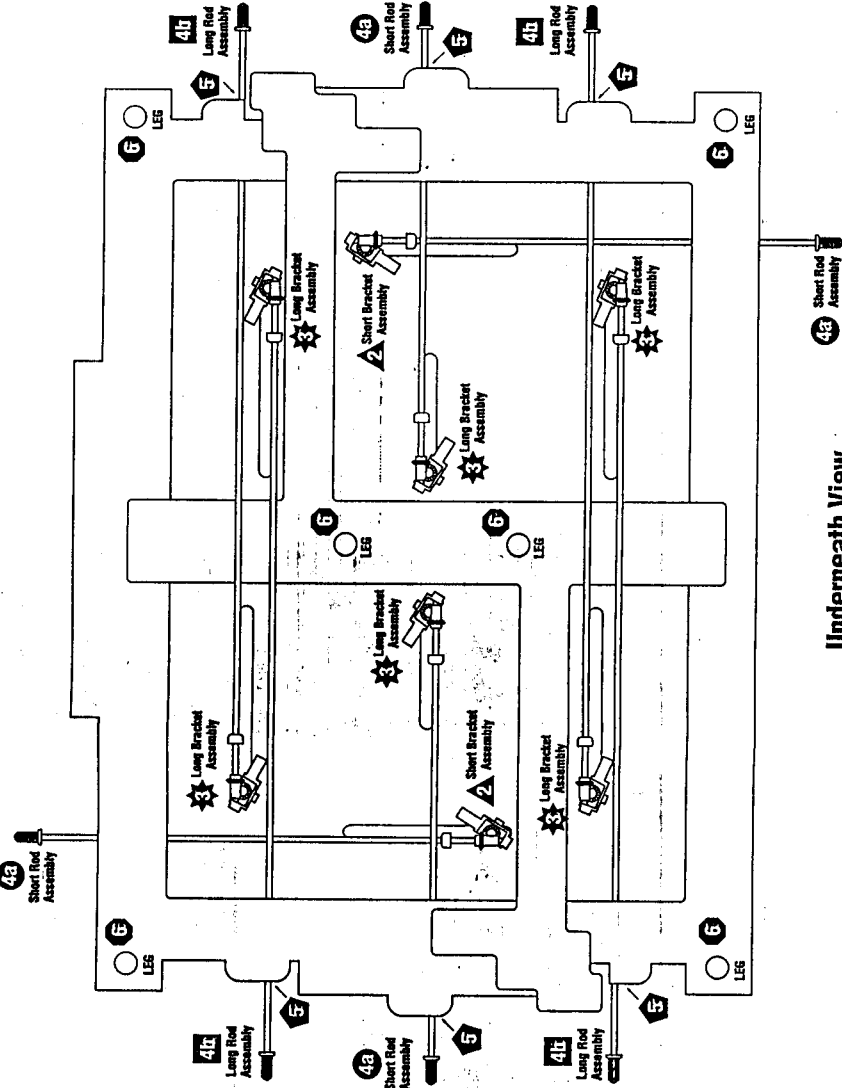

Underneath View


4a 4b

Insert rods.
Insert 4 short rod assemblies (4a) and 4 long rod assemblies (4b) in holes as shown in diagram. Snap gear brackets onto rods. Slide bracket cap onto end of bracket.

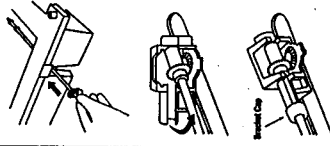


5

Snap rod covers in place.
Snap 8 rod covers into base as shown. When game is being stored slide all rods all the way into game.

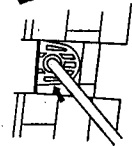

6

Insert rubber feet.
Insert 6 rubber feet all the way into the legs.

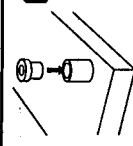

Now turn game and instructions over.

7. Insert batteries in back of building as shown in illustration to the left. Uses three "C" alkaline batteries.

Once the batteries are in, attach the battery compartment door.

Remove batteries for storage.

Push in on this tab to open battery door.

8. Set up building by removing and discarding rubber band and clips holding it in place. Rotate the building up 90° as shown and press it down into place.

Insert volume knob


Game Rules:

OBJECT: Score more goals than the opponent in three periods.


NUMBERS OF PLAYERS: 2 or 4

PLAYING THE GAME: Turn the scoreboard on and set the period length. Decide who is to ring the bell first. Press Start/Period button. A player then places the ball on the top edge of the building. Once the ball has been placed, the scoreboard will automatically start the game. The ball will be automatically in the playing field at the same time. Once the game starts, the scoreboard will count the goals. The opposing player now places a ball on the top edge of the building and the game continues until all the time periods are used. At the end of each period, the scoreboard will automatically press the Start/Period button at the end of each period. Start the next period. If the score is tied after three periods, the scoreboard automatically sets a two minute overtime period. The scoreboard will automatically start the overtime period. The winner on game records can be selected. The winner on game records can be selected. The winner on game records can be selected. The winner on game records can be selected.

 9. Attach parts and labels using the numbers on the label sheets and these illustrations as a guide.



Back Interior

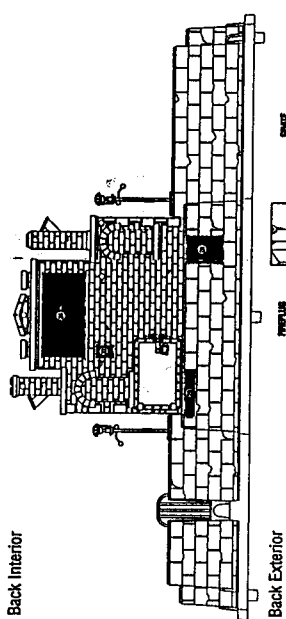

Back Exterior

Front Interior

Front Exterior

Scoreboard Functions:

START/PERIOD: Press to turn game on and off.

START/PERIOD: Press to start each period; horns will sound signaling start of period.

TIME OFF: Press to start time out. Game will pause and 4 minutes if game is in progress for any substitution of play. The team with the penalty called on them loses the ball and play starts over by the other team placing the ball on the top edge of the building.

START/PERIOD: Press to start the game. The ball will be placed in the game's ball stop and the play continues. The clock will continue to run during this process.

TIME OFF: Press time out button to pause game. Press a second time to start game again.

NOTE: If electronics do not appear to work, please check phone number.

NOTE: Game will automatically shut off after four minutes of no activity.

NOTE: Game will automatically shut off after four minutes of no activity.

NOTE: Game will automatically shut off after four minutes of no activity.

NOTE: Game will automatically shut off after four minutes of no activity.

WARRANTY

TERRA CORPORATION 90 DAY WARRANTY

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.


Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.


Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

Scoreboard is warranted for 90 days from the date of purchase. If the scoreboard is found to be defective within this period, it will be repaired or replaced at no charge. This warranty does not cover damage caused by misuse, accident, or fire.

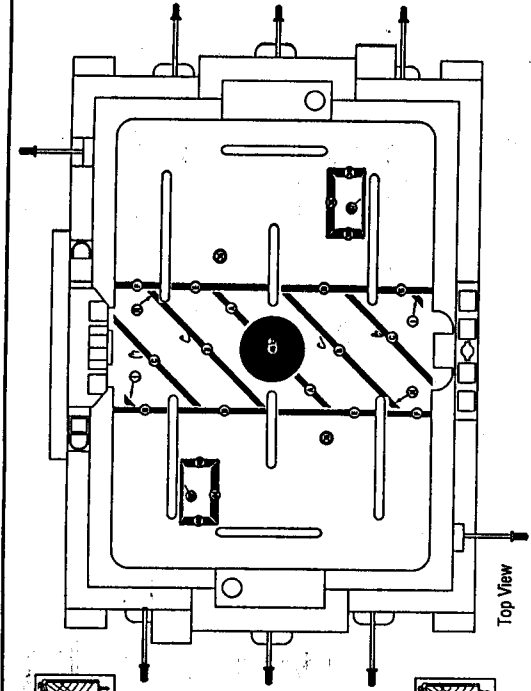

Top View

10. Insert players on pins as shown in this diagram. Check to make sure the square pin is lined up properly with the square hole in bottom of the player's foot and that the players are fully seated on the pins to insure proper height of hockey sticks.

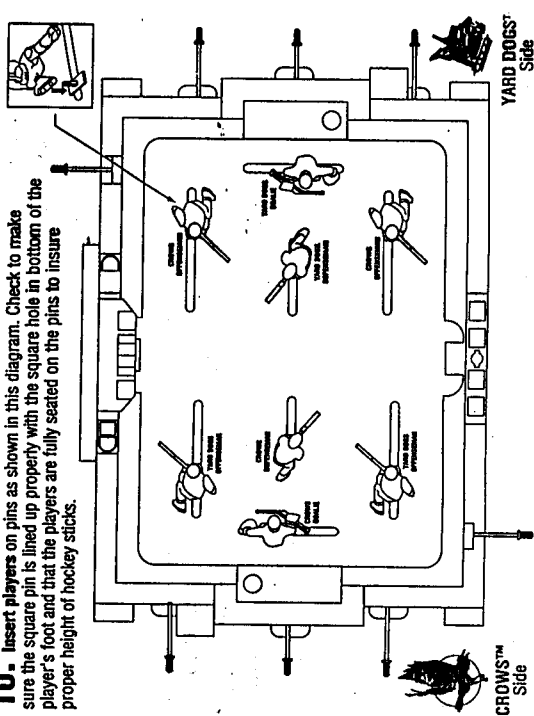

CROWS™ Side

YARD DOGS™ Side