



Commlink II™

1 Apply labels using the numbers on the label sheet and using these illustrations as a guide. Snap peg on each part into each hole in launcher as indicated in the illustrations below.

"COMMAND"

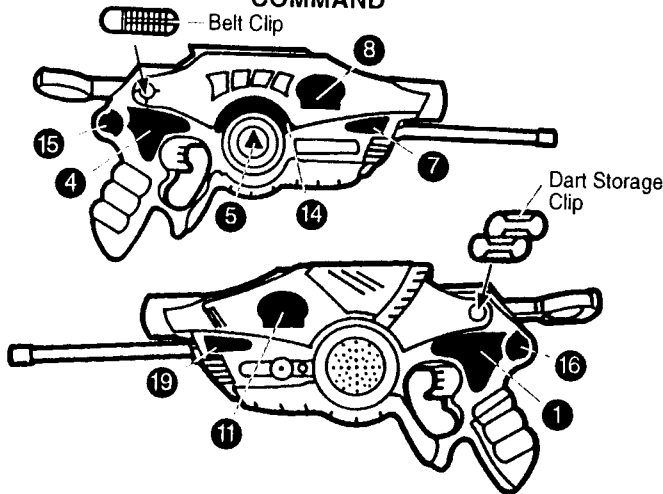


"RECON"

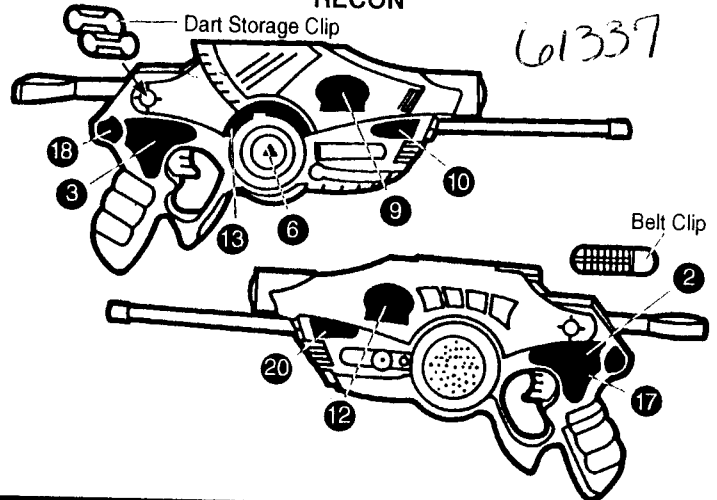


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and 2) this device must accept any interference received, including any interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


2 Pull back **handle** until it locks in place. Load a dart all the way into the barrel. Pull the **trigger** to fire.

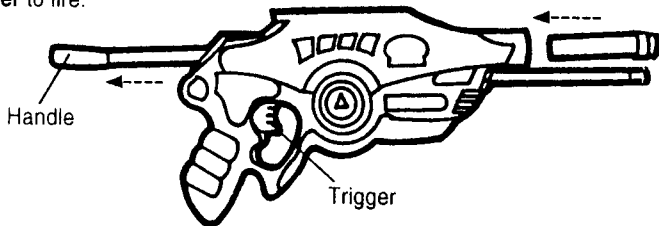

3 Use the belt clips to carry the launchers at your side.

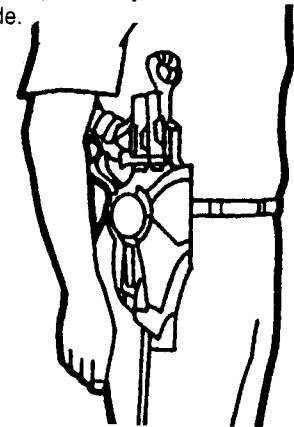

4 By turning the **on/off volume knob** on the side of each launcher you can adjust the volume of the **speaker**. Press the **talk control button** when you want to talk to a person carrying the other launcher. You need to speak close and directly into the speaker. You can send Morse code signals to the other launcher by holding the talk button down while pressing the **code button** as shown. Use the Morse Code chart below. The dot (·) is a short beep, and the dash (-) is a longer beep.

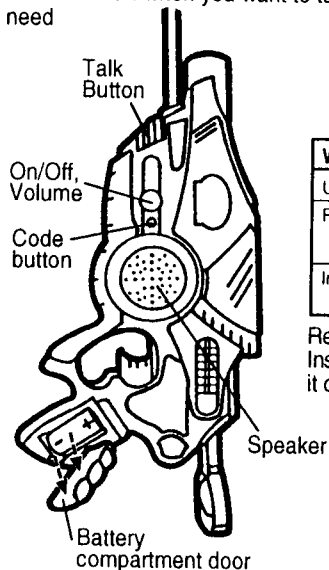

Morse Code			
A ·-·	L ····	W ·-·	7 ····
B ····	M ·-·	X ·-·-	8 ····
C ·-·-	N ···-	Y ·-·-	9 ····
D ···	O ···-	Z ···-	0 ···-
E ·	P ····	1 ···-	
F ····	Q ···-	2 ····	
G ·-·-	R ····	3 ···-	
H ····	S ···-	4 ····	
I ··	T ·-·	5 ····	
J ···-	U ···	6 ····	
K ·-·	V ···-		

What's the Problem/Here's the Remedy:	
Unit does not work.	Replace battery with a 9-volt alkaline battery.
Range is decreased.	Replace battery with a 9-volt alkaline battery. Please note that this product may have trouble transmitting through obstacles such as trees, buildings, and metal structures.
Increase in static.	May be due to nearness of one or more of the following: electric motors, fluorescent lights, and power lines. Change location.

Remove screw and **battery compartment door** from the handle of each launcher. Install a 9 volt alkaline battery in each. Replace the compartment door and screw it closed.

Kenner®

©1997 HASBRO, INC.,
Pawtucket, Rhode Island 02862.
All Rights Reserved.
Made in China.
Darts Made in Mexico.
537353.00