






Eagle Eye™

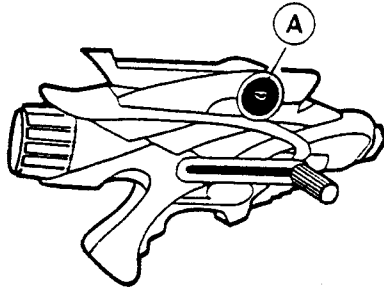


1. Apply label A. to location shown.

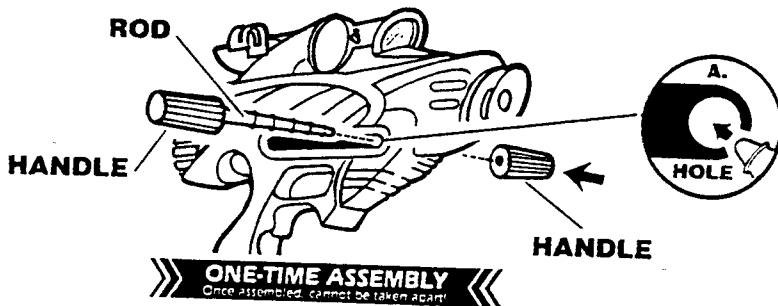


2. **A. IMPORTANT:** Carefully insert **ROD** all the way into the hole in the base unit so that the **HANDLE** touches the base unit.
B. Snap on other handle, trapping the rod inside the base unit.

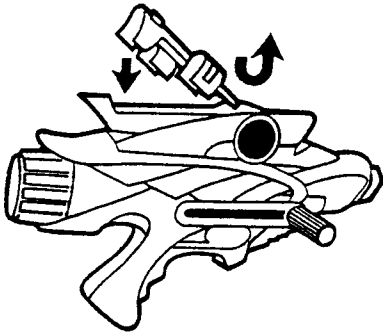

3. Attach dart storage clip by hooking clip under front lip. Push down until it snaps in place as shown.

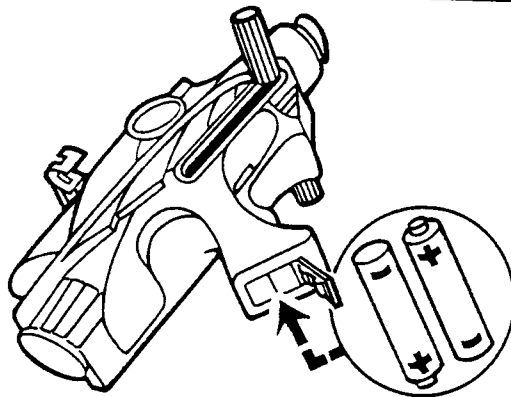


4. Slide and lift open battery compartment door. Insert two AA alkaline batteries in position as shown. Then close battery compartment door.

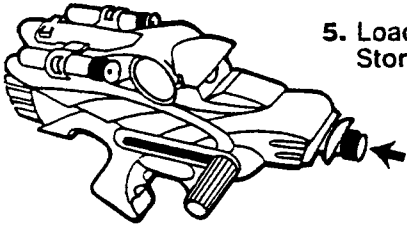

5. Load dart **ALL THE WAY** into the barrel. Store other darts in dart holder as shown.


6. Quickly pull handle(s) **all the way back and release** to prepare to fire. Pull trigger back part way to turn on the sight beam. Aim so the beam is on the target. Pull the trigger the rest of the way back to fire.

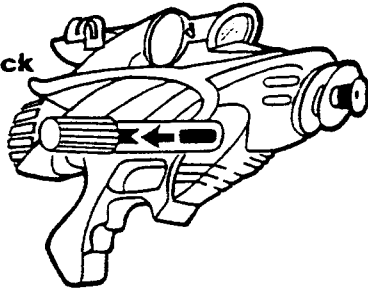


TROUBLE SHOOTING

SIGHT BEAM ADJUSTMENT

Adjust the sight by pulling the trigger until the light comes on. Then move light up, down, or from side to side by moving the lens using the small posts.

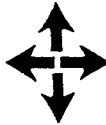


POST

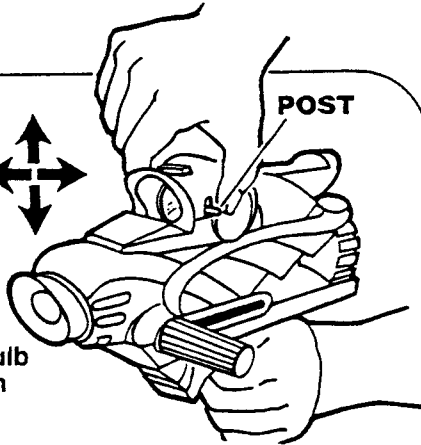


LIGHT BULB REPLACEMENT

If light doesn't come on, check batteries and make sure bulb is inserted correctly (see below). If bulb needs to be replaced use a Krypton PR 104 bulb.

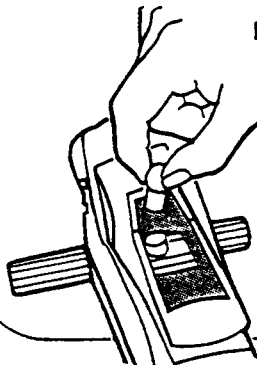


NOTCH

RIB

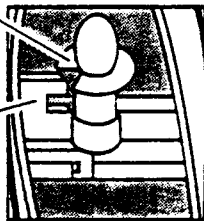

Line up notch with rib, press down and turn bulb.

NOTCH

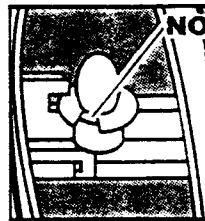

Light bulb correctly positioned under rib.

Kenner

© 1994 Kenner, a division of Tonka Corporation, Cincinnati, Ohio 45202

U.S. Patent Pending

51204101