

NERF



BRAND

MAX FROZEN

ELECTRIC EEL™


AGES 6 AND UP

- 1 Apply a label to each dart and to both sides of the launcher as indicated in the illustrations below.

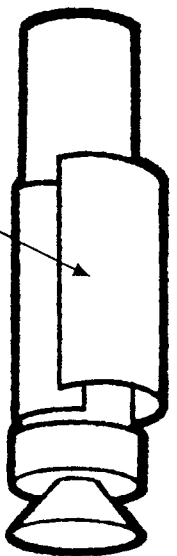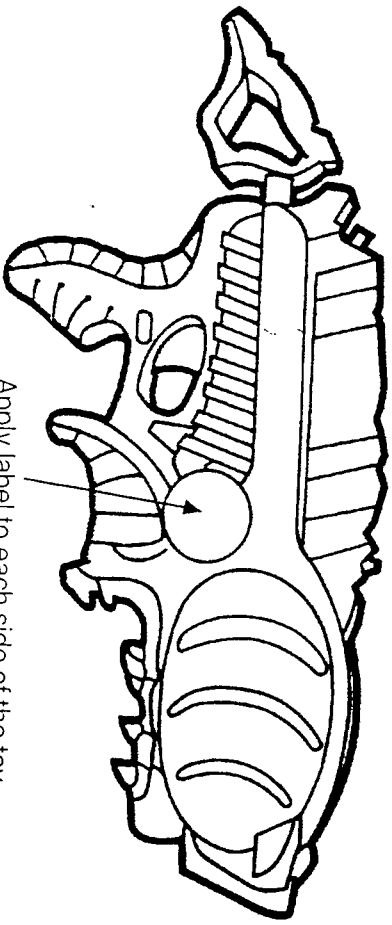

- 2 An adult should remove the screw and battery compartment door. Install two "AA" alkaline batteries as shown. Replace screw and door.


Two "AA" batteries

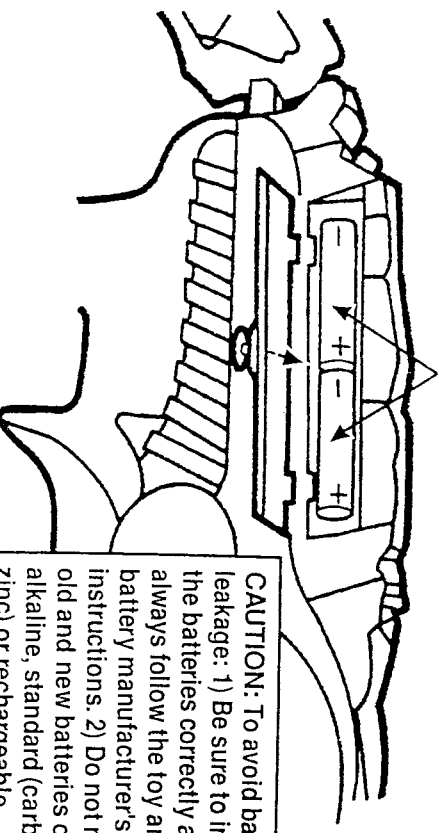

- 3 Turn on launcher's flash unit by moving the switch to the up position. (Be sure to turn the switch off before storage). A red indicator light will glow to show you the flash unit is "ON".

Switch


Indicator light

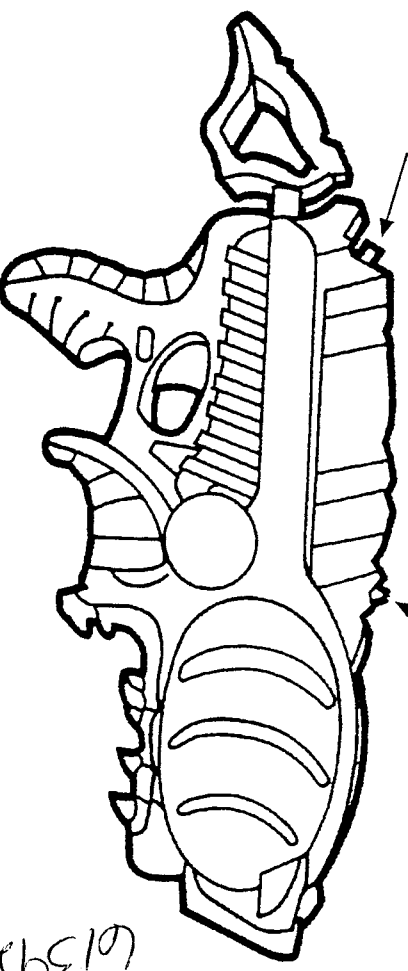


CAUTION: DO NOT AIM AT EYES OR FACE.

535359 00


the all the way into the tubes of the clip.

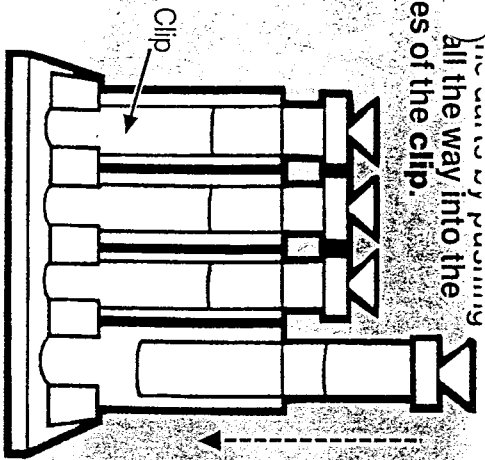


6 Pull the **plunger** out until it stays. Now the launcher is ready to fire.

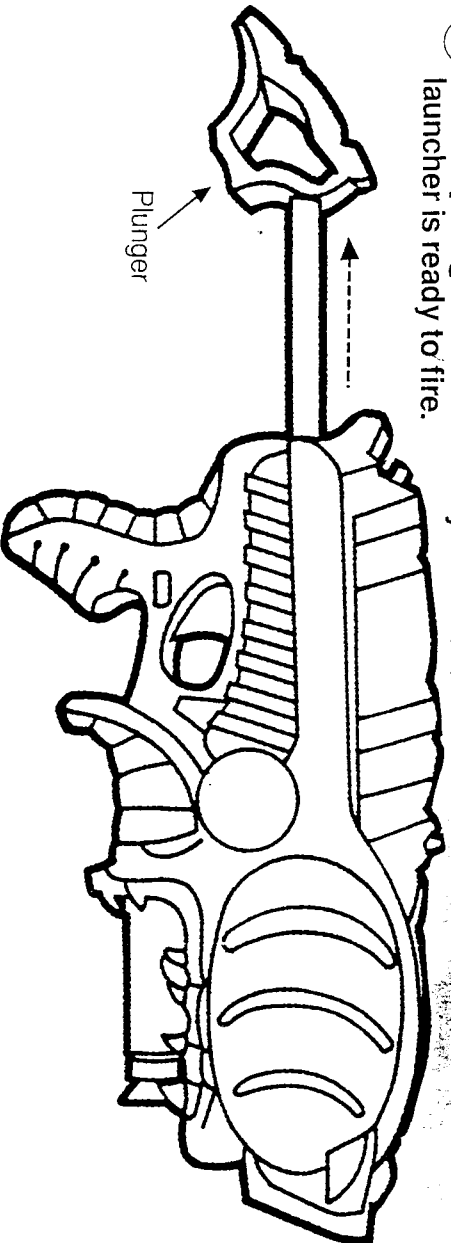

the loaded clip into the back of the bottom of the launcher until you hear a light click. After firing all the darts, empty/clip from the top. Move the

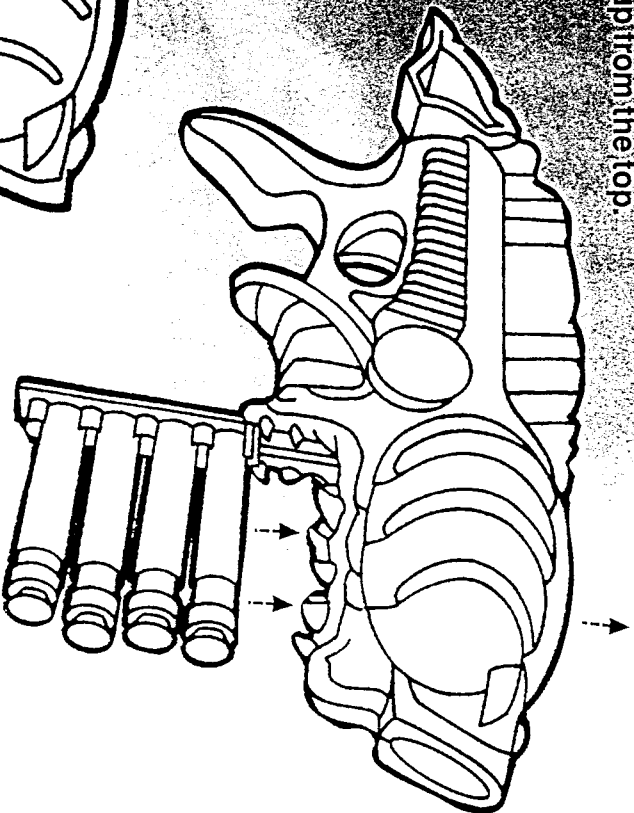

7 Aim. Pull the **trigger** to fire a dart. Pull the plunger to move the next dart into firing position and cock the launcher. (Please note: after a period of use, it may take **longer** for the batteries to completely recharge the flash unit. If you fire the darts and the flash unit does **not** flash, it may not have had time to recharge. If this happens, you may want to replace the batteries).

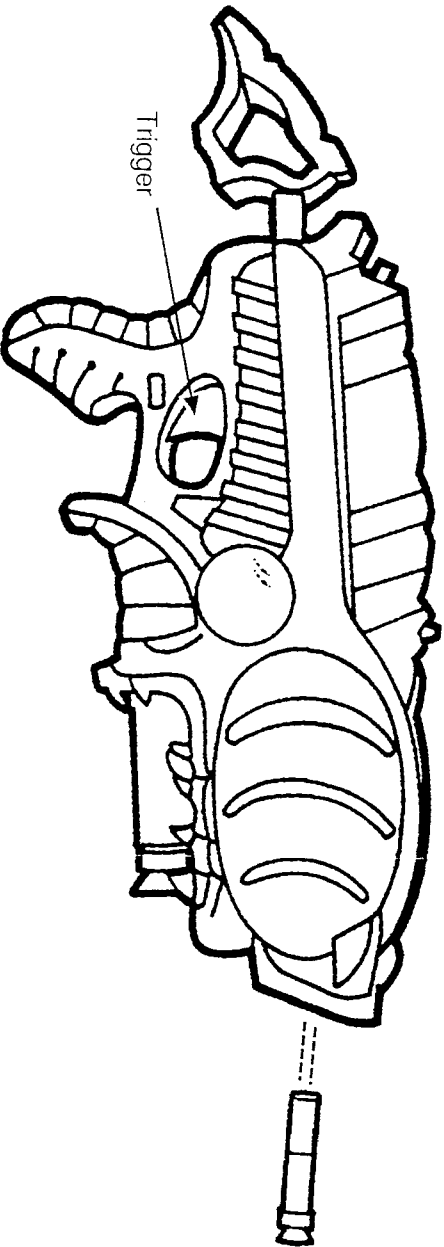

IMPORTANT: This launcher contains high voltage components. To avoid any risk of electrical shock, do not attempt to take it apart.

KEMNER
INC.

© 1996 HASBRO, INC.
Pawtucket, Rhode Island 02862
All Rights Reserved
MADE IN CHINA
PARTS MADE IN MEXICO
U.S. PATENT PENDING