




**1. Apply labels to the *unassembled* pieces using the numbers on the label sheet and these illustrations as a guide.**

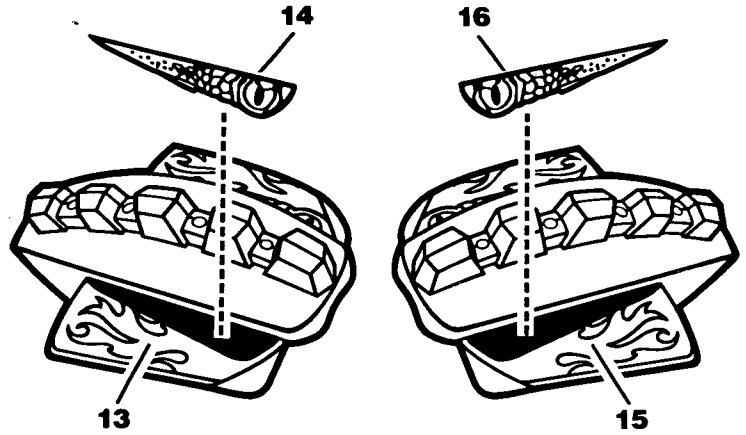

**Apply label number 13 first. Next, apply number 14. Repeat other side with numbers 15 and 16.**

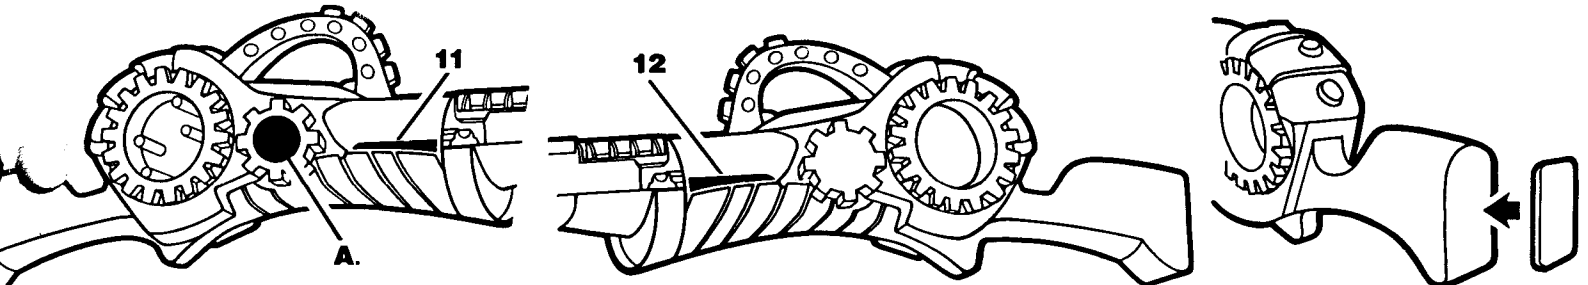


**Peel off backing and stick foam pad on end of stock.**

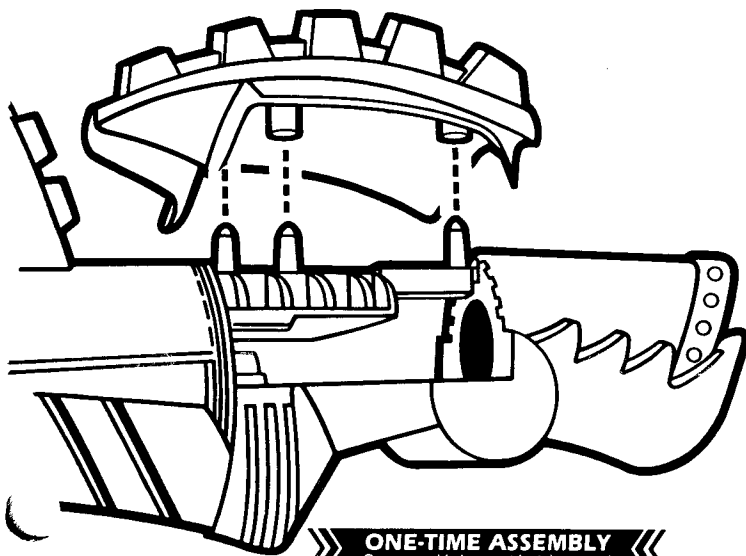


**ONE-TIME ASSEMBLY**  
Once assembled, cannot be taken apart!

**2. Snap belt cover onto the three pegs on tootside of barrel.**

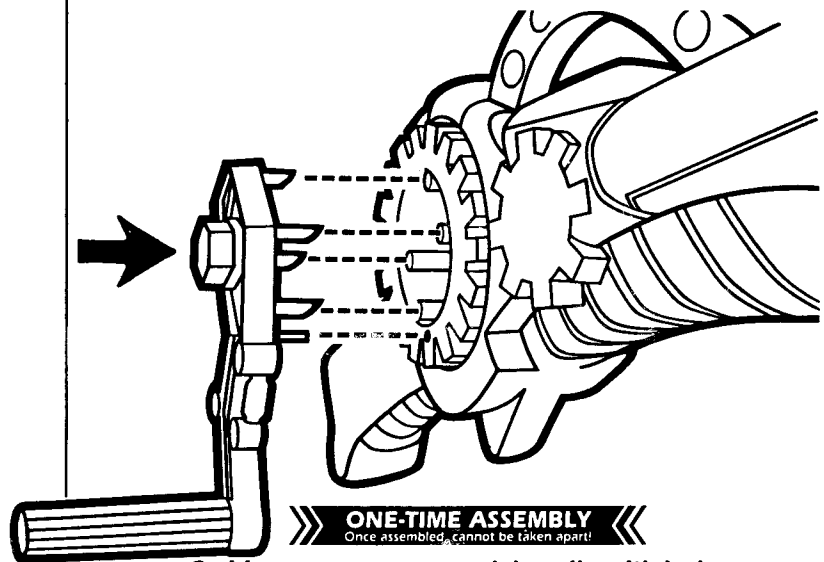


**ONE-TIME ASSEMBLY**  
Once assembled, cannot be taken apart!


**3. Line up pegs on crank handle with holes. Snap on crank handle.**

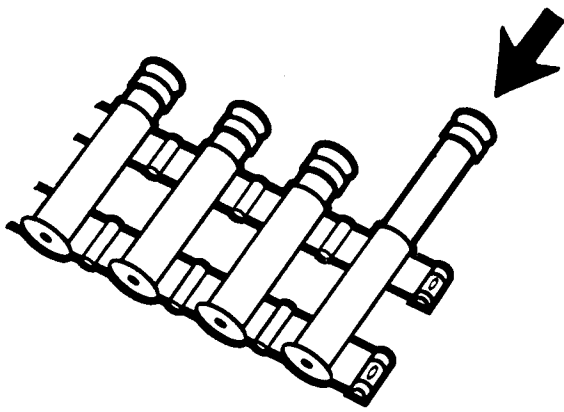


5. Load darts into ammo belt sections. Push darts all the way inside.

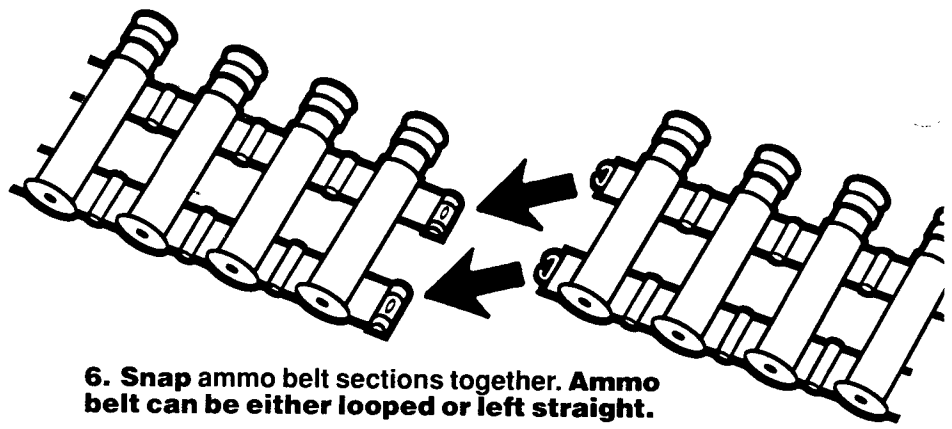


6. Snap ammo belt sections together. Ammo belt can be either looped or left straight.

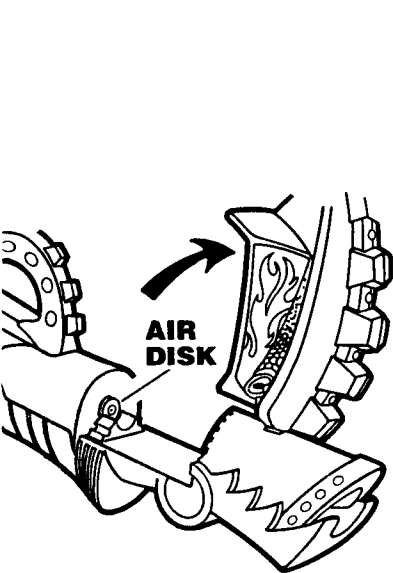


7A. To load ammo, lift belt cover.

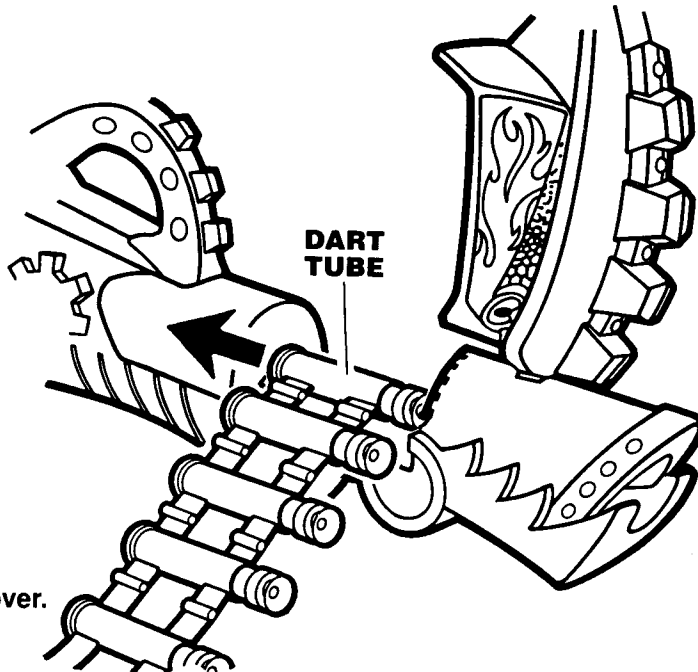

7B. Position a dart tube inside loading area by pushing **AIR DISK** into body of toy **WITH DART TUBE** until the tube locks into place.

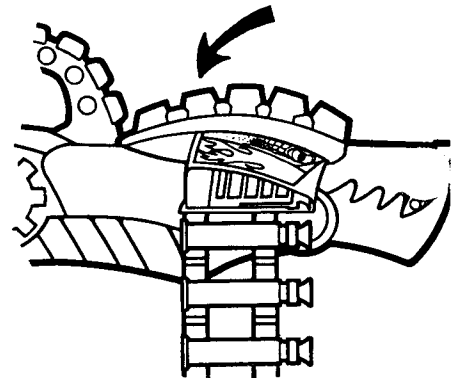

7C. Close and firmly snap belt cover shut.

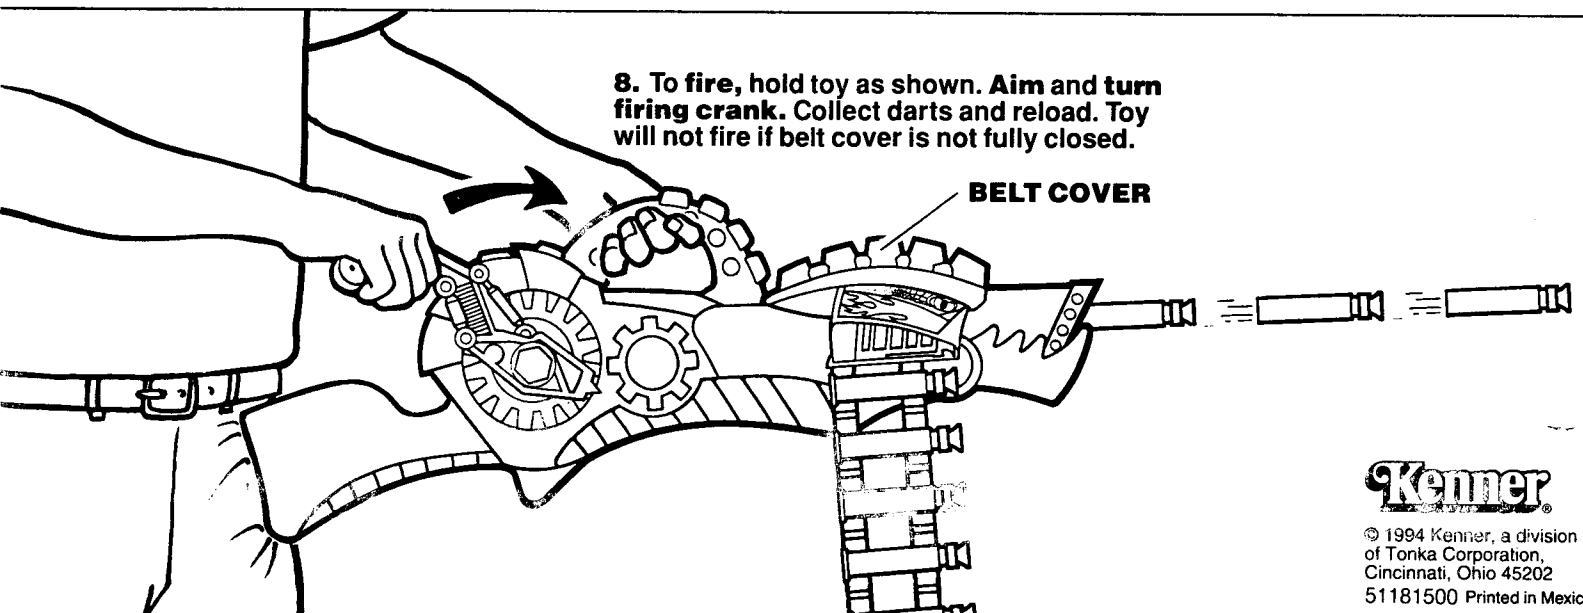

8. To fire, hold toy as shown. Aim and turn firing crank. Collect darts and reload. Toy will not fire if belt cover is not fully closed.

**Kenner**

© 1994 Kenner, a division of Tonka Corporation, Cincinnati, Ohio 45202

51181500 Printed in Mexico