

# INSTRUCTIONS


AGES 6+



## CAUTION:


Do not aim at eyes or face. To Avoid Injury: Use only darts designed for this product. Do not modify darts or dart launcher.

1

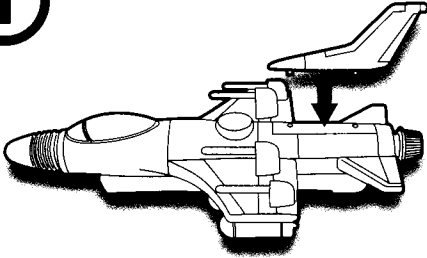


1. Align posts or rear wing with holes in top of airplane body. Press firmly into place.

2

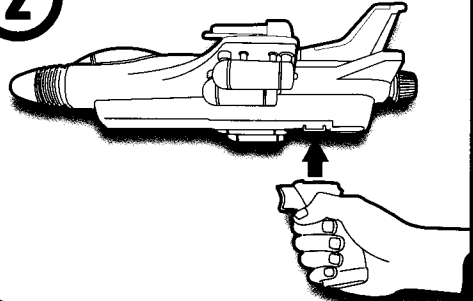


2. Place the hand grip into bottom of airplane body attaching the trigger to the airplane mechanism.

3

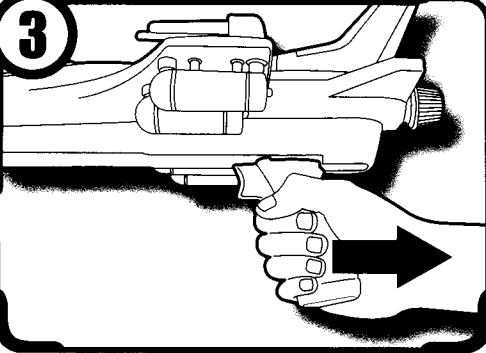

3. While holding upper portion of Airplane, pull back on handle to lock into place.

4

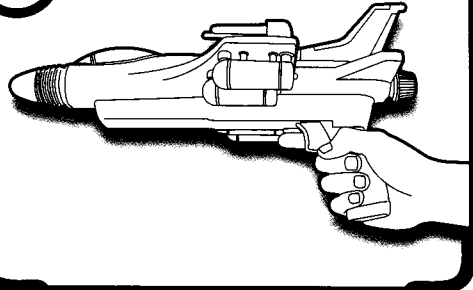

4. Complete assembly.



45570

For questions or comments  
call 1-800-669-TOYS.

**NERF.COM**  
FOR NEW PRODUCTS AND OFFERS



Product and colors may vary.  
©2002 Hasbro, Pawtucket, RI 02862  
U.S.A. All rights reserved. AIR TECH  
and JET SQUADRON are trademarks  
of Hasbro. Printed in China.  
© denotes Reg. U.S. Pat. & TM Office.

