


NERF
HEAD 2 HEAD
BRAND


ADULT ASSEMBLY REQUIRED AGES 6 AND UP CAUTION: Do not aim at eyes or face.

Goalie Showdown™ Hockey


1 Snap goal post section into base.

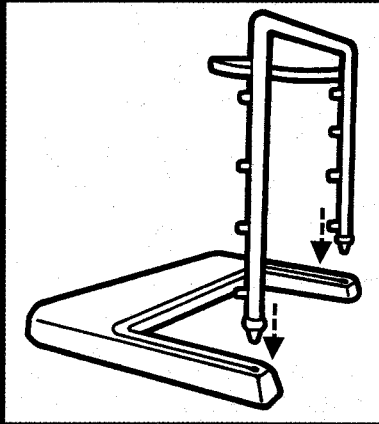


2 Spread one net over the outside of a goal post section as shown. Wrap net around goal post and hook over pegs.

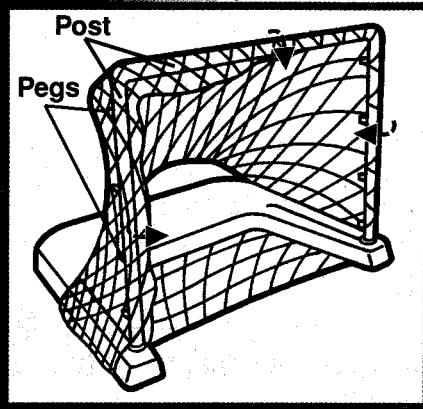


3 Snap trim over net and goal posts; the longer trim goes on top.

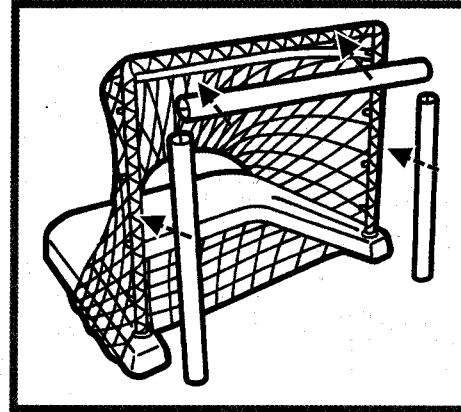


4 An adult should carefully cut through the bottom of the net from front to back.

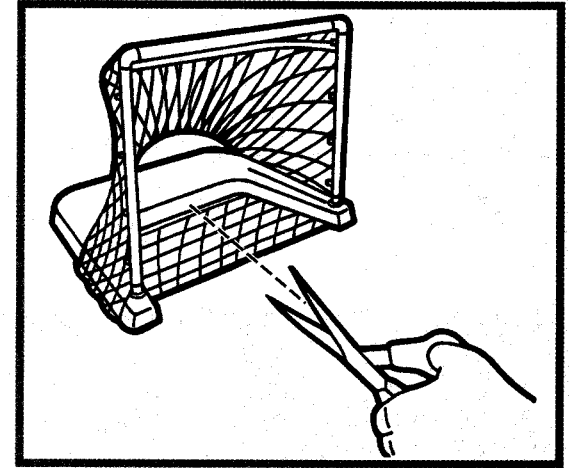


5 Thread net into slot and pull bottom edge through the base as shown.

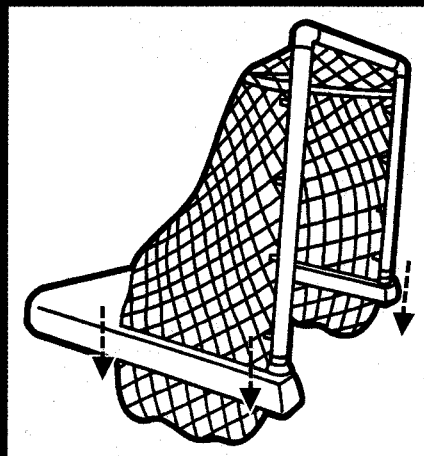


6 Pull net tight and snap back frame into the base. Trim excess net from bottom.

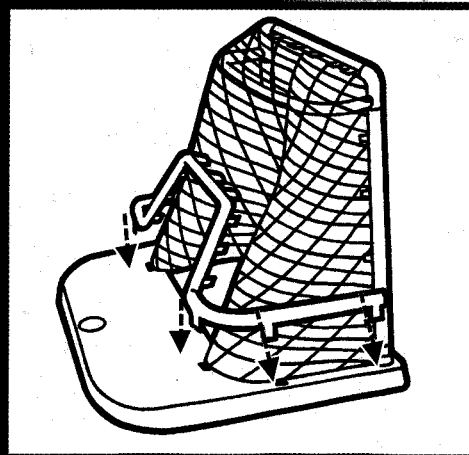

7 Wrap the net under and around the back frame to create an opening, securing the net over the pegs.

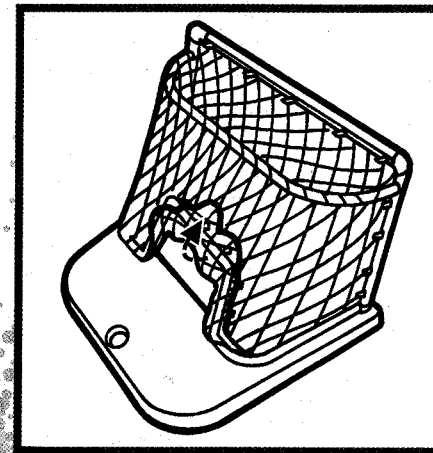


8 Snap shortest trim over net at top of back frame. Secure net to underside of base by stretching over pegs.

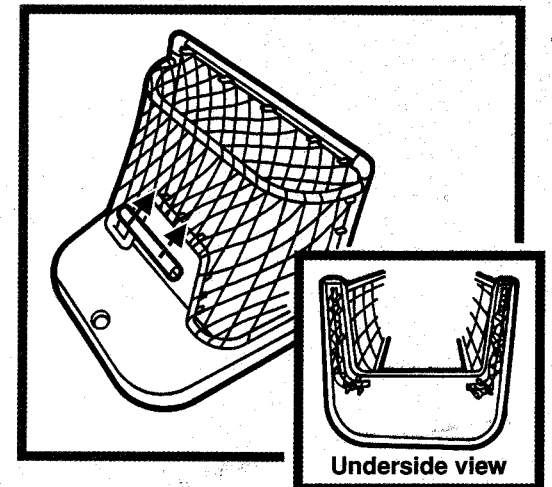


61367

9 Apply labels to each shooter as shown, using the numbers on the label sheet and these illustrations as a guide. ○ labels go on yellow shooter. □ labels go on purple shooter.

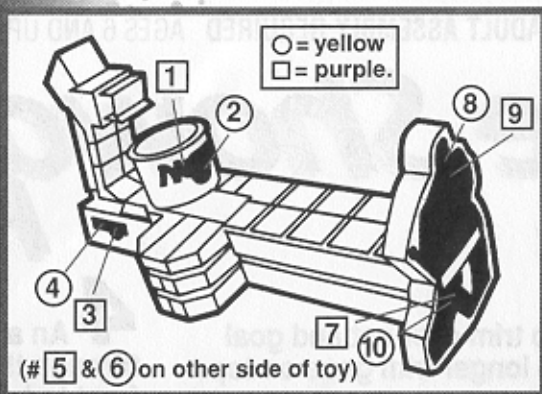


10 Pry open battery compartment door on each shooter with a screwdriver. Insert two AA batteries as shown. Replace door.


CAUTION: To avoid battery leakage, 1. Be sure to insert the batteries correctly and always follow the toy and manufacturer's instructions. 2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries. 3. Always remove exhausted or dead batteries from the product.

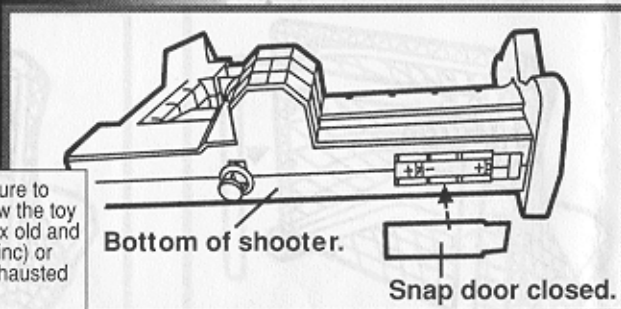

11 Select a shooter with the same color as a goal. Tilt goalie as shown and insert it through the hole in the back of the net.

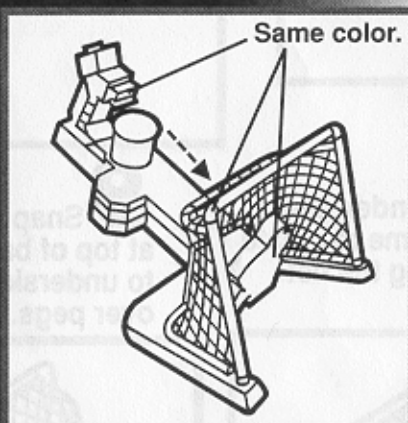


12 Snap shooter to the base by putting the peg on the bottom of the shooter in the hole in the back of base.

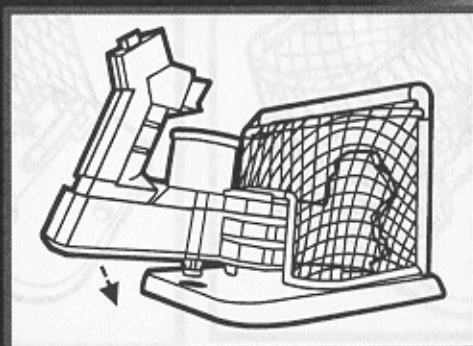

13 Repeat steps 1 through 12 with other net, base, and shooter.

PREPARATION:

1. Load eight discs into their color-coded shooter. Tap them in place with your finger.
2. Place shooters on a level, flat surface facing each other about six feet apart. The distance between them can be increased up to 10 feet apart as the skill of the players improve.
3. Turn each shooter on. Pull the trigger to fire when you are ready to play.

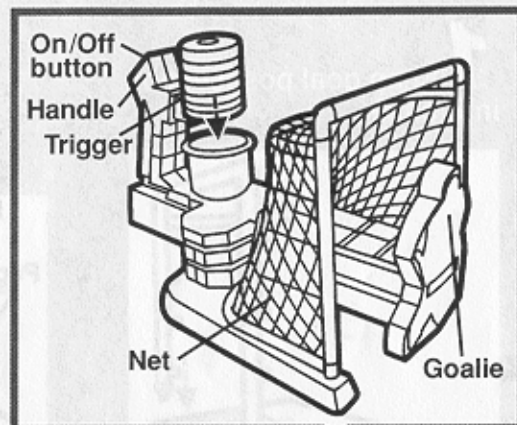

THE PLAY:


Block and shoot at the same time. Move the goalie to the right or left by moving the handle. Even make him "jump" to block a shot. All while you are watching for an opening to fire and "get one past him" to score a goal.

SCORING:

You make a goal each time your disc goes into your opponent's net (discs that are part of the way in the net or bounce out count as a goal).

WINNING:

After all discs are fired the player with the most goals wins. Reload and play again and again and again.

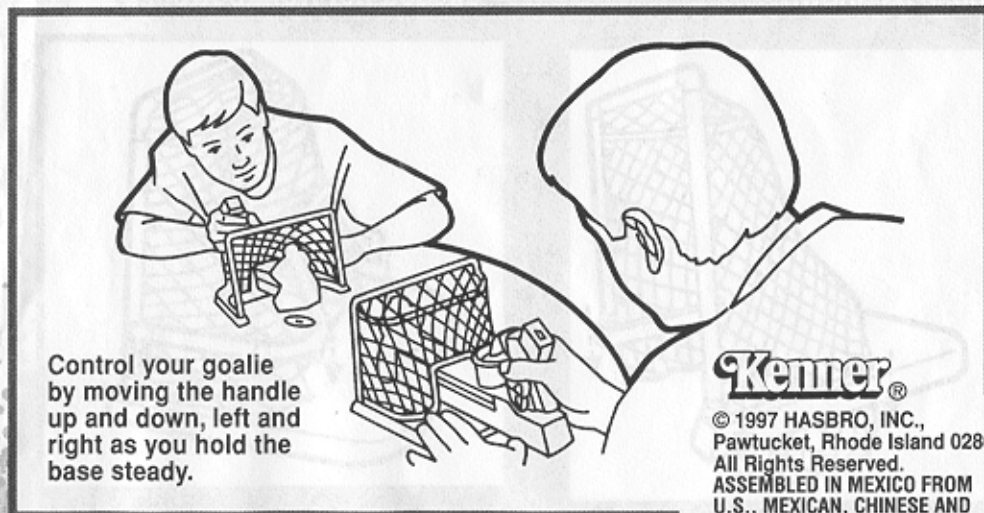

Kenner®

© 1997 HASBRO, INC.,
Pawtucket, Rhode Island 02862.
All Rights Reserved.
ASSEMBLED IN MEXICO FROM
U.S., MEXICAN, CHINESE AND
JAPANESE COMPONENT PARTS
536831.00