

EXTENSION BLASTER

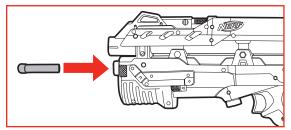

1. Load dart into lower muzzle.




2. Slide the Cocking Mechanism backwards.

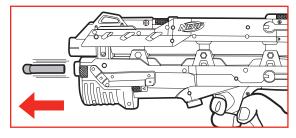


3. Pull the Trigger 1 to launch 1 STREAMLINE DART™.


CLEARING A JAM

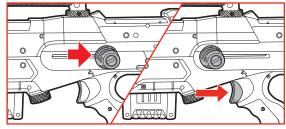


 Pull Bolt Mechanism back. If Bolt Mechanism seems stuck, try pulling the trigger first.

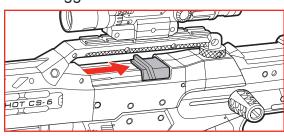

3. Open the Jam Clearing Door and remove the jammed dart. Close door.

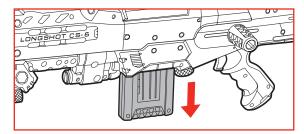

2. Remove the Clip before attempting to remove the jammed dart.

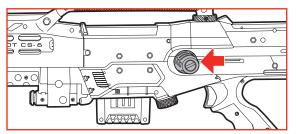

4. Replace Clip and slide Bolt Mechanism forward. This should load another dart.


© 2006 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

U.S.Patent Nos. 6083127, 5529050 and Patent Pending.

61983 P/N 6594260000 Product and colors may vary.



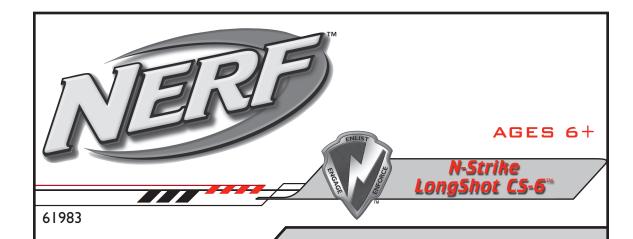


Thank you for purchasing the NERF™ N-Strike LongShot CS-6™ blaster. Be sure to read and follow all instructions carefully before using this product.

Use both blasters separately or snap them together to create the N-Strike LONGSHOT CS-6.


CAUTION: Do not aim at eyes or face.

TO AVOID INJURY: Use only darts designed for this product.


Do not modify darts or dart blasters.

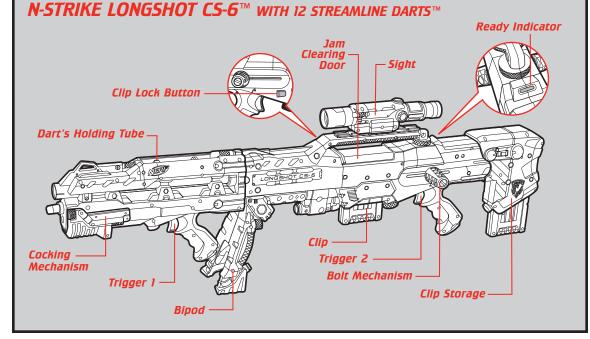


N-Strike LONGSHOT CS-6™ To Assemble:

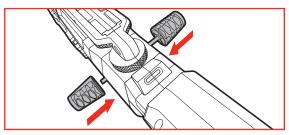


1. Insert Bolt into mechanism as shown and plug onto other end of bolt.

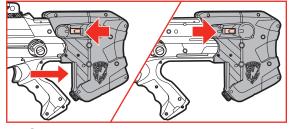


2. Stock extends.

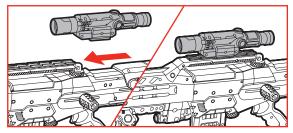


3. Slide/snap Sight onto Blaster. Lock into place.

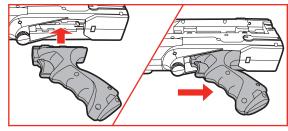


4. Insert grip and slide back to snap into place.

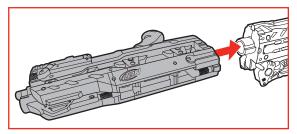


5. Attach extension to main unit by sliding extension into place...

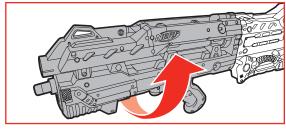


6. ...and twisting 90 degrees to lock.

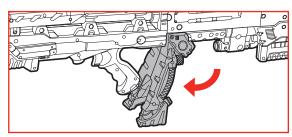


7. Bipod flips down.

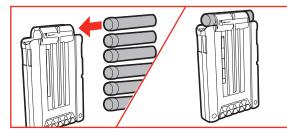


8. Load Clip by inserting 1
STREAMLINE DART™ at a time
and pushing down. Be sure to insert
darts in direction indicated on the
Clip. Each Clip can hold up to 6
STREAMLINE DARTS.

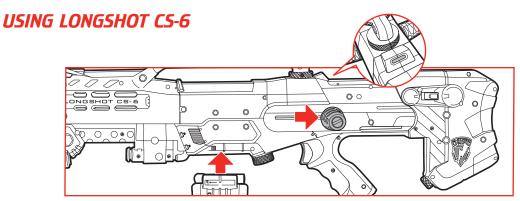


1. Pull Bolt Mechanism back. Ready Indicator should change from black to red. Slide Clip into place.

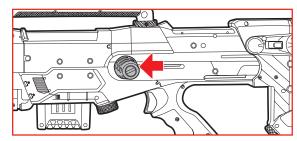


2. Slide Bolt Mechanism forward.

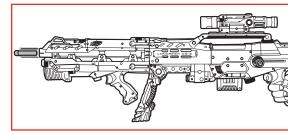

3. Pull Trigger 2 to launch STREAMLINE DART™.

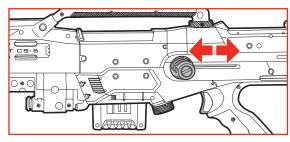

4. Pull Bolt Mechanism all the way back, and slide forward to load another dart.

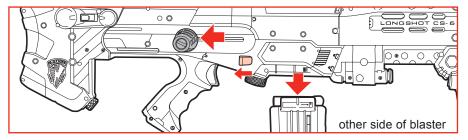

5. To reload, pull Bolt Mechanism back and press Clip Locking Button to remove Clip.