



er muzzle.

 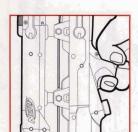


Slide the Cocking Mechanism backwards.

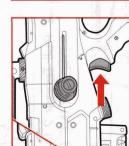




stuck, try pulling im back. If Bolt



Remove the Clip before attempting, to remove the jammed dart.

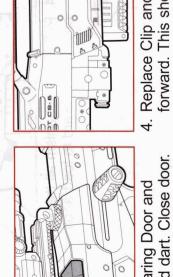

Replace Clip and slide Bolt Mechanism forward. This should load another dart. 4.



Questions? Call: 1-800-327-8264



blaster. Be sure to read and follow all instructions carefully before Thank you for purchasing the NERF" N-Strike LongShot CS-6" using this product.

Use both blasters separately or snap them together to create the N-Strike LONGSHOT CS-6.

TO AVOID INJURY: Use only darts designed for this product. Do not modify darts or dart blasters. CAUTION: Do not aim at eyes or face.


Ready Indicator Clip Storage STREAMLINE DARTST Bolt Mechanism Trigger 2 Clearing Clip N-STRIKE LONGSHOT CS-6TW WITH 12 Bipod Clip Lock Button Dart's Holding Tube Cocking Mechanism

> Rights Reserved. 3. Trademarks.


83127, 5529050 and Patent Pending. 51590000

Product and colors may vary.

EXTENSION BLASTER

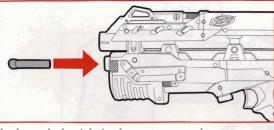


1. Load dart into lower muzzle.

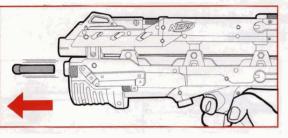


Slide the Cocking Mechanism backwards.

3. Pull the Trigger 1 to launch 1 STREAMLINE DART™.


CLEARING A JAM

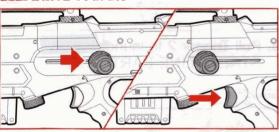


 Pull Bolt Mechanism back. If Bolt Mechanism seems stuck, try pulling the trigger first.

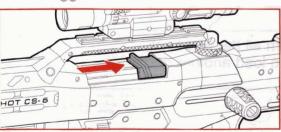

3. Open the Jam Clearing Door and remove the jammed dart. Close door.

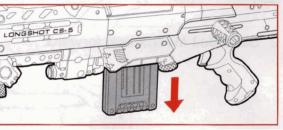

2. Remove the Clip before attempting to remove the jammed dart.

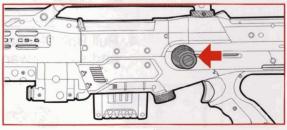

 Replace Clip and slide Bolt Mechanism forward. This should load another dart.



© 2006 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. U.S.Patent Nos. 6083127, 5529050 and Patent Pending.

61983 P/N 6551590000 Proc

Product and colors may vary.



61