




1. Remove screw and battery compartment door. Insert three "AA" alkaline batteries into the compartment as indicated. Replace door and screw it closed.


CAUTION: To avoid battery leakage: 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions. 2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries. 3. Always remove exhausted or dead batteries from the product.




2. Hoop and Net: Hold hoop with solid edge up. Determine which end of the net has the larger loops. Twist and loop the ends of the net over each hook located on the inside of the hoop as shown. Tug each loop to secure it.

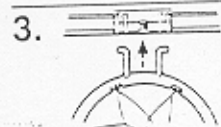

3. Slide netted hoop into bottom of backboard as shown. Make sure that the hoop snaps into the rim bracket before rotating the hoop up for play.

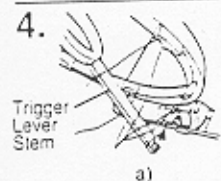


4. a) Thread the stem of the Trigger Lever through the net and snap it into the hole under the rim where it connects to the backboard.

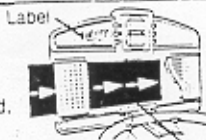

b) Have an adult cut out panel from the package and slide it behind panels as indicated. Add label.


Decorative Back Panel

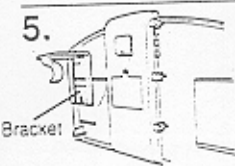

5. Insert Bracket into backboard. The backboard can be placed on the top of a door, back of a chair, or headboard of a bed. You may need to straighten backboard by adding padding to bracket.



Inflate the ball using the needle provided. **DO NOT OVER INFLATE.** Once ball is inflated correctly, it should fit perfectly in the template provided.

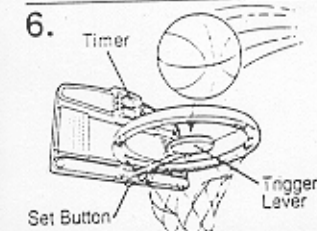

6. When you are ready to play, press the Set Button. You will first hear the crowd's reaction noise. Then the Timer will begin the clock countdown from "9". Take your shots. If you make your shot, the countdown is stopped, you hear the crowd's reaction and after a few seconds the countdown will begin again at "9". After the second score or completed countdown, you must press the Set Button to play another TWO sets.