


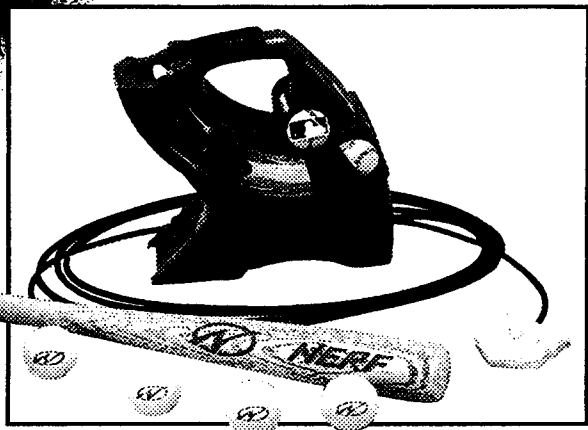


AGES 7 AND UP

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.




### 1. Labels

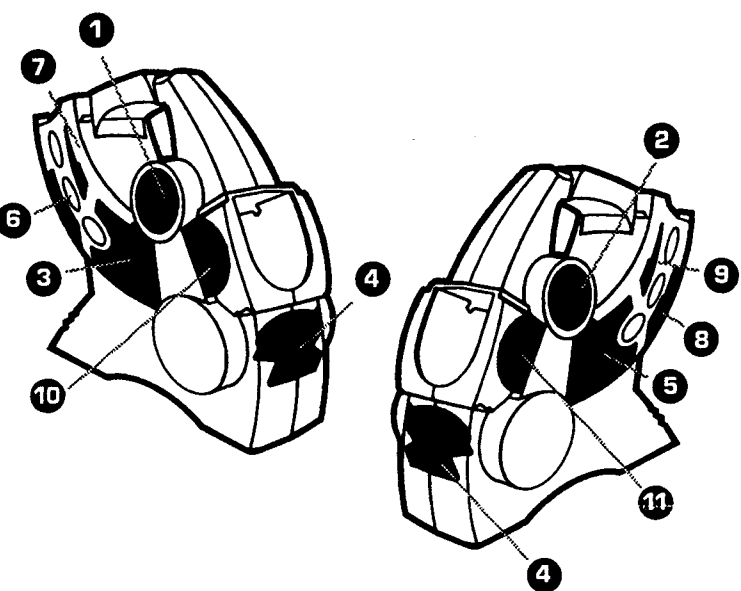

### 2. Batteries

REQUIRES 3 "C" BATTERIES  
(NOT INCLUDED)

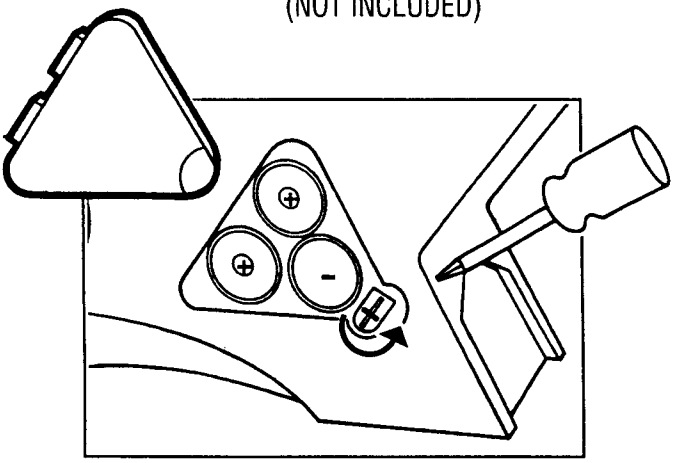

**CAUTION:** To avoid battery leakage: 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions. 2) Do not mix old and new batteries or alkaline, standard (carbonzinc) or rechargeable batteries. 3) Always remove exhausted or dead batteries from the product.



### 3. Operation

*Smash-it pitching Machine*


61421

**ON/OFF**  
(Wait 10 seconds to warm up)

Step on "Home Plate" each time you want a pitch (allow 5 seconds between pitches)

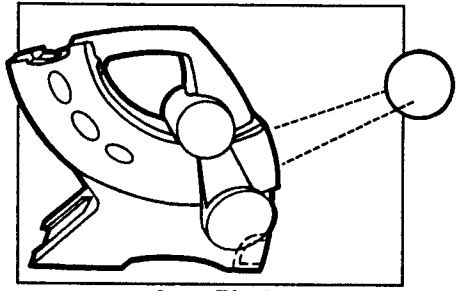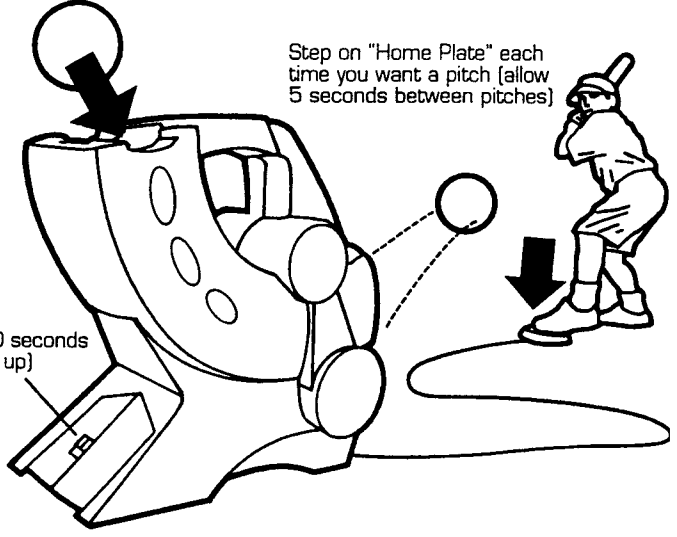


Low Pitch

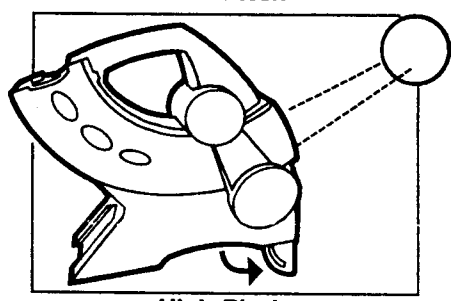

High Pitch

### 4. Storage

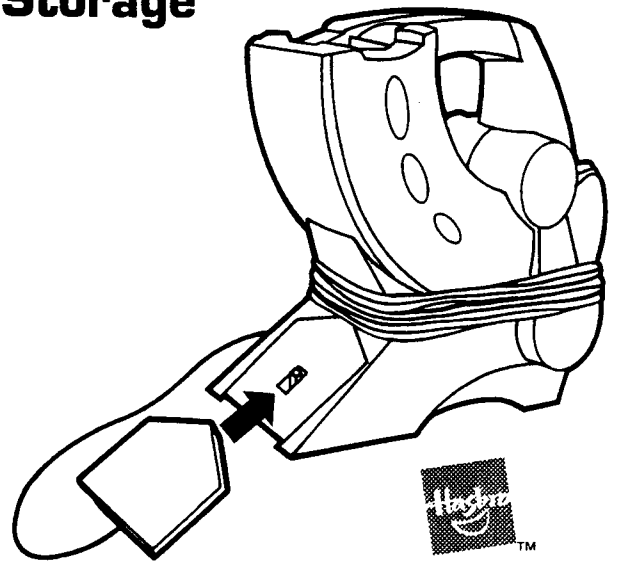

MADE IN CHINA  
55543800

© 1998 HASBRO, INC.  
Pawtucket, Rhode Island 02862  
All Rights Reserved.