

↑ SOUND UNIT LOCATED HERE ↑

 
 


Ages 3 & Up



INSTRUCTIONS

IMPORTANT: BEFORE DISCARDING BOX, UNTIE AND DISCARD THE PLASTIC TIE AND REMOVE SOUND UNIT (INSTRUCTIONS BELOW).

PLAY INSTRUCTIONS:

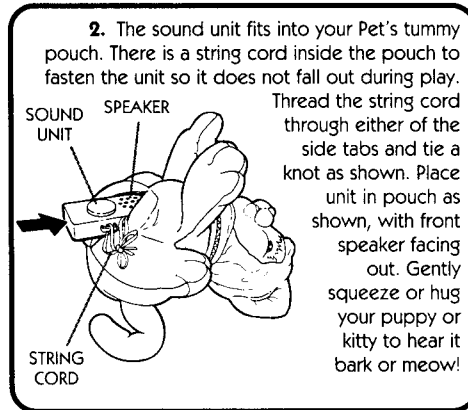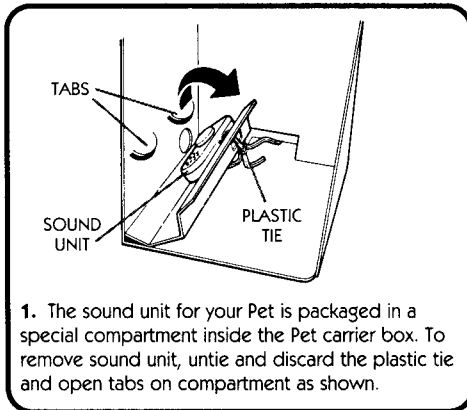

  BATTERY REPLACEMENT: The sound unit comes equipped with 3 A-76 button cell batteries. When they are exhausted, you may replace them with any of the following battery styles: 357A, A-76, SR-44 or PX-76. ALWAYS use three batteries of the same style – never mix different styles of batteries.

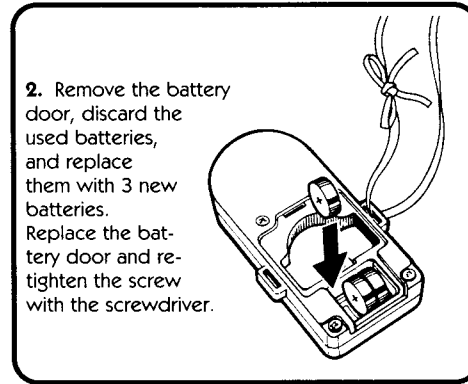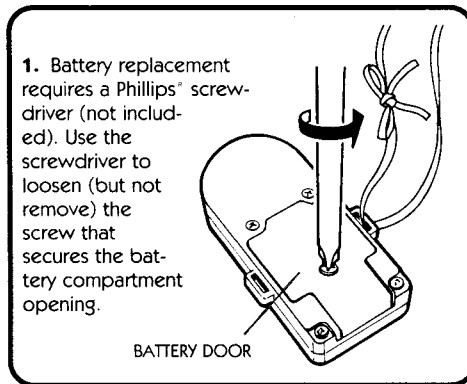

CAUTION:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. When installing replacement batteries make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
3. Never mix old batteries with new batteries, or standard (carbon-zinc) with alkaline batteries.
4. Batteries may explode or leak if recharged, disassembled or heated.



©1993 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.
 ®denotes Reg. U.S. Pat. & TM Office. **MADE IN CHINA.** C-078A
 8755 P/N 44628500