

 
FEB 23 1991

5078

PLAYSKOOL®

Picture Surprise™

**Thank you for purchasing this Playskool® toy!
It includes: Picture Surprise™ with soft-tip brush
and instructions.**

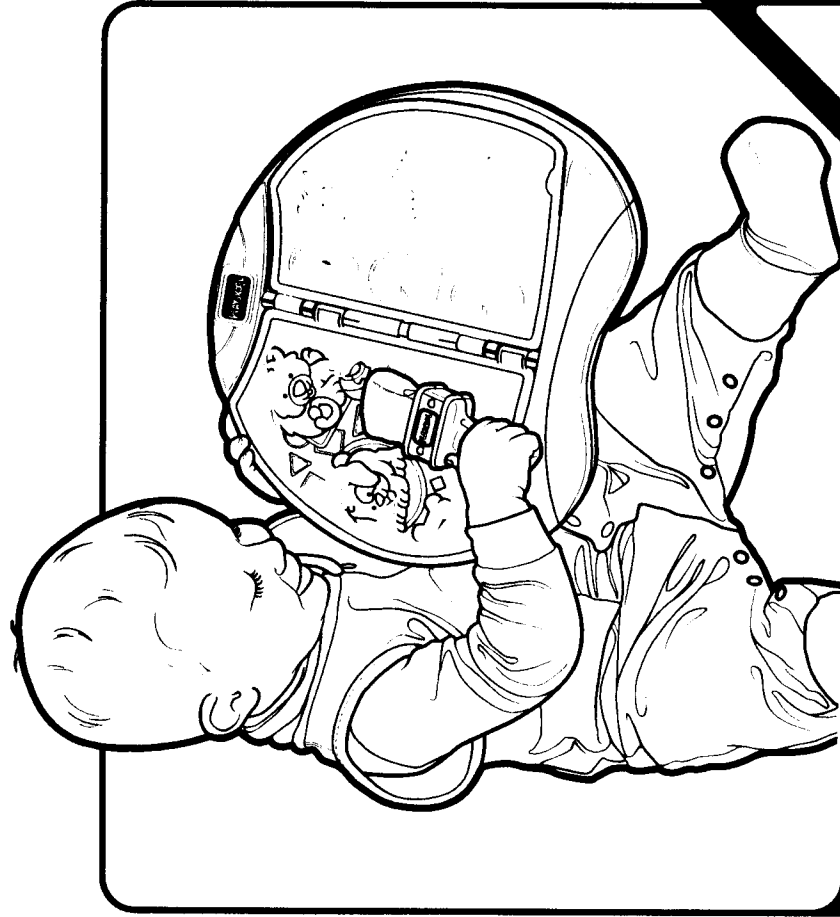


**12 Mos
& UP**

TODDLER


Use the stand to let your child play with Picture Surprise in an upright position, or to display your child's pictures.

 - **To Open the Stand:** Insert your finger into the hole in the stand and pull open. The stand is fully open when you hear a "click" and it opens no further.
- **To Close the Stand:** Snap it back into Picture Surprise. When the stand is closed, your child can use Picture Surprise on a flat surface.

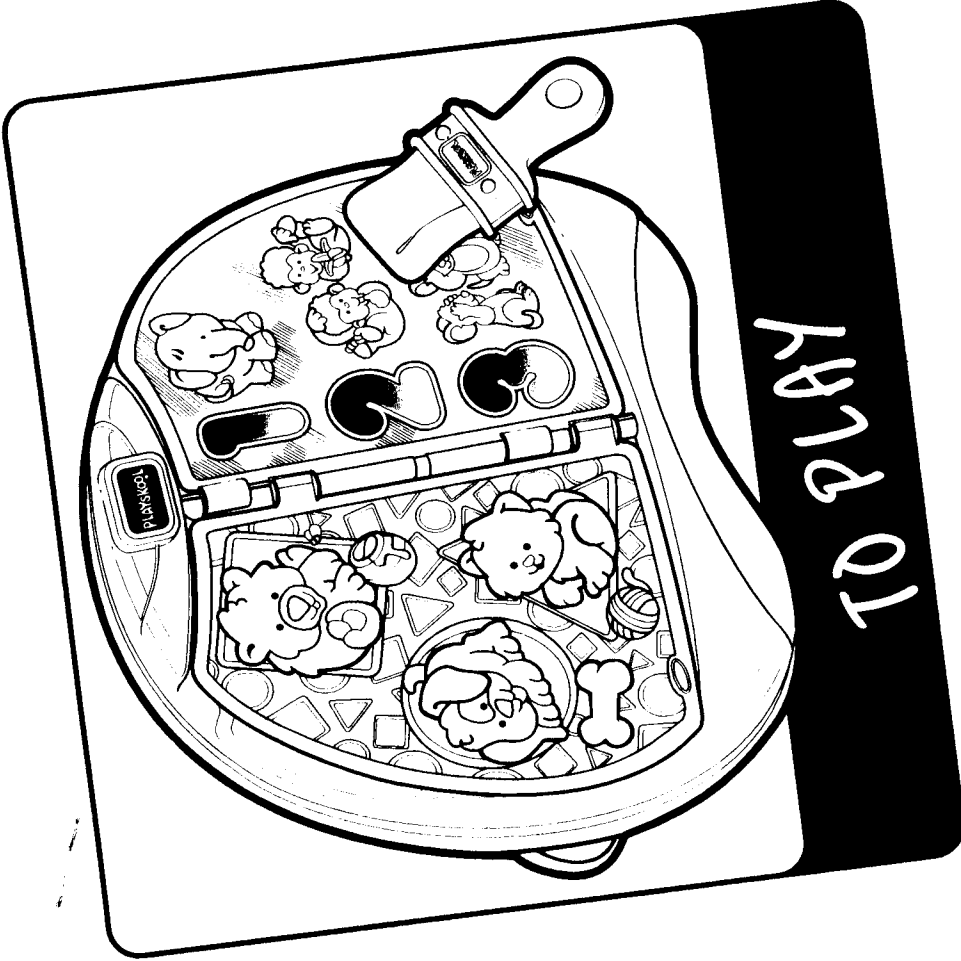

1. Thoroughly wet the soft-tip brush. Squeeze tip to remove excess water.
2. Wipe the pictures with the brush - pictures magically appear! The color remains temporarily to allow your child to "show off" the pictures.
3. When the pictures dry, the color will disappear, so that your child can paint them all over again!

NOTE: Do not use crayons, pencils, pens, markers or any other drawing or writing instrument with this product. Use only the soft-tip brush included.

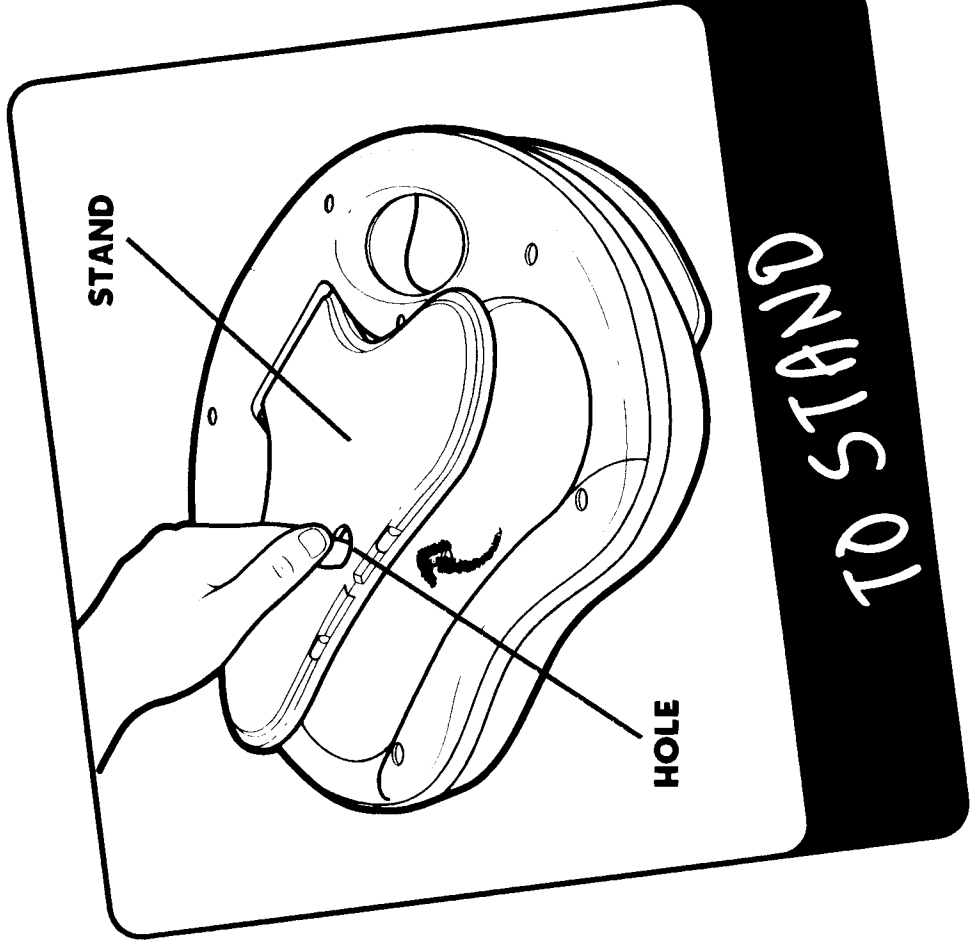

CARING FOR THE BRUSH:

To Wash: Place brush in pillow case and tie end closed. Machine wash on gentle cycle, cold water, mild detergent, no bleach. Machine dry in pillow case on low heat setting.

STORAGE:

- If water puddles are left on the pictures, they may leave a permanent water mark. Before storing, gently **BLOT** away excess water with a **SOFT CLOTH**.
- Allow pictures to air dry completely before storing.
- Allow brush to air dry completely before storing it.

IF PAGES SNAP OUT OF PICTURE SURPRISE...

To re-attach pages: With Picture Surprise lying on flat surface, hold page perpendicular to hinge and snap it into hinge.



Product and colors may vary.

© 1997 Hasbro, Inc. ® denotes Reg. U.S. Pat. & TM Office.

P/N xxxxxxxx