

 


Ages 2 & Up

Sizzle Sounds Grill Set™

Includes: Barbecue grill, 2-level deck with railings, bench with cushion, and grill with pretend food.

Inserting Batteries

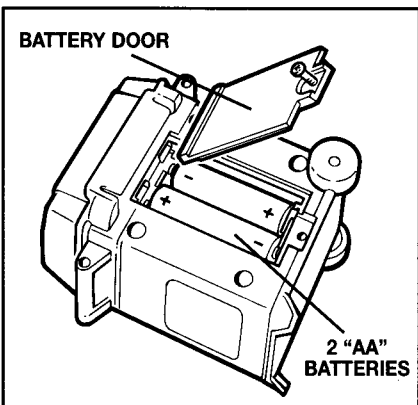


Locate battery compartment in back of barbecue grill. Use a Phillips screwdriver to loosen screw, and remove battery door. Insert 2 "AA" batteries (alkaline recommended) as shown, then replace door and tighten screw.


CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.

 Assembly

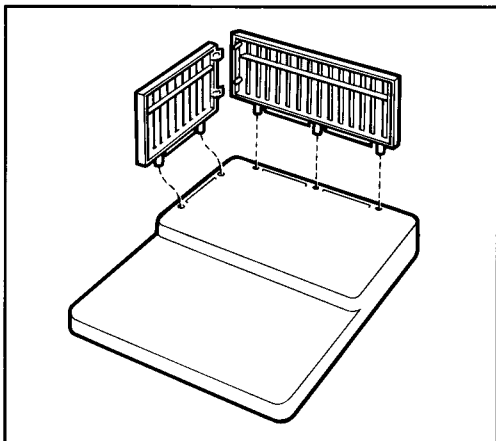


 1. Fit the 2 railing pieces together, pressing the tabs on the long railing into the hooks on shorter railing. Then attach the assembled railing to deck, pushing the posts on railing into holes on deck.

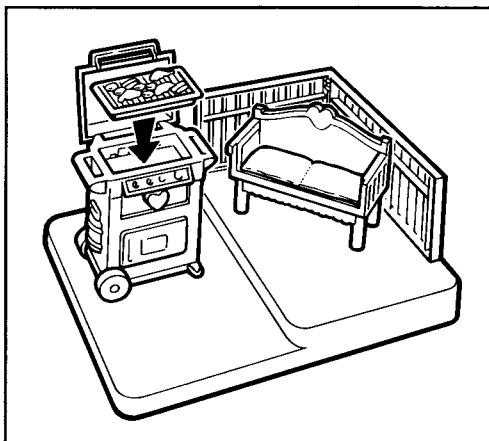

2. Place the grill top with pretend food inside the opening in grill, and place the cushion on bench seat.

 Play Instructions

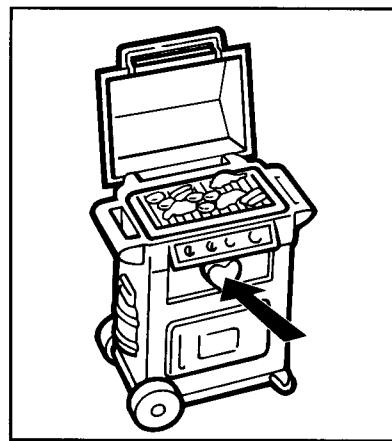


Press the heart-shaped button in front of the grill to hear sizzling barbecue sounds!

FCC RULES FOR A CLASS B DIGITAL DEVICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 - Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



© 1995 Hasbro, Inc., Pawtucket, RI 02862 USA.

All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

P/N 46301600 **MADE IN CHINA.**

1788/1407 Asst.