

5. HOW IT WORKS

Turn on/off knob clockwise to "on" position to activate sounds. To hear skillet, saucepan or teapot sounds, fit rings on bottom of skillet, saucepan or teapot into grooves on either burner.

NOTE: You will not hear skillet or saucepan sounds if the teapot is on the burner. The oven timer will buzz automatically every few minutes, until the oven door is opened. The buzzer will continue to buzz periodically as a reminder if the unit is left on after playtime is over.

CAUTION: Avoid getting the Playsounds Stove wet. If the unit does get wet, wait until it dries completely before turning it on again. Once dry, the unit should function properly.

If the unit does not operate properly, make sure the alkaline batteries are installed correctly, or replace the existing batteries with fresh new ones.



This equipment generates and uses radio frequency energy. If not used properly, in strict accordance with the manufacturer's instructions, it may cause interference with radio and television reception. The Playsounds Stove has been type tested and found to comply with the limits for a CLASS B computing device in accordance with the specifications in subpart J of part 15 of Federal Communication Commission rules, which are designated to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the unit on and off, the user is encouraged to try to correct the interference with one or more of the following measures:

- Reorient the receiving antenna
- Relocate Playsounds Stove in respect to the receiver.
- Move Playsounds Stove away from the receiver.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet helpful. It's prepared by the Federal Communications Commission.

"HOW TO IDENTIFY AND RESOLVE RADIO-TV INTERFERENCE PROBLEMS."

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402 Stock #004-000-00345-4

LIMITED WARRANTY ON PLAYSOUNDS STOVE™ UNIT

Playskool warrants that your Playsounds Stove unit is free from defects in material or workmanship for a period of 90 days from the date of purchase or receipt as a gift.

To obtain warranty service please call our toll free hotline number

1-800-237-0063

and ask for Consumer Service so that we can provide you with instructions for obtaining service on your Playsounds Stove.

Postage and Handling: If the unit is returned to us for warranty service, you must pay the postage for mailing it to us. We will pay the cost of returning the repaired or replaced unit to you.

**PLEASE DO NOT RETURN YOUR UNIT TO THE RETAILER
DO NOT RETURN THE UNIT TO ANY ADDRESS WITHOUT AUTHORIZATION FROM PLAYSKOOLO®**

The warranty does not cover:

Defects caused by misuse, abuse, accidental damage, repairs made by others or failure to follow instructions.
This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state.

Post Warranty Repair Policy

After the 90 day warranty period has expired, Playskool, Inc. shall, for a period of one (1) year from the date of purchase, either repair or replace (not necessarily with a new product) your Playsounds Stove on the condition that you obtain authorization from Playskool Consumer Service Department, shipping the unit prepaid to the address provided along with proof of purchase date and your check or money order in the amount of \$10.00. Playskool, Inc. shall not be obligated to perform this service if the Playsounds Stove has been abused, misused, improperly serviced, or damaged due to accident.

GENERAL INSTRUCTIONS

Important: Before returning the Playsounds Stove for repair, we recommend that you read the instructions carefully and test your product with fresh alkaline batteries.