

# POCKET ARCADE®

## Instruction Sheet

# DESERT RACE™

Real road rippin' action with you at the wheel. So, put the pedal to the metal and move into the fast lane!

Begin by placing the STOP/START button in the STOP position. Wind the POWER KNOB in the direction indicated by the arrow until it stops turning. Set the SCOREKEEPER by turning the RESET wheel until an "S" appears in the SCORE WINDOW. Push the PITSTOP button to put your car in the starting position.


Start your engine by switching the STOP/START button to the START position. When you see an opening, move your car into the lane using the steering wheel. Weave in and out of the path of the other cars to stay in the race. The action stops if you crash into another car and you must push PITSTOP to begin again. The longer you can stay on the track the higher your score. Your final score is displayed in the SCORE WINDOW at the end of the race.

**17-22 points — King of the Road!**


**10-16 points — Speed Demon.**

**1-9 points — Dizzy Driver.**


Collect all four exciting Pocket Arcade games.

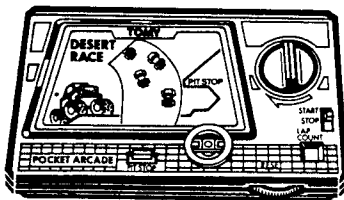


**DESERT RACE™**  
Real Road Rippin' Action!

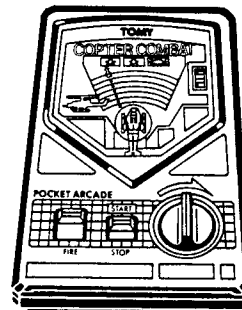

**COPTER COMBAT™**  
It's a Blast!

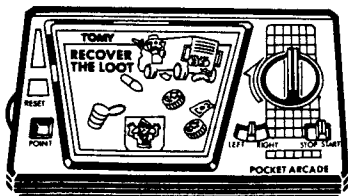

 **RECOVER THE LOOT™**  
Grab the Money and Run!

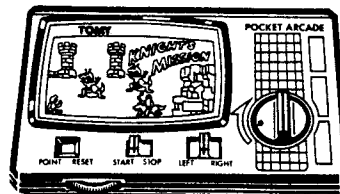

**KNIGHT'S MISSION™**  
Double Dragon Jeopardy!

Patented.

©1984 Tomy Corp., 901 E. 233rd St., P.O. Box 6252, Carson, CA 90749

Printed in Thailand

**TOMY.**  
No. 7020