 


- Battery installation should be done by an adult
- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy before being charged (if removable)
- Rechargeable batteries are only to be charged under adult supervision (if removable)
- Only batteries of the same or equivalent type as recommended are to be used
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short circuited

DRIVING THE CAR

Open the Poké Ball controller. Slide the ON/OFF switch to the ON position on both the car and the controller.

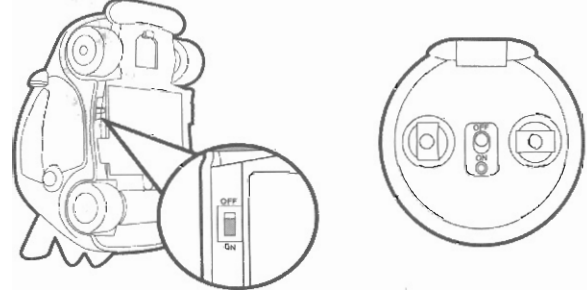

 
INSTALLING THE BATTERIES

Controller

To remove the battery compartment door on the controller, press down and push in the direction of the arrow.

Insert one 9V battery making sure to align the "+" and "-" as shown inside the battery compartment.

Replace the battery compartment door and close it tightly.

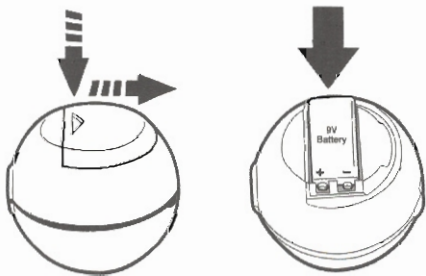

Extend the antenna fully.

 
Note: Be sure to compress antenna before closing controller.




Vehicle

Using a Philips® screwdriver, remove the screw from the battery compartment door located on the bottom of the car. Remove the battery compartment door.

Insert four (4) AA/LR6 batteries, making sure to align the "+" and "-" signs as shown inside the battery compartment.

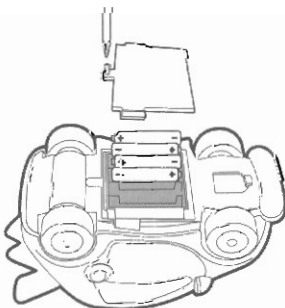

 OR
Remove the 4 X AA battery compartment, insert a 6.0 Volt rechargeable NiCd power pack (sold separately) following the direction of the arrow.

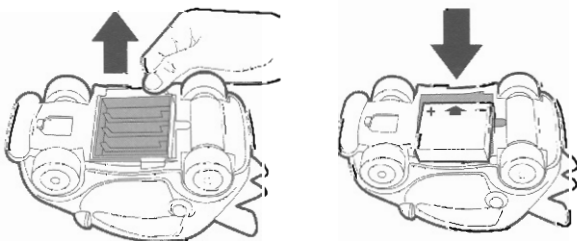

If you use a rechargeable NiCd power pack, be sure to follow the manufacturer's instructions.

Replace battery compartment door and screw.

To ensure proper function:

 
- Do not mix old and new batteries
- Do not mix alkaline, standard or rechargeable batteries

The left joystick controls:

FORWARD = UP
NEUTRAL = CENTER
REVERSE = DOWN


The right joystick controls:

LEFT = LEFT
STRAIGHT = CENTER
RIGHT = RIGHT

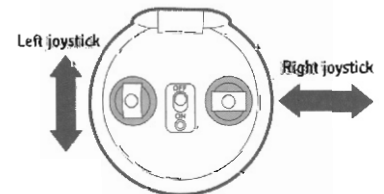

SETTING TRIM CONTROL

 Trim adjustment is located on the bottom of the car between the front wheels. Adjust the trim to align the wheels for straight line driving.

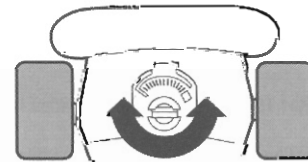

COMMON PROBLEMS OF R/C VEHICLES

Weak or Dead Batteries/Power Pack - For best running performance, always start with fully charged batteries. Also, make sure that the battery contacts are touching.

Range - Vehicle may go beyond radio signal contact. Loss of control or slowness will be evident when it is out of range. The maximum distance for this vehicle is 60 feet. Hold the controller antenna up high for best reception.

Interference - Erratic behavior, loss of contact or jerking motion may occur in areas with high tension wires, phone poles or CB radios.

OPERATING AND CARING FOR YOUR VEHICLE

Radio waves control and drive your vehicle. The controller signals can be interrupted easily. Any of the following conditions may interfere with the behavior and function.

- Keep vehicle away from wet surfaces or rain.
- Keep vehicle away from sandy, dusty areas.

- Avoid long exposure to direct sunlight or heat.
- Store in a dry, cool place away from heaters and hot air registers.
- Avoid collisions with hard surfaces.
- Do not drop vehicle.
- Avoid running on thick, pile carpet or dusty floors.
- Avoid running two (2) vehicles with the same frequency. Run only one at a time unless you have vehicles with different frequencies.
- Use a brush to clean areas where dirt and dust get trapped.
- Wipe body with a soft rag or tact cloth to clean.
- Do not clean with chemicals or water.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger), warrants to the original consumer purchaser of this product that the product will be free from defects in material or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of \$18.00. Payment must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All products returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at www.tigertoys.com.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution: Not recommended for children under age 8. Read all instructions before operating. Avoid hitting people, pets, or furniture. Do not pick up moving vehicle. Keep hair, hands, and clothing away from vehicle when power switch is turned ON. Remove battery pack and transmitter battery when vehicle is stored. AVOID TIRE CONTACT ON PAINTED OR VARNISHED SURFACES. Outdoor play recommended.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PROPER OPERATION AND STORAGE OF YOUR VEHICLE:

1. Best operation of vehicle is on an OUT-OF-DOORS texture paved surface to avoid furniture damage and minimize noise level.
2. Always operate your vehicle within a range of 60 feet from you.
3. Always operate your vehicle on dry surfaces away from cars and other full-size vehicles.
4. Always store your vehicle in a cool, dry place and off of painted or varnished surface.
5. Storage of vehicle. Always turn main vehicle switch OFF after play and remove battery.
6. Avoid water or damp locations which may damage the vehicle's electronics. If your vehicle ACCIDENTALLY gets wet and stops running. Let it dry overnight before trying to run it again.
7. Avoid operating around CB radios, baby monitors, cordless phones, electrical appliances, electric baseboard heaters, high voltage electrical wires and large, steel-reinforced concrete buildings, all of which may cause interference.
8. Avoid running your vehicle and another vehicle on the same frequency.

GUIDE FOR TROUBLE SHOOTING:

Check the points below if you are experiencing difficulty. Sometimes an apparent malfunction is the result of a simple cause and effect as shown below.

| SYMPTOM | PROBABLE CAUSE | CORRECTION |
|---|--|---|
| Vehicle runs slowly or will not run. | Main vehicle or controller switch not ON. | Check vehicle and controller switch, must be ON. |
| | Weak or uncharged 6 volt rechargeable NiCd power pack vehicle battery. | Charge battery or replace. |
| | Weak 4 X AA vehicle battery. | Replace with fresh alkaline battery. |
| | Weak 9 volt controller battery. | Replace with fresh alkaline battery. |
| | Using wrong transmitter. | Use correct transmitter. |
| Erratic operation or only short range possible. | Remote antenna is not pulled. | Fully pull the antenna. |
| | Radio interference likely. | Change location (see point 7, PROPER OPERATION SECTION) |
| Short vehicle battery life. | Initial charge of NiCd battery will give 8 to 10 minutes of operation. | Recharge vehicle battery. Once drained the NiCd battery will have longer life with each recharging. About 15 minutes of life is typical with this type of radio controlled vehicle. |
| | Continuous use on rough terrain or steep hills. | Use on less severe terrain. |



©1995, 1996, 1998 Nintendo, CREATURES, GAME FREAK™ & © are trademarks of Nintendo © 2000 Nintendo.

TIGER ELECTRONICS, LTD.

®. TM. & © 2000 Tiger Electronics, Ltd
All Rights Reserved
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A
www.tigertoys.com

PRINTED IN CHINA



892250001JWTF1-01