 


Pooh

Pooh Rise 'n' Shine
Clock & Radio

INSTRUCTION
MANUAL

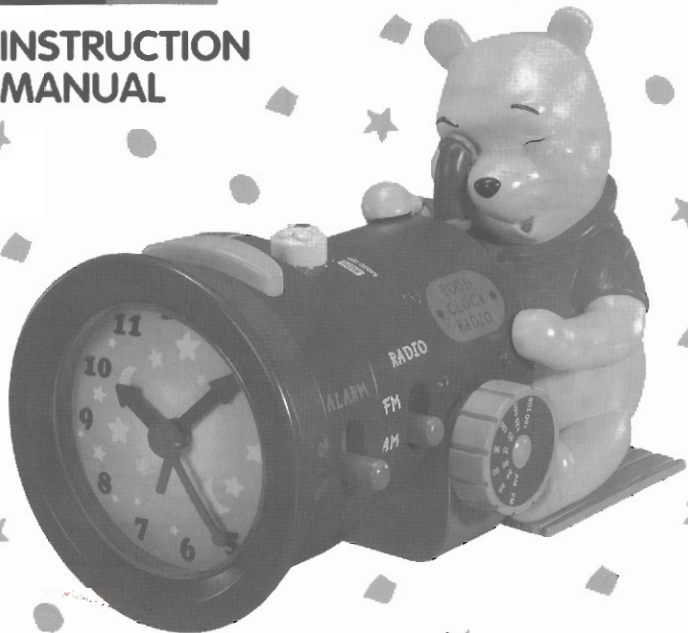 


For Ages 5 and Up
Model 87-028



Welcome to the friendly world of Winnie the Pooh. Pooh and friends make everything more FUN! The beautiful sculpted detail of the Pooh Rise 'n' Shine Clock & Radio brings the warmth and charm of Winnie the Pooh into your home.

Parents please take a few moments to read the operating instructions.

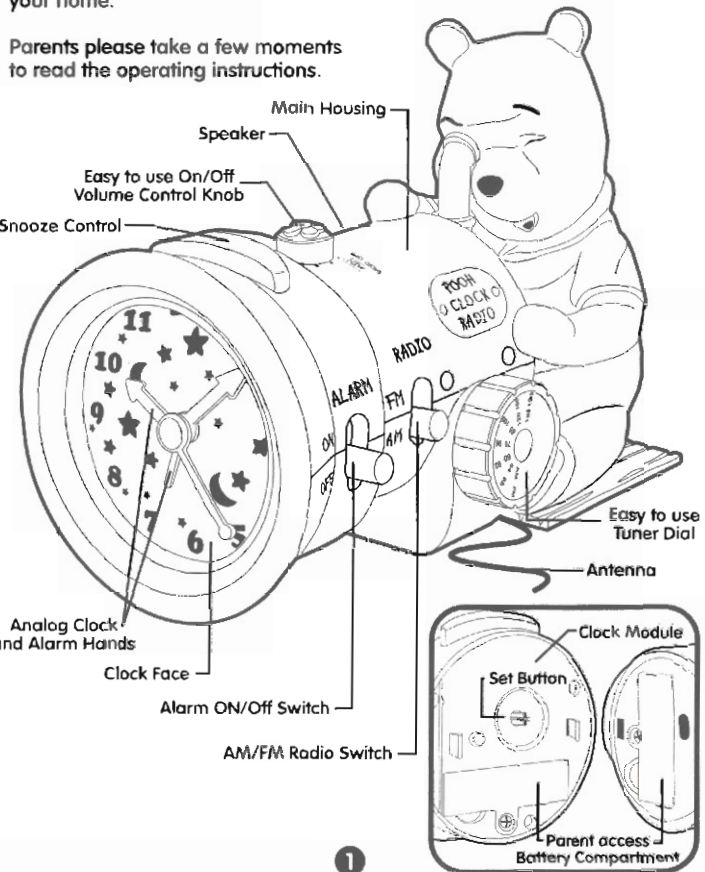

★ BATTERY INSTALLATION

The Pooh Rise 'n' Shine Clock & Radio uses 4 "AA" / LR6 batteries; one for the clock and three for the radio.

IMPORTANT NOTE: Battery installation should be done by an adult.

1. Use one hand to hold the radio unit, then gently pull the clock unit from radio. (ILLUSTRATION 1)



ILLUSTRATION 1

2. Open the battery compartment door on the back of each side of the unit using a screwdriver. (ILLUSTRATION 2)

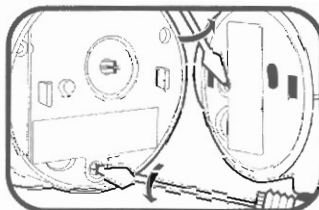 


ILLUSTRATION 2

3. Insert one "AA" / LR6 battery into the clock side of the unit and three "AA" / LR6 into the radio side of the unit. Be sure to match the "+" and "-" ends of the batteries as shown. (ILLUSTRATION 3)

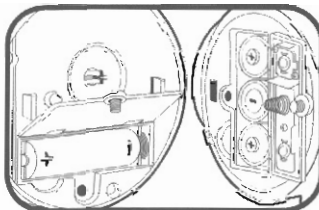 


ILLUSTRATION 3

4. Close the battery compartments and replace screw.

5. Reconnect Clock Module to Main Housing by inserting locking tab into slot and turn clock module counter-clockwise.

2

★ SETTING THE CLOCK AND/OR ALARM

1. Face the clock upward and rotate the clock clockwise when holding the main body unit. Gently pull the clock module away from the main body of the unit at locking tab. (ILLUSTRATION 1)
2. The blue Time/Alarm Set Button activates both the alarm hand and the analog clock hands.
3. To set the Time: Pull out the blue button and turn it counter-clockwise to set the analog clock time.
4. To set the Alarm: Push in on the blue button and turn it counter-clockwise to set the short alarm hand.
5. Reconnect Clock Module to Main Housing by inserting locking tab into slot and turn clock module counter-clockwise.

★ ACTIVATING THE ALARM AND SNOOZE

1. Once the alarm hand has been set to the proper time, turn the Alarm ON/OFF switch to "ON" to activate the alarm. When the alarm goes off it will continue to sound for 35 minutes if you do not turn it off.
2. After the alarm has sounded, you can temporarily stop the alarm for 5 minutes by pressing the Snooze Button on the top of the clock.

★ PLAYING THE AM/FM RADIO

1. Slide the switch to select AM or FM radio band.
2. Turn the yellow Volume Control Dial to "ON."
3. Choose your favorite radio station by turning the Tuner Dial to align with the radio station's frequency number.
4. Position the antenna to allow for the best signal reception.

★ CARE AND MAINTENANCE

To protect Pooh Rise 'n' Shine Clock Radio follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker opening.
- Designed for children 5 and up.

3

CAUTION:

The batteries in this toy should be kept away from small children.

★ **CAUTION:**

- Do not leave in direct sunlight. High temperature may damage the unit.

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, following the toy and battery manufacturer's instruction.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

★ **90-DAY LIMITED WARRANTY**

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damage from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the retailer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$9.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach or warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, also the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tiger toys.com

TIGER
ELECTRONICS, LTD.



©, TM, & © 1999 Tiger Electronics, Ltd.
All rights reserved.
980 Woodlands Parkway, Vernon Hills,
Illinois 60061, USA

© Disney
Based on the "Winnie the Pooh" works. 870280001/WTI-03
Copyright A.A. Milne and E.H. Shepard PRINTED IN CHINA

