 




# Playskool® Pop-Up Play Tent



Thank you for purchasing the Playskool Pop-Up Play Tent! Please save this instruction sheet for further reference.  
**THIS PRODUCT IS FOR INDOOR USE ONLY.**

## OPENING TENT

**CAUTION:**  
TENT POPS OPEN SUDDENLY. IT SHOULD BE OPENED IN A LARGE AREA AWAY FROM CHILDREN AND BREAKABLE OBJECTS.




To open, simply remove the tent from its storage bag, remove the elastic band and IN A CLEAR, OPEN AREA, toss the tent straight out in front of you as shown. As soon as you let go of it, the tent will pop open in mid-air and land fully assembled and ready for play!



4. Fold the top end down and all the way in, as indicated by the arrow; to where the front foot is placed in the above illustration. You may find it easier to complete this step by planting your foot or knee on the base to hold the tent in place.

## FOLDING THE TENT

After your child is finished playing, the Pop-Up Play Tent folds easily for storage or travel. Initially, you may have some difficulty folding the tent, but with a little practice, you'll be able to fold it within seconds each time. Just follow these instructions:

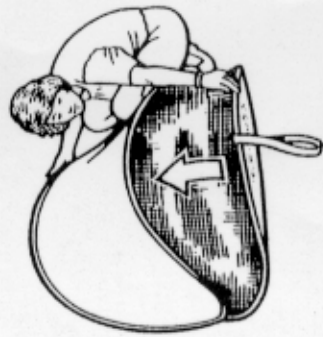

1. Place the tent lengthwise in front of you as shown, with the front opening to your right and the back netting to your left. (Note: shaded area below netting in illustration is blue material on tent.)



2. Grab both ends and fold the tent in half, into a "taco shell" shape as shown. (Note: Make sure that the attached elastic band remains on the outside; do not fold it inside tent.)




3. While holding it closed with your right hand, flip the "taco shell" and lay the end on floor as shown. (The bottom will form a circle on the floor; that will be your base for folding.) With your left hand, grab the top end where the nylon opens to allow you to grasp the rods.



5. You will now be holding 2 rings in your right hand as shown, with a third ring on the floor. Gently let go of ring on right, fold left ring over right ring, and push down.



6. The tent will fold flat into a circle as shown.

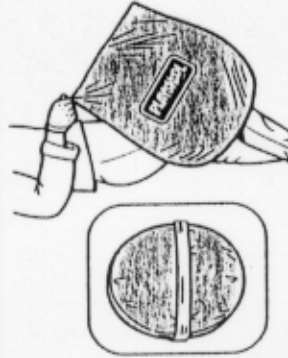

7. Immediately after folding, slide the elastic band around the tent to secure it. Now slip it into the storage case, and carry it or store it anywhere!

## WARNING:

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC**  
This tent is made with flame resistant fabric which meets CPAI-84 specifications. *It is not fire proof.* The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.