

M

Making Puppy Treats Using Your Mixes Good-tasting for dogs, puppies and kids!

Wash off utensils before using the first time. Each packet makes up to 5 treats.

1. Preheat Puppy Snack™ Bakery for 15 minutes.
2. Pour contents of mix envelope into mixing bowl.
3. Add 1 teaspoon of water and mix with a spoon (you can add your own food coloring to make a variety of colorful treats).
4. Press dough against side of mixing bowl until it clings together.
5. Cut a sheet of waxed paper and sprinkle it with a teaspoon of flour.
6. Roll dough into a ball with your hands. Place dough on waxed paper and roll it out about 1/4" thick, slightly larger than the shape you select.
7. Flour your treat mold and press it into the dough.
8. Tap on table top to shake out the shape.
9. Bake individual shape in a baking pan for:
 - approximately 5-6 minutes (Bone).
 - approximately 7 minutes (Shoe).
 - approximately 5-6 minutes (hydrant).
10. Allow to cool in cooling chamber and then carefully remove baking pan from oven with pan handler.


Gingerbread Treats Using Ingredients From Home

Makes about 3 dozen treats; extra dough can be frozen until ready for use.

- | | |
|----------------------------|--|
| 1/3 cup shortening | 1. Combine brown sugar, shortening, salt and mix well. |
| 1/4 cup packed brown sugar | 2. Add molasses and blend. Set aside. |
| 1/2 teaspoon salt | 3. Combine flour, soda, and baking powder and mix well. |
| 1/2 cup molasses | 4. Add flour mixture gradually to shortening mixture. Mix until dough forms. |
| 1-1/2 cup sifted flour | 5. Chill dough in refrigerator 15 minutes. |
| 1/2 teaspoon baking soda | 6. Roll chilled dough on floured surface to 1/4" thickness. |
| 1/4 teaspoon baking powder | 7. Flour your treat mold and press it into the dough. |
| | 8. Tap on table top to shake out the shape. |
| | 9. Bake individual shape in a baking pan for: <ul style="list-style-type: none">• approximately 5-6 minutes (Bone).• approximately 7 minutes (Shoe).• approximately 5-6 minutes (hydrant). |
| | 10. Allow to cool in cooling chamber and then carefully remove baking pan from oven with pan handler. |

Caution Electric Toy

Immersing this toy can cause an electric shock. Not recommended for children under eight years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

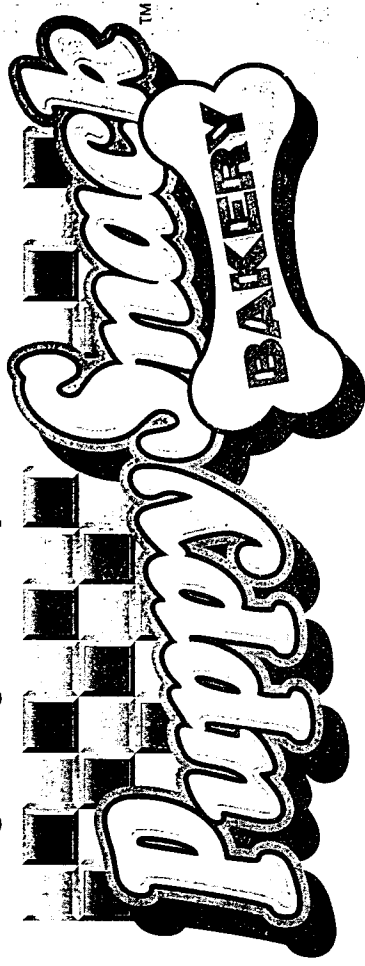

Kenner

© Kenner 1992 a division of Trinka Corporation

50348600

6.5500

Adult Supervision Suggested

Hot pans and food. Handle carefully.

Hot Oven Interior: Oven Top and Oven Back. Do not touch.

Warning: Shock Hazard. Pull plug out of receptacle before removing back and changing light bulb. Do not use light bulbs larger than 100 watts.

Always: Unplug Oven when not baking. Use Pan Handler to move pans through Baking Chamber. Allow Oven, Pans and Food to cool before handling. Wash all utensils before using the first time.



Let's Get Ready

Remove Back of Oven

- Turn oven so that the back is toward you.
- Using a Phillips screwdriver, remove the six (6) screws from the panel and lift panel out.

Install Light Bulb


- Install one regular frosted or standard 100 watt bulb into socket in panel.
- Do not use bulbs of higher wattage, long life or soft white type bulbs.

Install Oven Back

- Replace panel and six (6) screws.

Labels

Fold and place bakery sign on top of your oven

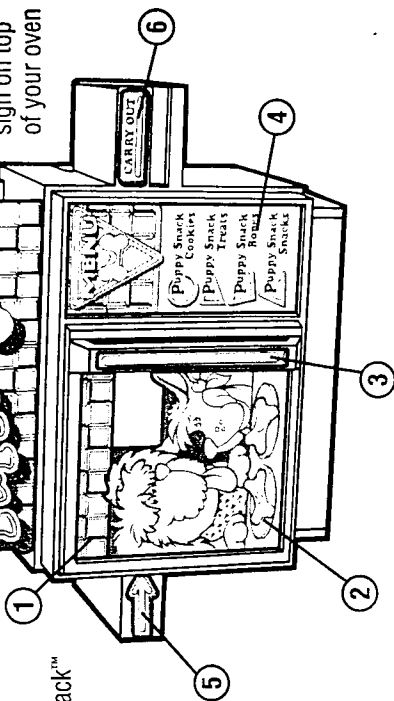

Apply labels to Puppy Snack™ Bakery as shown.

How to Use Your Puppy Snack™ Bakery

- Using the pan handler, slide pan into baking chamber until arrow lines up with edge of chute.
- Do not put plastic treat molds inside oven.
- When treats are finished baking push pan into the cooling chamber with pan handler. Push all the way up to the "stop" on the pan handler.
- Cool for 10 minutes in cooling chamber, and use the pan handler to remove from oven.
- When you are finished baking unplug oven.
- Wash your pans and utensils in warm soapy water. Rinse and dry.
- Wipe oven clean with a damp cloth when cool. Do not immerse in water.

Never use plugged-in Oven around water at any time. Never leave plugged-in Oven unattended or unassembled. Never push Pans through Oven with your fingers. Do not leave empty Pans or Pan Handler in Oven.

Danger: To prevent electric shock, do not immerse Oven in water. Wipe clean with damp cloth. We recommend that you periodically examine the toy for potential hazards and that any potentially hazardous parts be repaired or replaced.

Do Not use bulbs of higher wattage, long life or soft white type bulbs. 120 Volts A.C. only- 60 Hz 100 watts.

Caution: Adult supervision recommended. Internal metal edges. Care should be taken during installation of the light bulb. Phillips screwdriver required.

