


AGES 8 AND UP

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

6 VOLT
RADIO CONTROL SPEED!

Ricochet

STUNT CYCLE

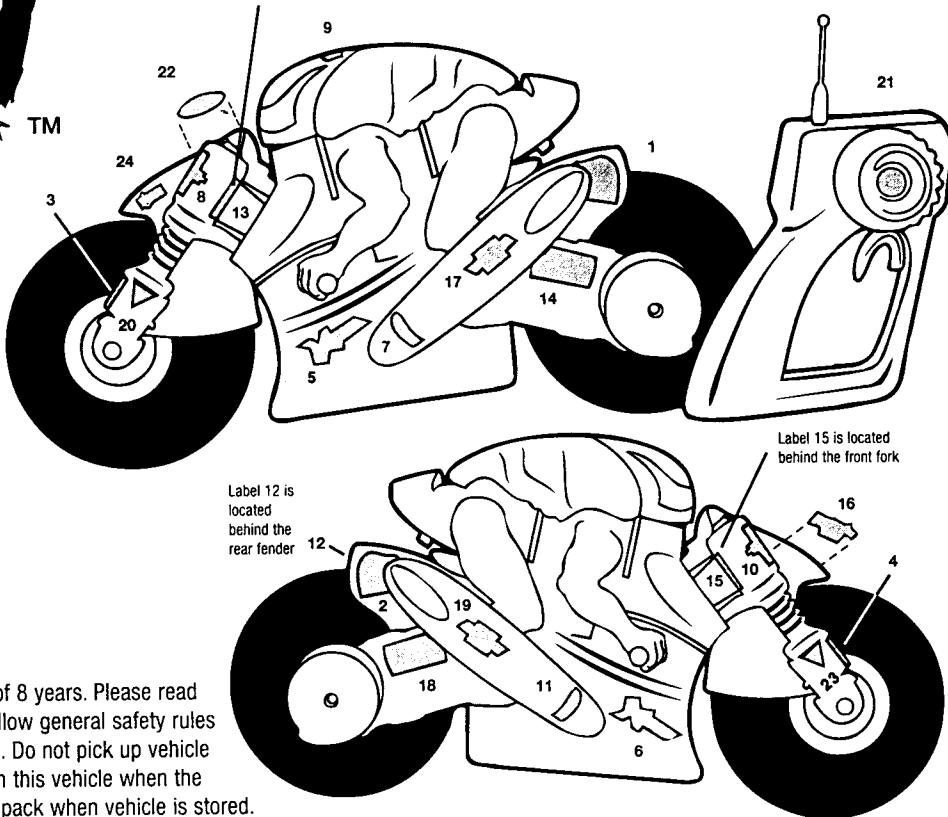

Label 13 is located behind the front fork.

Label 15 is located behind the front fork.

Label 12 is located behind the rear fender.

LABEL APPLICATION

Apply labels using the numbers on the label sheet, these illustrations and the package photograph as a guide.

SAFETY PRECAUTIONS

This vehicle is not recommended for children under the age of 8 years. Please read all of the instructions before operating this vehicle. Always follow general safety rules while operating vehicle: avoid hitting pets, furniture or people. Do not pick up vehicle while it is in motion. Keep hands, hair and clothing away from this vehicle when the power switch is turned to the "ON" position. Remove battery pack when vehicle is stored.

Avoid tire contact on painted or varnished surfaces.

Recommend outdoor play with this vehicle.


Kenner

© 1995 Tonka Corporation, a subsidiary of Hasbro, Inc., Pawtucket, RI 02862. All Rights Reserved.



BATTERY REQUIREMENTS / INSTALLATION FOR STUNT CYCLE

To operate your vehicle, you will need a 6 Volt Rechargeable NiCd Battery Pack (sold separately). Follow manufacturer's charging instructions on the rechargeable battery pack. **PLEASE NOTE:** The battery pack will become hot during use, so care should be taken whenever you handle it.

1. Fully charge battery pack following manufacturer's instructions. Insert Battery Pack as shown.

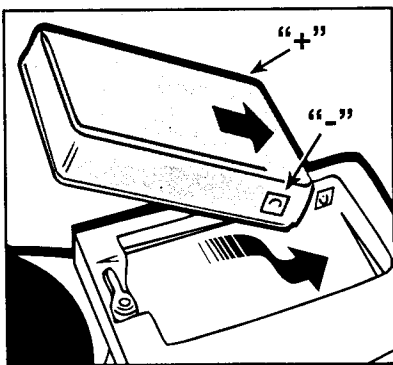

2. Turn latch to lock in Battery Pack.

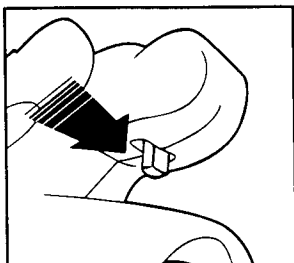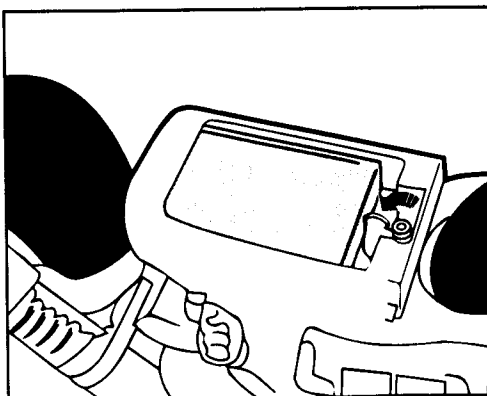


3. Turn power switch to the ON position to engage receiver.


BATTERY NOTE

Kenner does not manufacture battery packs. When you have purchased one, please follow the manufacturer's instructions for use. Depending upon the type you choose you should expect that the **initial charge might require 4 hours and last 8-10 minutes** in the intense operation of your Ricochet™ Stunt Cycle. Each time you charge the battery, you should get longer performance as you "break in" your battery, until you enjoy operation that is up to twice as long as that of the initial charge.

BATTERY REQUIREMENTS / INSTALLATION FOR CONTROLLER

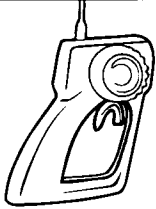


To operate your controller you will need a 9 Volt Alkaline Battery (sold separately). Remove screw, remove battery cover as shown and install a new 9 Volt Alkaline Battery. Replace cover and screw.
PLEASE NOTE: Vehicle power switch must be in the ON position to receive commands from the controller.

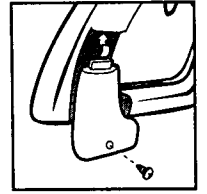


DIRECTION CONTROLS Hold controller in left hand. Move controller as indicated by solid arrows.


FORWARD

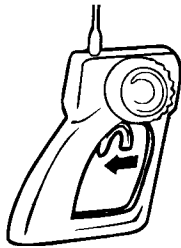

BRAKE AND REVERSE

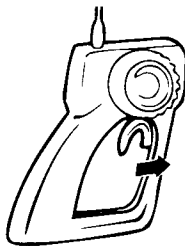


NEUTRAL

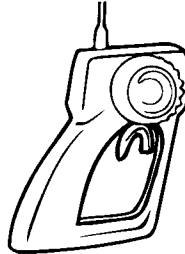


SHARP TURN

While going forward release to neutral then turn right or left.

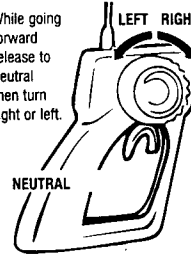

WIDE TURN

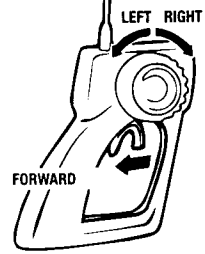

PROPER OPERATION AND STORAGE OF YOUR STUNT CYCLE

- Best operation** of vehicle is on an OUT-OF-DOORS textured paved surface to avoid furniture damage and minimize noise level.
- Always** operate your vehicle within a range of 75 feet from you.
- Always** operate your vehicle on dry surfaces away from cars and other full-size vehicles.
- Always** store your vehicle in a cool, dry place and off of painted or varnished surfaces.
- Avoid** water or damp locations which may damage the vehicle's electronics. If your vehicle ACCIDENTALLY gets wet and stops running, let it dry overnight before trying to run it again.
- Avoid** operating around CB radios, baby monitors, cordless phones, electrical appliances, electric baseboard heaters, high voltage electrical wires and large, steel-reinforced concrete buildings all of which may cause interference.
- Avoid** running your vehicle and another vehicle on the same frequency. If you want to race another vehicle, use a 27 MHz Ricochet™ Stunt Cycle vehicle against a 49 MHz Ricochet™ Stunt Cycle vehicle.

GUIDE FOR TROUBLESHOOTING — Check the points below if you are experiencing difficulty. Sometimes an apparent malfunction is the result of a simple cause and effect as shown below.


SYMPTOM	PROBABLE CAUSE	CORRECTION
Vehicle runs slowly or will not run.	<ul style="list-style-type: none"> Loose battery connection or switch not ON. Weak or uncharged 6 volt vehicle battery. Weak 9 volt controller battery. 	<ul style="list-style-type: none"> Check connector and vehicle's ON/OFF switch. Charge battery or replace. Replace with fresh alkaline battery.
Erratic operation or only short range possible.	<ul style="list-style-type: none"> Radio interference likely. 	<ul style="list-style-type: none"> Change location (see point 6, PROPER OPERATION SECTION).
Short vehicle battery life.	<ul style="list-style-type: none"> Initial charge will give 8 to 10 minutes of operation. 	<ul style="list-style-type: none"> Recharge vehicle battery. Once completely drained the battery will have longer life with each recharging. About 15 minutes of life is typical with this type of radio controlled vehicle.
Vehicle doesn't work after going through water or snow.	<ul style="list-style-type: none"> Water in the electronics area. 	<ul style="list-style-type: none"> Vehicle will take several hours to dry. Allow to dry overnight before trying again.

STUNT CYCLE OPERATING FEATURES (for outdoors only)



Start Position
Set cycle on ground resting on exhaust pipe as shown above, engage forward control and steer straight. Cycle will make a 90° turn and continue straight.

Ramp Jump
With cycle in forward position at full speed, hit ramp straight on to jump ramp.

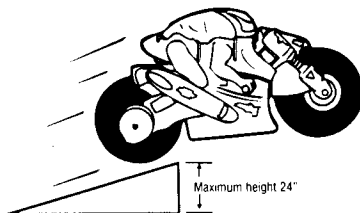

Rockin' Recovery™
If the cycle turns completely over on its top, it may be necessary to move the rider left or right to aid in cycles recovery to its wheels. (Returns to the Start Position).

Backing Up
Push control trigger forward, Stunt Cycle can reverse out of tight spots.



Quick Stop
Push control trigger quickly forward, (away from you). Stunt Cycle breaks to a quick stop.

