

Robo baby™


responds to your love & care!



2001032601WTI-02


INSTRUCTION

♥ Changing her diaper - Her crying indicates that her diaper might need to be changed. Take her diaper off and if she laughs and makes a going to the potty sound then you have successfully completed the potty event. If you fail to change her diaper in the allotted time, she will cry.

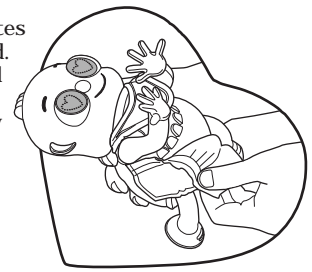

♥ Rocking her to sleep - If she says "nightie night" 2 times, rock her softly 3 times or more and she will fall asleep. If you fail to rock her she will start to cry.

♥ Patting her hair helps keep her happy.
♥ Talking to her makes her feel happy and loved.

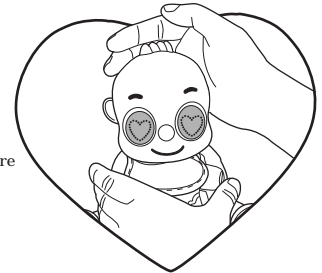

**Please note that if you leave Robo Baby™ alone for more than a minute she will fall asleep. Pat her head to wake her up.

Checklist

The following items are included in this package:

- Robo baby™
- Bottle
- Diaper
- Bib
- Instruction Manual

If any items are missing, please contact the Tiger Electronics Customer Service Department and the missing items will be sent to you.

Robo baby™ is the cute interactive baby robot that will crawl her way into your heart. To care for your Robo baby™ feeding, changing her diaper and rocking her are all very important.



Feeding:

Feeding Robo baby™ is an important step in her development. To feed Robo baby™ place the special bottle by her mouth.

- Hunger index - It will go down once you feed her and go up after she goes potty.
- She hiccups when she is full.

Biorhythm:

The graphs shown below represent the biorhythm levels of Robo baby™. The amount of attention you give to Robo baby™ affects her moods. When she cries you have to guess what she needs and either feed her, change her diaper, rock her to sleep or pat her head. The way you care for your Robo baby™ will determine how quickly she matures.

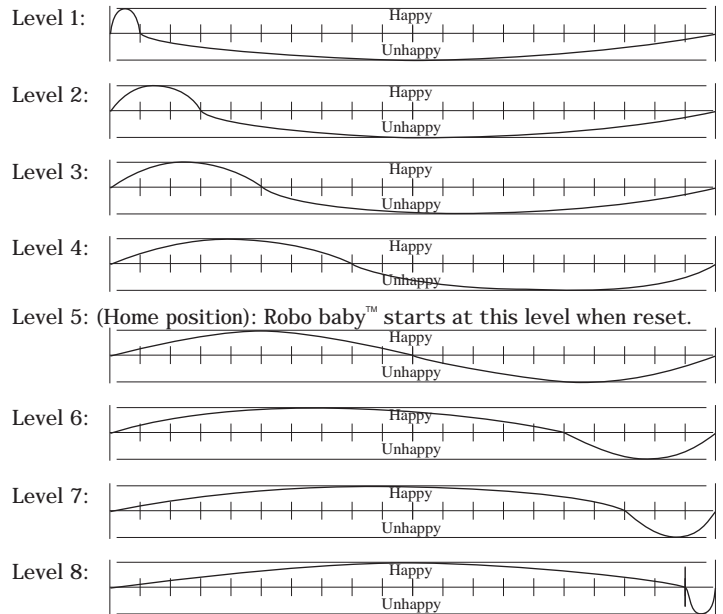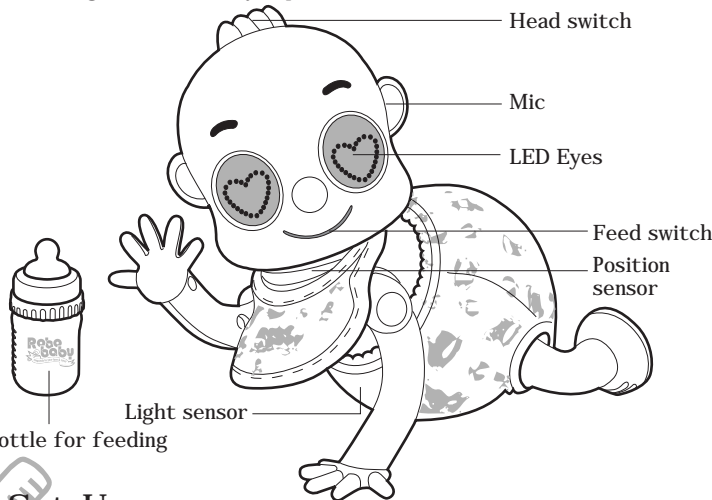

Set Up:

Robo baby™ will play best on a smooth, flat surface. Make certain the area is clear of obstacles so she can crawl. Robo baby™ should always be played with indoors.


Movement:

- Crawls forward - when Robo baby™ is crawling please make sure that her head is tilted up and not hanging down for best performance.
- Arms - move up and down

Attention:

Robo baby™ will cry and you have to figure out what she needs. Just like a real baby, she might be hungry, need a diaper changing, want to be rocked to sleep or she just might want some attention. When she cries it is best to go through the possible list of things that will make her happy.

♥ Feed her - She will either cry for her bottle or say "Milk" (depending on her age). Put the special bottle up to her mouth. If she says "mommy more" after making drinking noises keep feeding her until she laughs and says "mommy love" or sings (depending on her age). If you fail to give her milk in the allotted time, she will cry.

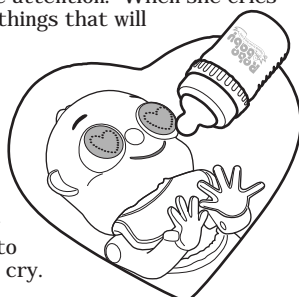

The following hints will help you know what kind of mood your baby is in:
1st Stage - In this stage Robo baby™ is very young. She needs lots of loving care to be able to grow into the next stage.
Good Mood: cry, goo goo, ga ga, num num, aaahh, ba ba, mommy kisses, sings Ring Around The Rosie.
Bad Mood: cry, da da, ga ga.

2nd stage - In this stage Robo baby™ is starting to grow up. She will talk more and learn to crawl.
Good Mood: cry, goo goo, ga ga, num num, aaahh, Da Da, Mommy, Mommy love, mommy kisses, sings - Pop Goes The Weasel, Twinkle, Twinkle or Mary Had a Little Lamb.
Bad Mood: cry, bye bye, mommy no no, mommy up.

3rd stage - In this stage Robo baby™ is at her full maturity level.
Good Mood: cry, giggles, ba ba, ma ma, aaah, bye-bye, mommy up, mommy love, mommy kisses, sings - Row Row Row Your Boat or Rock-a-Bye Baby.
Bad Mood: cry, ma ma, bye bye, mommy no no, mommy up

Growing Up:

If you give your Robo baby™ loving care then she will grow up and start to talk and crawl.


- Talking - at the beginning of play Robo baby™ makes nonsense noises just like real babies do. Once you care for her she will start to say simple words like mommy.
- Singing - Robo baby™ has 6 songs that she will sing for you (Mary Had a Little Lamb, Pop Goes the Weasel, Ring Around the Rosie, Rock-a-Bye Baby, Row Row Row Your Boat, and Twinkle, Twinkle Little Star).
- Crawling - your Robo baby™ will learn to crawl after you have shown her loving care. She will crawl forward when triggered by noise. If you clap or talk to her she will crawl towards you until you stop.

Turning Robo Baby™ On:

Please note that there is no on/off switch for Robo Baby. Once the batteries are in, Robo baby™ comes to life. ***Please note that if the batteries are removed or when the reset button is pressed (see 'Reset' section for details) all data for Robo baby™ will be erased and she will go back to the beginning stage of play.

Reset:

Press the reset button only if her movements seem to be malfunctioning. Take a ball-point pen and insert it into the reset button hole located on the back of her head. Press the reset button once. Do not press the reset button with any sharp instrument. Once the reset button is pressed, Robo baby™ goes back to the beginning stage.

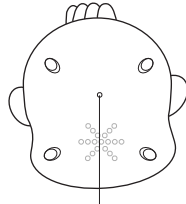

reset button

Helpful Tip:

Robo baby™ is a mechanical robotic toy. The mechanical sound you hear when she moves is normal.

Battery Installation:


IMPORTANT: Battery installation should be done by an adult. Always install the batteries correctly according to the positive(+) and negative(-) signs on the batteries

1. Unscrew and remove the battery compartment door on her stomach.
2. Inset 3 "AAA"/LR03 batteries as shown inside of the battery compartment.
3. Attach the battery compartment door and fasten the screw.
4. If there is any malfunction, please press the reset button (see reset section for more details)

***Do not dispose of batteries in fire, batteries may explode or leak.

To ensure proper function:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommend are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Replace with new batteries at the first sign of erratic operation.

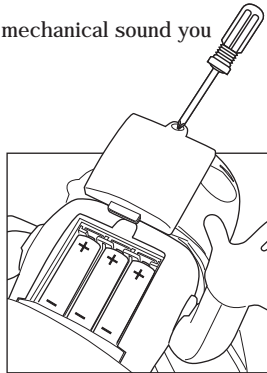

Caution:

- As with any small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone 202.625.3333 collect.
- Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.

Taking Care of your Robo Baby™:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe gently with a barely damp soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

Cleaning Instructions



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of barely damp soft cloth.

Trouble Shooting:

Your Robo baby™ is designed to provide hours of fun play. If her actions become erratic and you are having trouble, check to see that Robo baby™ has fresh batteries and then call Tiger Electronics Service Department at 1-800-844-3733.

For more information about Tiger Electronics, our products and special promotion please visit our web site at.

90 day limited warranty

Tiger Electronics. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of US\$18.00. Payments must be by check or money order payable to Tiger Electronics.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

TIGER
ELECTRONICS
A division of Hasbro, Inc.
Where Technology Comes to Play!™



© SEGA TOYS 2001

®, TM, & © 2001 Tiger Electronics. All rights reserved.
980 Woodlands Parkway, Vernon Hills, IL 60061, USA
www.tigertoys.com

®, TM & © 2001 Tiger Electronics UK Ltd., a division of Hasbro, Inc.
All Rights Reserved.
Belvedere House, Victoria Avenue,
Harrogate, North Yorkshire HG1 1EL, United Kingdom.
www.tigertoys.co.uk

PRINTED IN CHINA