 
 


### BATTERY DIRECTIONS:

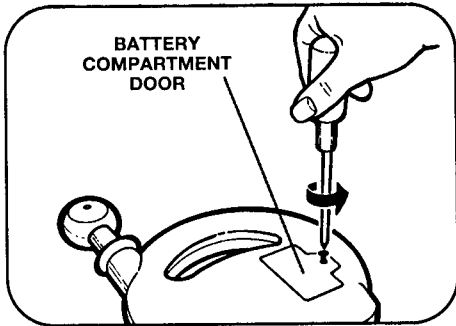

Rockin' Radio is equipped with 2 "AA" batteries. When they run out, use a Phillips® screwdriver (not included) to loosen the screw securing the battery compartment door and remove door. The screw remains attached to the battery door.

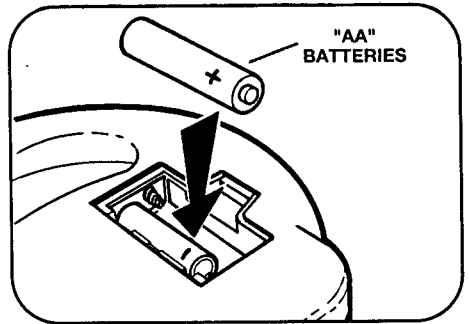

 
Remove and discard the batteries. Insert 2 new "AA" batteries (Eveready® alkaline batteries are recommended for longer life). Replace the battery door and re-fasten the screw with the screwdriver.

### CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.

### PLAY INSTRUCTIONS:

MUSICAL NOTE

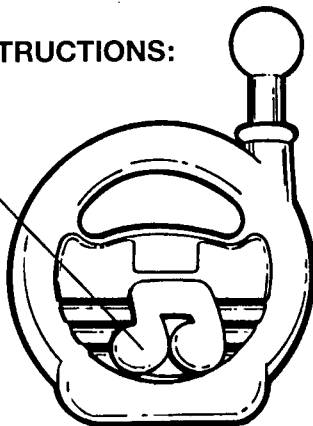

(Songs include "Old MacDonald Had A Farm," "Humpty Dumpty," "London Bridge Is Falling Down," "Mary Had A Little Lamb," "Rockabye Baby," "Pop Goes The Weasel," "Hey Diddle Diddle.")

Simply press the musical note and Rockin' Radio will play 1 of 7 happy tunes. The 7 songs are arranged in a cycle and will always play in the same order.

If the musical note is pressed while a song is already playing, that song will immediately stop and the next song will begin.

At the completion of each song, Rockin' Radio will automatically shut off until the musical note is pressed again.