

No. 84962

Ages
4+



STAR WARS

ANAKIN SKYWALKER™

Interactive Jedi Training
Lightsaber™

INSTRUCTIONS

This product includes 4 "AA" batteries for in-store demonstration purposes only. You will need to replace them with 4 "AA"/LR6 (1.5v) alkaline batteries (not included). Phillips/crosshead screwdriver (not included) required. See instructions.

Retain this instruction guide for future reference.

Remove and discard package and attachments before giving the toy to the child.




Printed in China. Actual product and colors may vary.



International Package
and Product Patents
Pending Thinkway Toys



PREPARATIONS: This lightsaber™ comes with batteries and special wiring for in-store demonstrations. For full function operation after purchase: (1) unplug and discard this wiring (diagram A). (2) All batteries need to be replaced with 4 new "AA"/LR6 (1.5v) alkaline batteries (follow battery instructions below). (3) Open "secret" cover and set function selector to PLAY (diagram B).
 Note: The TRY ME function is intended for in-store demonstration with limited functions.

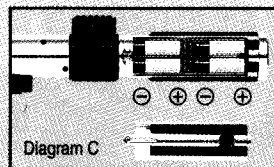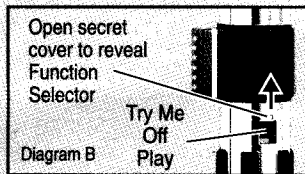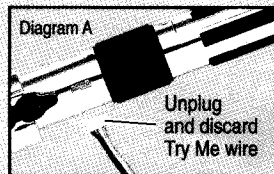

To Replace Batteries:
 Under adult supervision, open battery cover on the handle with a Phillips/ crosshead screwdriver (not included). Replace

all batteries as shown with 4 new "AA"/LR6 alkaline batteries (not included) - see Diagram C.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be inserted/replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



1. LIGHT-UP BLADE
 extends to approx. 35".

2. STRIKE SENSOR

Detects saber strikes and reacts with battle action sounds and vibrations.

3. MULTI-LEVEL JEDI TRAINING PROGRAM

Smart chip that monitors and registers your training progress.

7. BELT CLIP

Attach to select cell phone belt clips (not included).

4. LIGHT-UP KEYS

Use both keys to program your own SECRET CODE. Enter code to turn on your Lightsaber™. Once activated, press the top key for voice, bottom key for battle sound effects. Press both keys simultaneously for power down effect.

8. RED/GREEN LIGHTS flash with voice, sound and react to motion.

5. MULTI-SPEED SENSORS

Allows your Lightsaber™ to react differently as you move it at various speeds.

9. TRY ME WIRE

for store demonstrations. Detach for regular play (see Preparations).

6. MOTOR

inside handle creates realistic Force™ feedback vibrations.


10. FUNCTION SELECTOR


Open secret cover to turn on power and select functions - Play/Off/Try Me (see Preparations).

11 BATTERY COMPARTMENT
 (on the other side of handle).

12. SUPER SOUND SPEAKER
 produces awesome Lightsaber™ and battle sound effects.

Note: Contains non-replaceable light bulb.

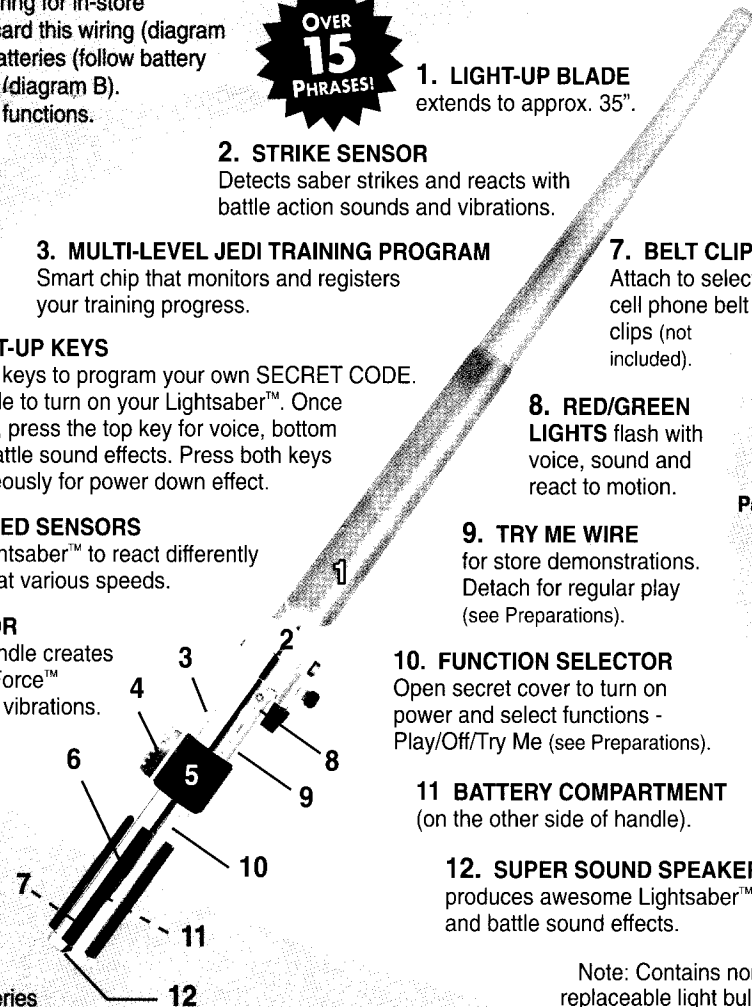

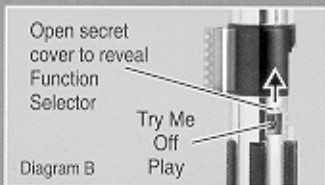

SECRET CODE:

Personalize your Lightsaber™ and shield it from unauthorized users with a secret code. Once the code is programmed, only you will be able to turn on your Lightsaber™!

Step 1 -

Programming Your Own Secret Code:

1. Open secret cover to reveal function selector (diagram B). Set selector to OFF position for 5 seconds. Then switch back to PLAY position. Slide cover down to close.
2. Use the top and bottom light-up keys to program your code (diagram D). This can be any combination of the two buttons to a total of four entries in any sequence. Using 4-digit combination code is recommended.
3. If you prefer not to set a secret code, simply wait a few seconds until the lights go off to bypass the programming. Subsequently, no secret code is needed to activate the Lightsaber™. You may press either key to start playing with the Lightsaber™.
4. If the code is correctly programmed, you'll hear a voice confirmation.
5. To change your code at any time, set the function selector to OFF and repeat procedure above until code is accepted.

IMPORTANT: Shutting the power off (function selector at OFF position) will reset the Lightsaber™ and erase all secret code and Jedi Training Program data.

Step 2 - Activating Your Lightsaber™:

1. Enter your secret code (if applicable) on the light-up keys to activate the Lightsaber™. Wait for confirmation.
2. To use the Lightsaber™, press either the top or bottom light-up key. At the same time, you can extend the Lightsaber™ to its full length with a quick flick of the wrist. You will hear real Lightsaber™ activation sound effect and the blade will glow in a blue color. Note: The blade will lock into place when fully extended. To retract, gently push the tip of the blade toward the handle.
3. Move the Lightsaber™ through the air quickly and feel it vibrate with Force™ feedback.
4. The amazing motion sensors know if you are moving the Lightsaber™ **quickly** or **slowly**, or if you are **slicing** the air with the Lightsaber™ (see page 3 Training Exercises). It'll create different lights, sounds and vibrations corresponding to the Lightsaber™ motion!
5. Follow the simple Training Exercises (see page 3) and hear the guiding voices of Yoda™, Obi-Wan Kenobi™ and Qui-Gon Jinn™.
6. To deactivate your Lightsaber™, press both light-up keys simultaneously to power down. (It will automatically power down if the Lightsaber™ is let idle for about one minute).

CAUTION: This Lightsaber™ is a toy. NEVER swing at or hit any person, pet or breakable object. Always play in an area with ample room for a fully extended Lightsaber™. The sections of this Lightsaber™ are designed to fit tightly when fully extended. DO NOT POKE OR JAB any person, object or animal as the saber will not collapse easily.

JEDI TRAINING PROGRAM: Feel it... See it... Hear it!

This Lightsaber™ has a smart chip that monitors your training progress. As you work through your exercises, it registers the number of different maneuvers you make (slow, fast, strike). The higher the count, the faster you will progress. Once a certain number is accumulated for each maneuver, you will advance to the next level. There are 3 levels: Novice, Intermediate and Expert.

At the beginning of your training, you'll hear Jedi phrases guiding you along. Follow the 3 Training Exercises (see right side) and learn to use the Lightsaber™ properly. As you practice and become more proficient, there will be fewer guiding phrases.

You'll have reached the next level when you hear the following phrases from Jedi Master Yoda™ (right before the deactivation phrase "Remember, the Force™ will be with you, always"):

Intermediate Level - "May the Force™ be with you."

Expert Level - "You will be a Jedi."

Note: For easy portability, retract the Lightsaber™ after your training - gently push the tip of the blade toward the handle.

IMPORTANT: Shutting the power off (function selector to OFF position) will reset the Lightsaber™. This erases all your secret code and training program data and you'll have to start from the novice level again.

Helpful Hints:

1. Do NOT strike the toy against or drop it on hard surface.
2. Do NOT immerse the toy in water or play with it in a wet environment.
3. The sections of this Lightsaber™ are designed to fit tightly when fully extended. DO NOT POKE OR JAB any person, object or animal as the saber will not collapse easily.
4. This Lightsaber™ is a toy. NEVER swing at or hit any person, pet or breakable object.
5. Always play with the toy in an area with ample room for a fully extended Lightsaber™.
6. To avoid discomfort to the eyes, do not look into the light source of the saber when it is activated without being fully extended.
7. If the toy malfunctions for no apparent reason, try reinstalling the batteries or replacing all batteries with new ones.
8. Replace all batteries with new ones when the voices, sound effects, vibration or lights start to distort, slow down or dim.
9. Remove all batteries and set function selector to OFF before storing the toy away for a long period of time.

FCC Statement: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Consult the dealer or an experienced radio/TV technician for help.

TRAINING EXERCISES:

Let the voices of Yoda™, Obi-Wan Kenobi™ and Qui-Gon Jinn™ guide your training.

1.

Move the Lightsaber™ slowly in small circles as shown. Hear Lightsaber™ sound effects and occasional Jedi phrases as the Force™ flows through you.

SLOW



RROOMMM

2.

Swing the Lightsaber™ quickly from side to side as shown. Feel the Force™ feedback vibrating in the handle and hear faster paced sound effects and Jedi phrases.




VRRMMMM

3.

Slice the air quickly as shown (finish with your Lightsaber™ pointing downward). Feel the powerful Force™ feedback vibration and hear awesome battle effects and Jedi phrases!

STRIKE

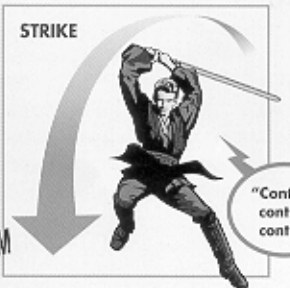

WHOOOMM

THE OFFICIAL STAR WARS™ WEB SITE
www.starwarskids.com
www.starwars.com



© 2002 Lucasfilm Ltd. & © or TM where indicated.
All Rights Reserved. Used under authorization.
© Character (tm) & © 2002 Hasbro. All Rights Reserved.
© denotes Reg.-U.S. Pat. & TM office.
www.starwars.hasbro.com