


STAR WARS®

Ages 4+
84893/84891 Asst.

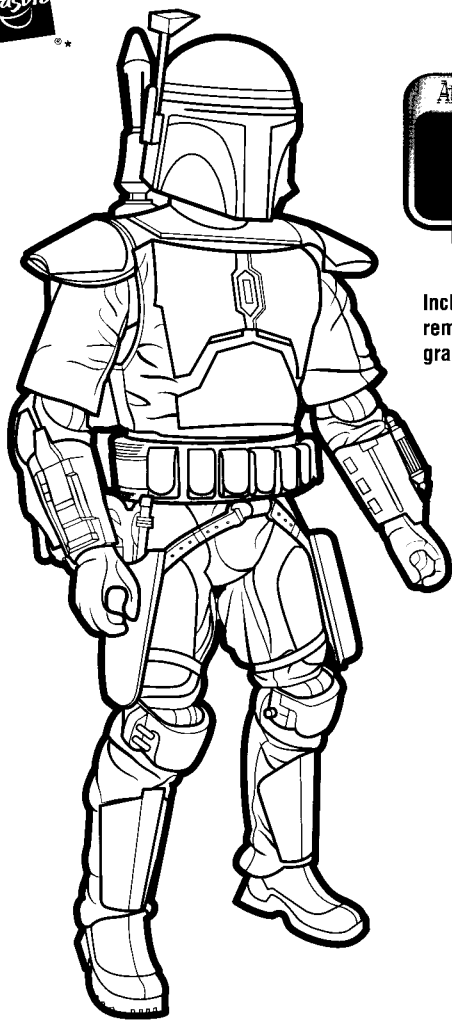

WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.


Attack of the Clones

Electronic Battling Jango Fett™

with Lights & Sounds!

Includes: figure with attached backpack,
removable helmet, 2 blasters, missile,
grappling hook with string, and instructions.

3 "AAA" batteries included. Phillips
screwdriver (not included) required
to replace batteries.






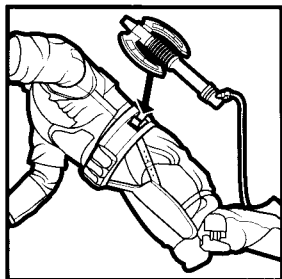


Grappling Hook:
Use loop to attach hook to belt.

Try Me Mode:







This figure comes packaged in a "try me" mode for store demonstration purposes. To use the full range of sounds and lights, move the switch (on the bottom of the backpack) to one of the "on" modes (Combat Mode or Flight Mode) -- see below for details.

Combat Mode

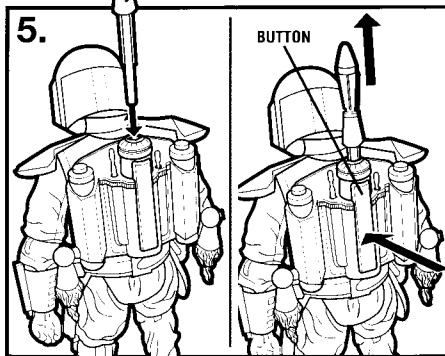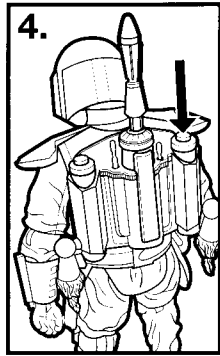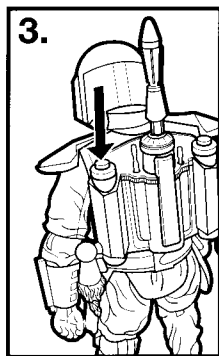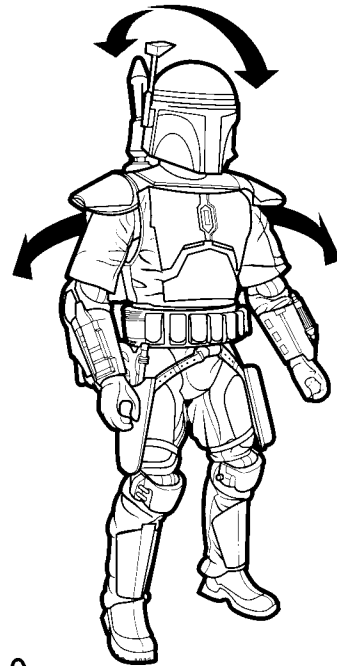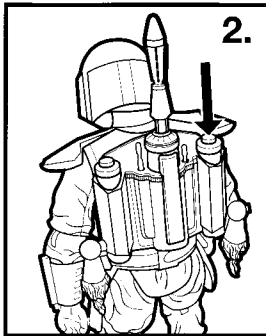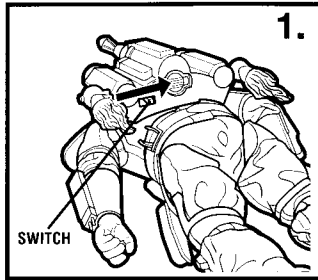



1. Slide switch to the right for Combat Mode.
2. To hear combat sounds: Press the right shoulder button. Then, move the figure to different angles (forward, back, left and right) to hear different sounds.
3. Quickly press and release the left shoulder button to hear phrases. Keep pressing and releasing button to hear all the sayings.
 "You can't stop me!"
 "Don't move, Jedi!"
 "You will not survive!"
 "You will not defeat me!"
4. Press the right shoulder button to hear blaster sounds.
5. Insert missile into backpack. Press center button to launch missile and hear missile sounds. You can press the button and hear sounds even when the missile is not in the backpack.

Flight Mode

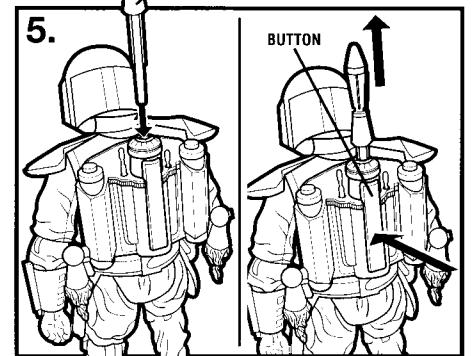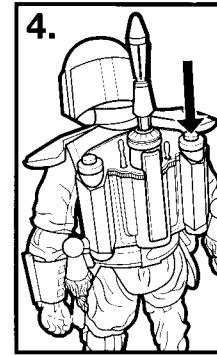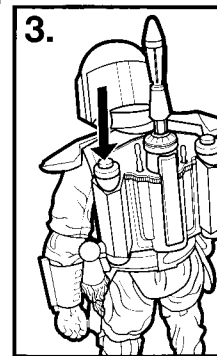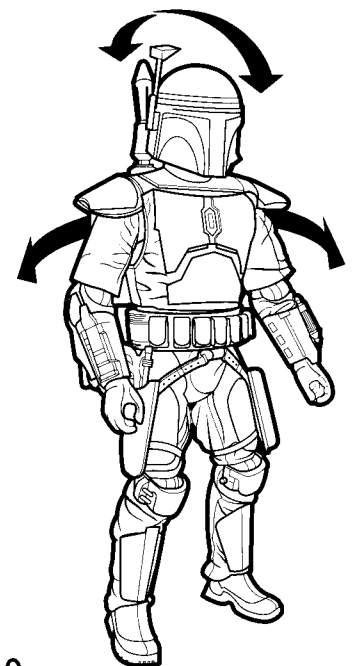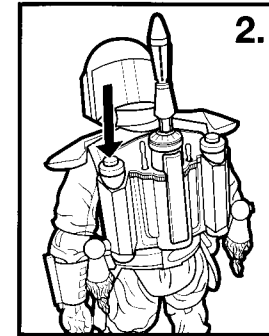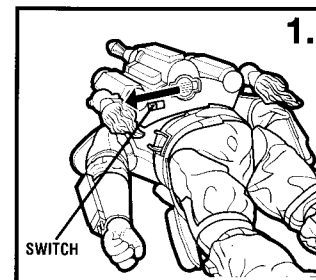

1. Slide switch to the left for Flight Mode.
2. To hear flight sounds: Press and hold the left shoulder button. Then, move the figure to different angles (forward, back, left and right) to hear different flight sounds.
3. Quickly press and release the left shoulder button to hear phrases. Keep pressing and releasing button to hear all the sayings.
 "You can't stop me!"
 "Don't move, Jedi!"
 "You will not survive!"
 "You will not defeat me!"
4. Press the right shoulder button to hear blaster sounds.
5. Insert missile into backpack. Press center button to launch missile and hear missile sounds. You can press the button and hear sounds even when the missile is not in the backpack.

To Replace
Batteries:

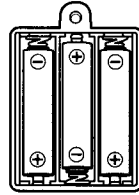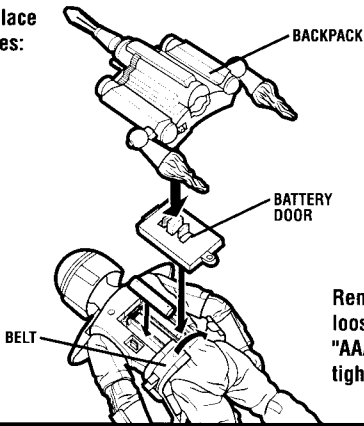

Remove backpack and belt. Using a Phillips screwdriver, loosen screw in battery door. Remove door. Insert 3 fresh "AAA" batteries into compartment. Replace door, and tighten screw. Replace backpack.

! CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- 2) Make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



Product and colors may vary.
© 2002 Lucasfilm Ltd. & © or TM where indicated. All rights reserved.
Used under authorization.
®* and/or TM* & © 2002 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.

P/N 6177290000