

# STAR WARS

Ages 4+  
84892/84891 Asst.



Attack of the Clones

## Electronic Battling Obi-Wan Kenobi™

with Light & Sounds!

Includes: figure with attached Force-effect clip, lightsaber and instructions.


3 "AAA" batteries included. Phillips screwdriver (not included) required to replace batteries.

### Try Me Mode:






This figure comes packaged in a "try me" mode for store demonstration purposes. To use the full range of sounds and lights, move the switch (on the figure's back belt pouch) to one of the "on" modes (Combat Mode or Adventure Mode) - see inside for details.

### Force-Effect Clip:

1. Pull clip out of Obi-Wan's arm.
2. Wrap cord around Electronic Jango Fett™ or another 12" Star Wars figure from Hasbro® (additional figures not included) to "capture" the figure.
3. To retract Force clip, press the button on the figure's arm (you will also hear Force sounds when you press the button).
4. You can use this feature in Combat and Adventure modes.




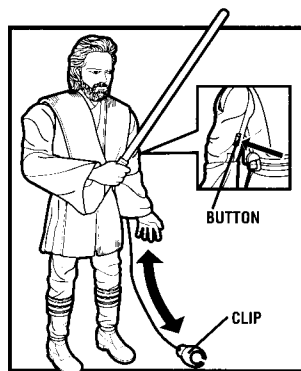


## Combat Mode

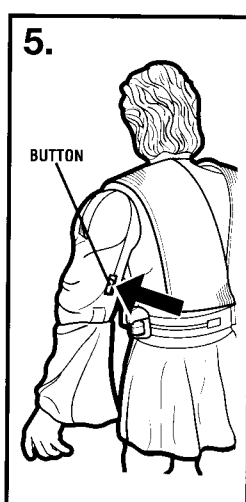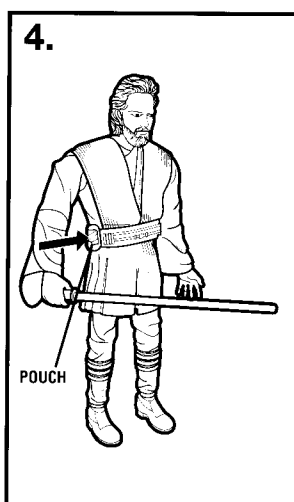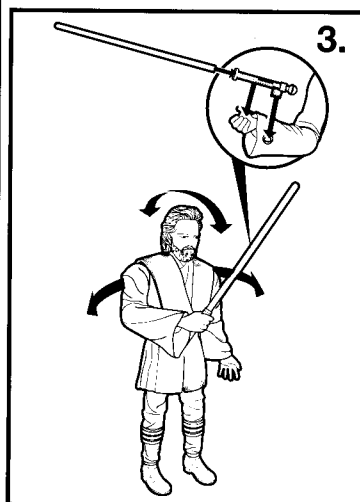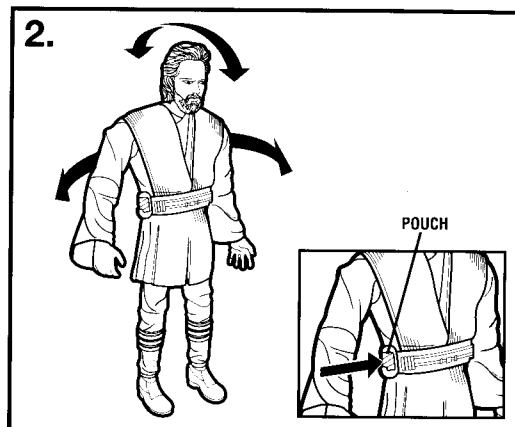
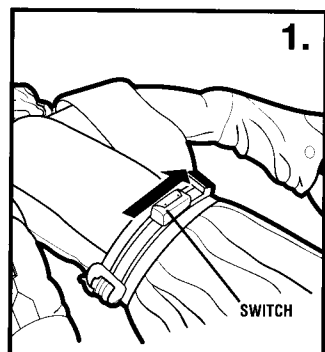


1. Slide the switch to the right for Combat Mode.
2. Move the figure to different angles (forward, backward, left and right) to hear different fight sounds. If you do not hear any sounds, slide the switch again or press the side pouch again.
3. If the lightsaber is attached to the figure's right hand, you can access lightsaber sounds. To hear the lightsaber sounds, press the side pouch for approximately one second. Then, move the figure to different angles (forward, backward, left and right) to hear different lightsaber combat sounds. To end the battle, you can remove the lightsaber from the figure's hand or press the side pouch for approximately one second.
4. Quickly press and release the side pouch to hear phrases. Keep pressing and releasing button to hear all the sayings.
  - "May the Force be with you."
  - "Give up Jango!"
  - "You're no match for a Jedi!"
  - "There is no escape!"
  - "Give up bounty hunter!"
5. Press the button on his arm to hear Force sounds. (Pressing the button also recoils the Force-effect clip cord – see "Force Effect Clip" section on first page).

## Adventure Mode

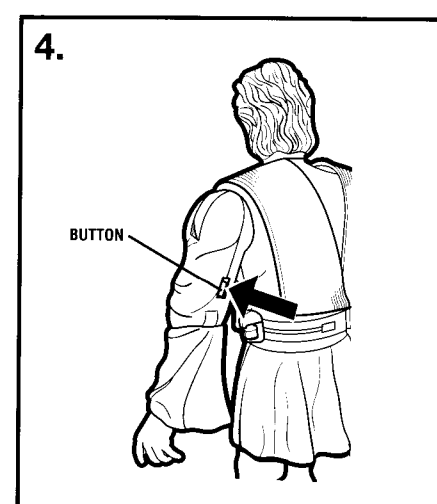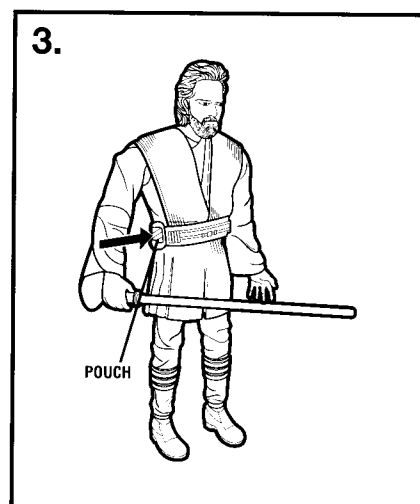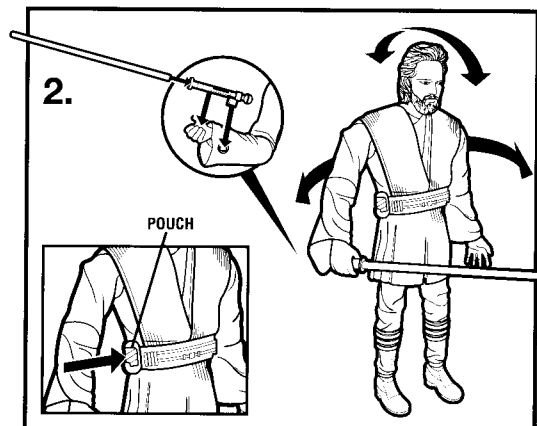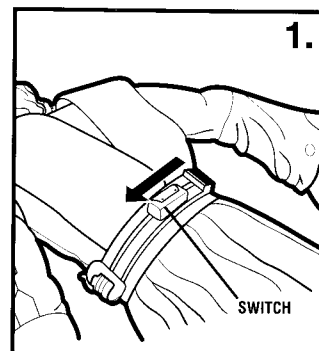

1. Slide the switch to the left for Adventure Mode.
2. Place the lightsaber in the figure's right hand. If the lightsaber is attached to the figure's right hand, you can access lightsaber sounds. To hear the lightsaber sounds, press the side pouch for approximately one second. Then, move the figure to different angles (forward, backward, left and right) to hear different lightsaber combat sounds. To end the battle, you can remove the lightsaber from the figure's hand or press the side pouch for approximately one second. NOTE: If the figure is not holding the lightsaber in his right hand when activated, you will not hear any sounds.
3. Quickly press and release the side pouch to hear phrases. Keep pressing and releasing the side pouch to hear all the sayings.
  - "May the Force be with you."
  - "Give up Jango!"
  - "You're no match for a Jedi!"
  - "There is no escape!"
  - "Give up bounty hunter!"
4. Press the button on his arm to hear Force sounds. (Pressing the button also recoils the Force-effect clip cord – see "Force Effect Clip" section on first page).

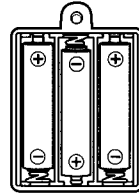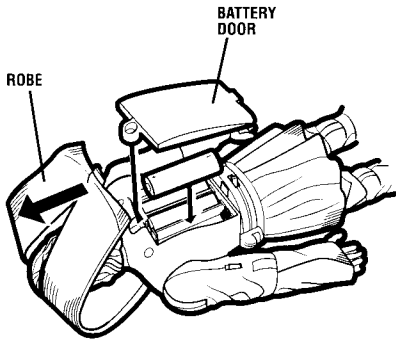

**To Replace Batteries:**  
Lift robe. Using a Phillips screwdriver, loosen screw in battery door. Remove door. Insert 3 fresh "AAA" batteries into compartment. Replace door, and tighten screw.

## CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- 2) Make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



Product and colors may vary.  
© 2002 Lucasfilm Ltd. & © or TM where indicated. All rights reserved.  
Used under authorization.  
®\* and/or TM\* & © 2002 Hasbro. All Rights Reserved.  
®\* denotes Reg. U.S. Pat. & TM Office.

P/N 617960000