

STAR WARS


AGES 6+
72410

Electronic Ask Yoda™

Ask you will, a yes or no question.

Now you have the Wisdom of the Force in your grasp. Let Yoda guide you through the ways of the Force and the questions that trouble you. Ask Yoda a “Yes” or “No” question and he will use his skills and knowledge of the Force to answer you. But be aware, the Force is always in motion. Answers may not always be what you seek, but instead what you need.

**May the Force be
with you.**

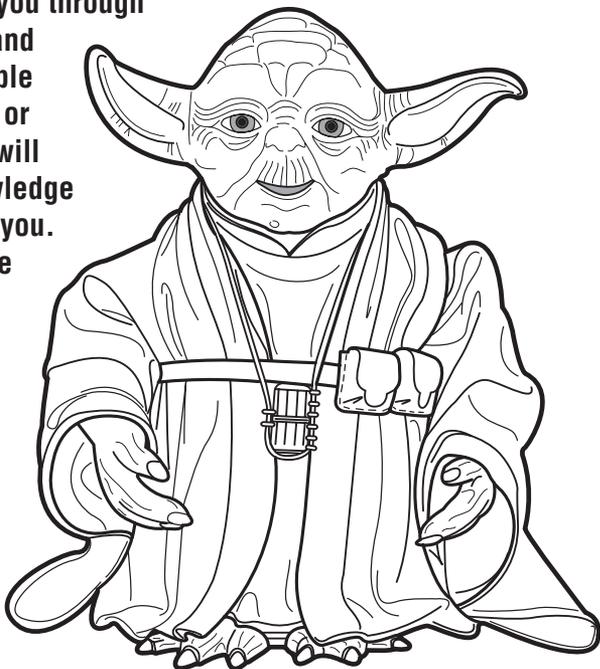

To begin playing with the *Star Wars* Electronic Ask Yoda figure, you must first install the batteries.

Batteries included. Replace with 3 x 1.5V “AA” or R6 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.

GETTING STARTED

1. To begin, squeeze Yoda's left hand to trigger play. This will wake Yoda and he will be ready to help you in your quest for answers.

"The Force and its wisdom are all around us. Ask you will a Yes or No question. Sense the Force in my left hand. Press it and answer you I will."

2. Now ask Yoda your Yes or No question.

"Will I ever become a Jedi like my father?"


3. When you have finished asking your question, squeeze Yoda's hand again to hear his response.

4. Once Yoda is awakened, you may ask him as many questions as you wish. Continue to ask your questions pressing his hand each time you are ready for his response.

5. After 2 minutes without interaction, Yoda will prompt you to see if you wish to continue to play.


"Clearing your mind are you, or another question wish you to ask?"

If another minute passes without input, Yoda will go to sleep until you wake him to play again.

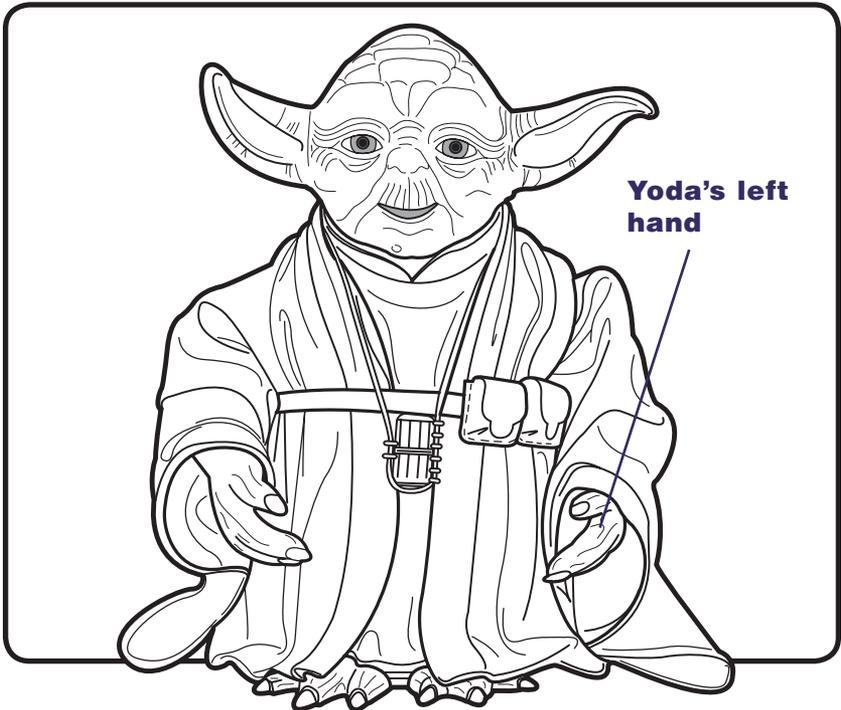

TO REPLACE BATTERIES

Using a Phillips/cross head screwdriver, loosen screw in battery compartment cover (screw stays attached to cover) on the bottom. Insert 3 X 1.5V “AA”/LR6 alkaline batteries. Replace cover and tighten screw. Ask Yoda will automatically go to sleep after 3 minutes of inactivity.

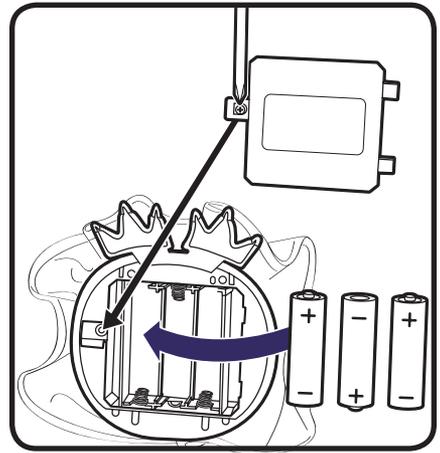

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

CLEANING INSTRUCTIONS

High temperature will destroy the unit. Do not leave unit in direct sunlight.

If the product needs to be cleaned, wipe gently with a barely damp, soft cloth.

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



TIGER
ELECTRONICS®*
Where Technology Comes to Play!™*

© 2004 Lucasfilm Ltd. & ® or TM where indicated.
All rights reserved. Used under authorization.

®* and/or TM* & © 2004 Hasbro. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

U.S. Patent 65440904.

72410

P/N 6345900000



Questions? Call: 1-800-327-8264