

# FORCE BATTLES

# STAR WARS®






## WARNING:

CHOKING HAZARD—Small parts.  
Not for children under 3 years.

## AGES 4+

85857/85179 Asst.

## GENERAL GRIEVOUS

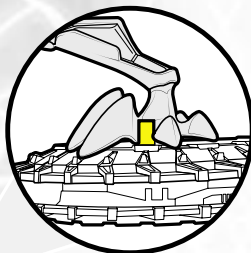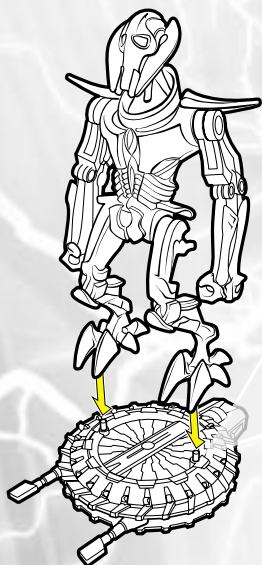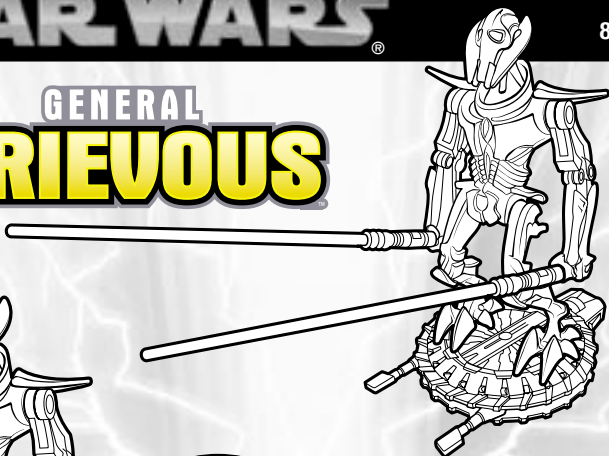

Place figure on glider.

1. Load buzz disk into glider as shown.



 
2. Press the launch button on the bottom of the glider to launch a buzz disk attack!

NOTE: Make sure buzz disk is completely inserted.



Lightsabers attach.

Remove lightsaber blades to show lightsabers in "deactivated" mode. Re-attach blades for "activated" mode.



Some poses may require additional support.  
Product and colors may vary.  
© 2005 Lucasfilm Ltd. & ® or TM where indicated. All Rights Reserved.  
®\* and/or TM\* & © 2005 Hasbro. All Rights Reserved.  
TM & © denote U.S. Trademarks.

For more toy information visit: [www.starwars.hasbro.com](http://www.starwars.hasbro.com)

P/N 652069000



[starwars.com](http://starwars.com)