

FORCES BATTLERS STAR WARS



WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 years.

AGES 4+


85357/85179 Asst.




LIGHTSABER ATTACK!

ANAKIN SKYWALKER


The hands are
interchangeable.

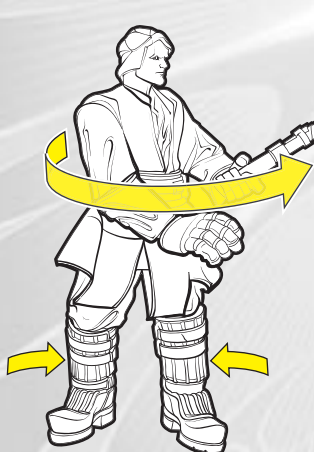

Squeeze legs together
for lightsaber attack.

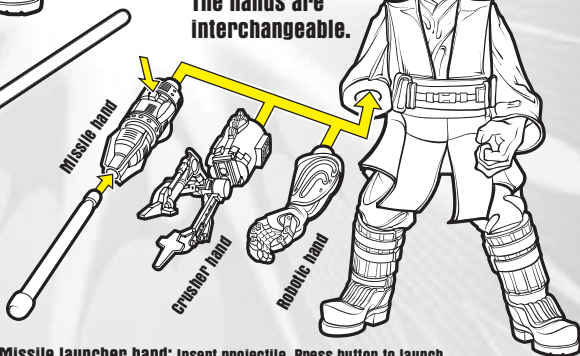

 Missile launcher hand: Insert projectile. Press button to launch.
Crusher hand: Pull apart to open. Place object in hand. Release – hand springs closed.
Robotic hand: Can hold lightsaber.



Remove lightsaber blade to show lightsaber in “deactivated” mode.
Re-attach blade for “activated” mode.



Some poses may require additional support.
Product and colors may vary.
© 2005 Lucasfilm Ltd. & © or TM where indicated. All Rights Reserved.
®* and/or TM* & © 2005 Hasbro. All rights reserved.
© denotes Reg. U.S. Pat. & TM Office.

For more toy information visit: www.starwars.hasbro.com

P/N 6449290000



starwars.com