

# STAR WARS BATTLE DIECASTS



**WARNING:**

CHOKING HAZARD—Small parts.  
Not for children under 3 years.


**AGES 4+**

85669/85179 Asst.




**WHIRLING  
LIGHTSABER  
ATTACK!**


**YODA**

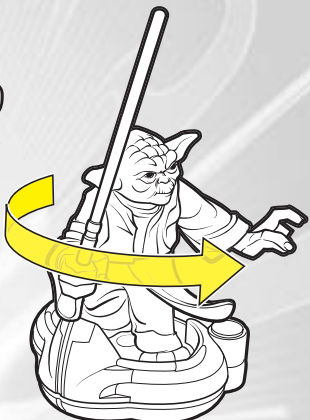

Hold lower body. Twist upper body and  
release for whirling lightsaber attack.

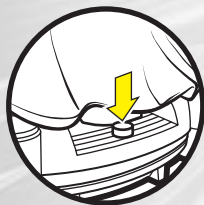

Insert missile into launcher.  
Press button to fire.

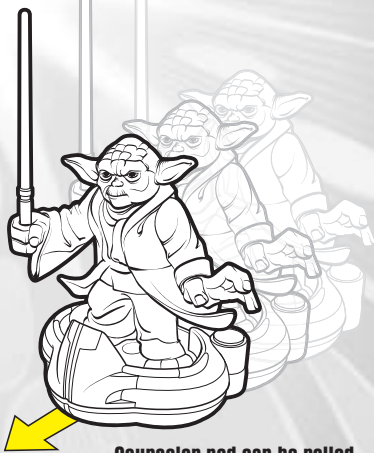

Counselor pod can be rolled  
across flat, smooth surfaces.



Remove lightsaber blade to show lightsaber in  
"deactivated" mode. Re-attach blade for "activated" mode.



Some poses may require additional support.  
Product and colors may vary.  
© 2005 Lucasfilm Ltd. & ® or TM where indicated. All Rights Reserved.  
®\* and/or TM\* & © 2005 Hasbro. All Rights Reserved.  
TM & © denote U.S. Trademarks.

For more toy information visit: [www.starwars.hasbro.com](http://www.starwars.hasbro.com)

P/N 6482440000



[starwars.com](http://starwars.com)