



CHOKING HAZARD-Small parts. Not for children under 3 years.

AGES 4+

85669/85179 Asst.



Hold lower body. Twist upper body and release for whirling lightsaber attack.





Remove lightsaber blade to show lightsaber in "deactivated" mode. Re-attach blade for "activated" mode.



Some poses may require additional support.
Product and colors may vary.
② 2005 Lucasfilm Ltd. & ⊚ or TM where indicated. All Rights Reserved.
③* and/or ™* & ◎ 2005 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.

phts Reserved.

P/N 6482440000

starwars.com