

FORCE BATTLERS STAR WARS



WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 years.

AGES 4+

85474/85179 Asst.




Squeeze legs together for
slashing lightsaber action.

FIRING JEDI GAUNTLET!


MACE WINDU™



Remove lightsaber blade to show lightsaber in "deactivated" mode.
Re-attach blade for "activated" mode.

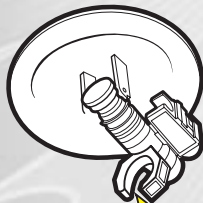

Attach gauntlet to
arm as shown.

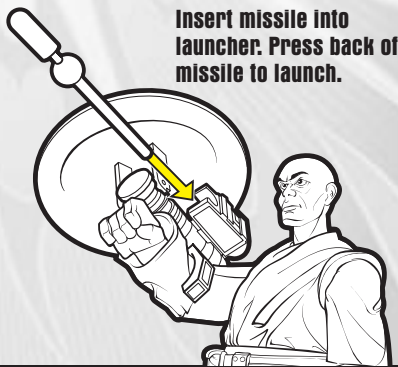

Insert missile into
launcher. Press back of
missile to launch.



Some poses may require additional support.
Product and colors may vary.
© 2005 Lucasfilm Ltd. & © or TM where indicated. All Rights Reserved.
®* and/or TM* & © 2005 Hasbro. All rights reserved.
TM & © denote Reg. U.S. Pat. & TM Office.

For more toy information visit: www.starwars.hasbro.com

P/N 6467390000



starwars.com