

# STAR WARS


REVENGE OF THE SITH™

## COUNT DOOKU™

electronic lightsaber™

AGES 4+  
85410/85187 Asst.

Requires 2 x 1.5V "C" or R14 size batteries (not included). Alkaline batteries recommended.  
Phillips/cross head screwdriver (not included) needed to insert batteries.

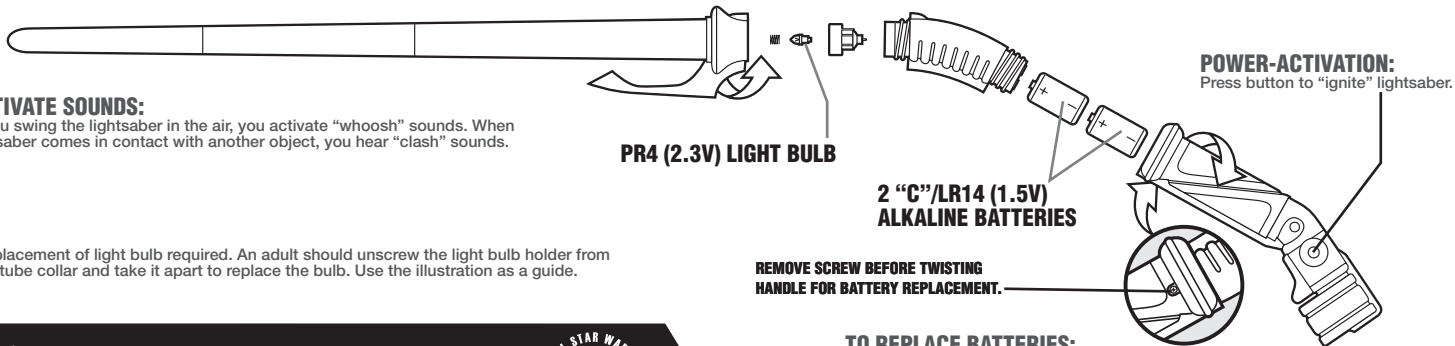

### TO ACTIVATE SOUNDS:

When you swing the lightsaber in the air, you activate "whoosh" sounds. When the lightsaber comes in contact with another object, you hear "clash" sounds.

### NOTE:

Adult replacement of light bulb required. An adult should unscrew the light bulb holder from the light tube collar and take it apart to replace the bulb. Use the illustration as a guide.

**POWER-ACTIVATION:**  
Press button to "ignite" lightsaber.

**PR4 (2.3V) LIGHT BULB**

**2 "C"/LR14 (1.5V)  
ALKALINE BATTERIES**

**REMOVE SCREW BEFORE TWISTING  
HANDLE FOR BATTERY REPLACEMENT.**

### TO REPLACE BATTERIES:

Access battery compartment as shown. Insert 2 x 1.5V "C" or R14 batteries.  
Alkaline batteries recommended.



Product and colors may vary.  
© 2005 Lucasfilm Ltd. & ® or TM where indicated.  
All rights reserved. Used under authorization.  
®\* and/or TM\* & © 2005 Hasbro.  
® denotes Reg. U.S. Pat. & TM Office.



For more toy information visit [www.starwars.hasbro.com](http://www.starwars.hasbro.com)

P/N 6437190000



## **CAUTION: TO AVOID BATTERY LEAKAGE**

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

## **IMPORTANT: BATTERY INFORMATION**

Please retain this information for future reference.

Batteries should be replaced by an adult.



## **CAUTION:**

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

### FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.